

SRF Series

Instruction Manual

© Copyright 2009 - 2012

EVERTZ MICROSYSTEMS LTD.

5288 John Lucas Drive, Burlington, Ontario L7L 5Z9

Phone: 905-335-3700

Fax: 905-335-3573

Internet: Sales: sales@evertz.com

Tech Support: service@evertz.com

Web Page: <http://www.evertz.com>

Version 0.3, January 2012

INFORMATION TO USERS IN EUROPE

NOTE

CISPR 22 CLASS A DIGITAL DEVICE OR PERIPHERAL

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to the European Union EMC directive. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

INFORMATION TO USERS IN THE U.S.A.

NOTE

FCC CLASS A DIGITAL DEVICE OR PERIPHERAL

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING

Changes or Modifications not expressly approved by Evertz Microsystems Ltd. could void the user's authority to operate the equipment.

Use of unshielded plugs or cables may cause radiation interference. Properly shielded interface cables with the shield connected to the chassis ground of the device must be used.

TABLE OF CONTENTS

1.	OVERVIEW	1
1.1.	BLOCK DIAGRAMS	2
1.2.	TYPICAL APPLICATION DIAGRAM.....	4
2.	INSTALLATION.....	5
3.	SPECIFICATIONS.....	10
3.1.	SRF1.....	10
3.2.	SRF3.....	10

Figures

Figure 1-1:	Front View of SRF3-64-1x2 Chassis	1
Figure 1-2:	Rear View of SRF3-64-1x2 Chassis	1
Figure 1-3:	1x2 Splitter / 2x1 Combiner.....	2
Figure 1-4:	1x4 Splitter / 4x1 Combiner.....	2
Figure 1-5:	1x8 Splitter / 8x1 Combiner.....	3
Figure 1-6:	1x16 Splitter / 16x1 Combiner.....	3
Figure 1-7:	128x128 L Band Matrix Using XRF6 64x64 Routers and SRF3-64-1x2 Modules	4
Figure 2-1:	Front Panel of SRF3-64-1x2 Chassis	6
Figure 2-2:	Rear Panel of SRF3-64-1x2 Chassis	6
Figure 2-3:	Front Panel of SRF3-32-1x4 Chassis	7
Figure 2-4:	Rear Panel of SRF3-32-1x4 Chassis	7
Figure 2-5:	Front Panel of SRF3-16-1x8 Chassis	8
Figure 2-6:	Rear Panel of SRF3-16-1x8 Chassis	8
Figure 2-7:	Front Panel of SRF3-8-1x16 Chassis	9
Figure 2-8:	Rear Panel of SRF3-8-1x16 Chassis	9

REVISION HISTORY

<u>REVISION</u>	<u>DESCRIPTION</u>	<u>DATE</u>
0.0	Preliminary Version	Jun 2006
0.1	Updated to SRF specs	Jul 2007
0.2	Updated front & rear panels drawings	Feb 2009
0.3	Updated SRF specs and Panel drawings	Jan 2012

Information contained in this manual is believed to be accurate and reliable. However, Evertz assumes no responsibility for the use thereof nor for the rights of third parties, which may be affected in any way by the use thereof. Any representations in this document concerning performance of Evertz products are for informational use only and are not warranties of future performance, either expressed or implied. The only warranty offered by Evertz in relation to this product is the Evertz standard limited warranty, stated in the sales contract or order confirmation form.

Although every attempt has been made to accurately describe the features, installation and operation of this product in this manual, no warranty is granted nor liability assumed in relation to any errors or omissions unless specifically undertaken in the Evertz sales contract or order confirmation. Information contained in this manual is periodically updated and changes will be incorporated into subsequent editions. If you encounter an error, please notify Evertz Customer Service department. Evertz reserves the right, without notice or liability, to make changes in equipment design or specifications.

1. OVERVIEW

The SRF series RF passive splitters and combiners provide an economical method of splitting or combining a number of RF signals in ratios of 1:2, 1:4, 1:8 or 1:16. They provide low insertion loss, high return loss, flat frequency response and high isolation between channels. They can be used for signal distribution in a RF facility, or used to expand the matrix size of Evertz Microsystems XRF1 (16x16) and XRF6 (64x64) RF routers.



Figure 1-1: Front View of SRF3-64-1x2 Chassis



Figure 1-2: Rear View of SRF3-64-1x2 Chassis

The SRF products feature RF coax connectors on both sides of the chassis for mounting on either the front or back of the rack for ease of installation and troubleshooting. They also feature an input monitoring port for troubleshooting and diagnostics in the RF plant.

The SRF1 series is housed in a 1RU frame and the SRF3 series are housed in a 3RU frame. RF specifications are dependent on the split / combine ratio. The list below includes all possible options of the SRF splitter / combiners.

SRF1 SERIES:

SRF1-16-1x2:	16-channel 1x2 splitter / 2x1 combiner
SRF1-8-1x4:	8-channel 1x4 splitter / 4x1 combiner
SRF1-4-1x8:	4-channel 1x8 splitter / 8x1 combiner
SRF1-2-1x16:	2-channel 1x16 splitter / 16x1 combiner

SRF3 SERIES:

- SRF3-64-1x2:** 64-channel 1x2 splitter / 2x1 combiner
SRF3-32-1x4: 32-channel 1x4 splitter / 4x1 combiner
SRF3-16-1x8: 16-channel 1x8 splitter / 8x1 combiner
SRF3-8-1x16: 8-channel 1x16 splitter / 16x1 combiner

1.1. BLOCK DIAGRAMS

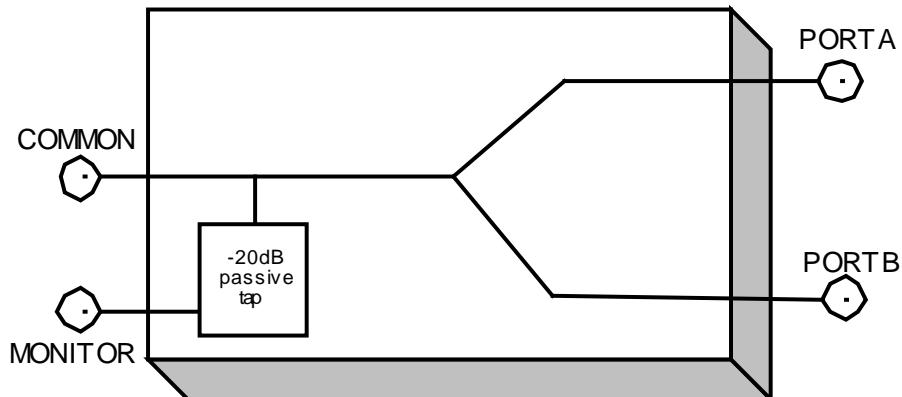


Figure 1-3: 1x2 Splitter / 2x1 Combiner

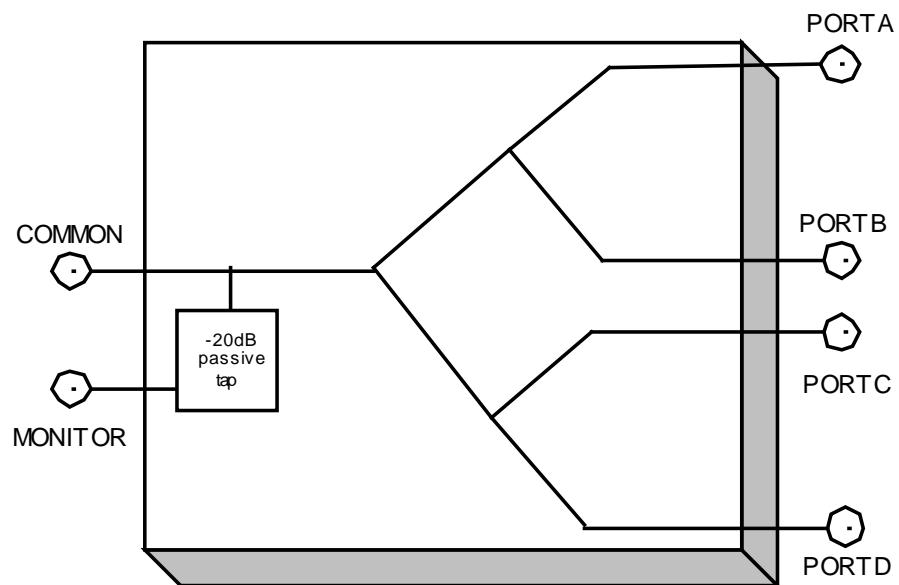


Figure 1-4: 1x4 Splitter / 4x1 Combiner

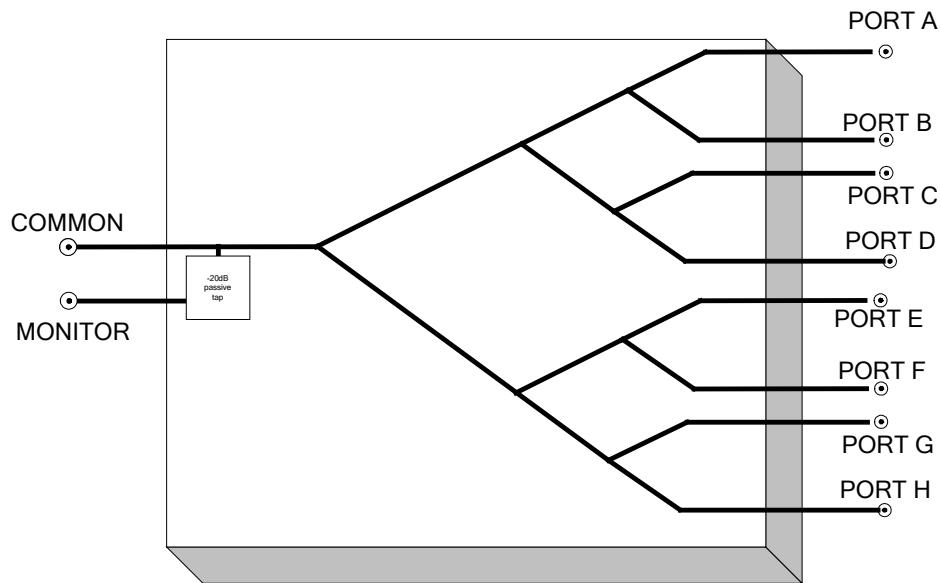


Figure 1-5: 1x8 Splitter / 8x1 Combiner

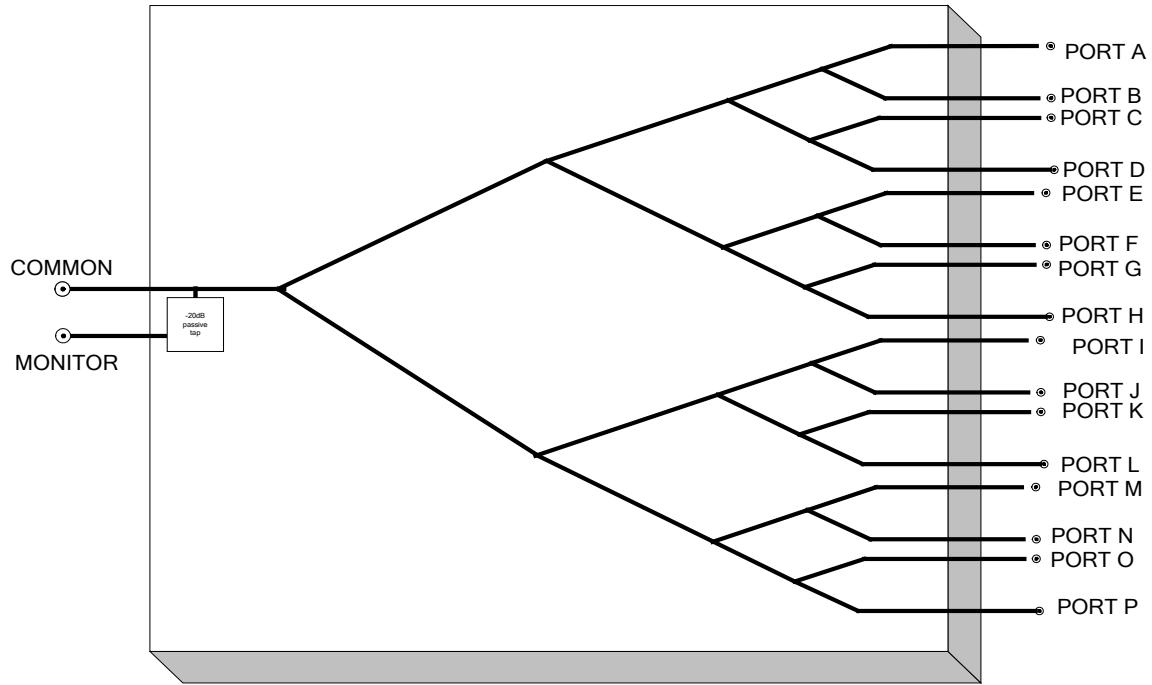
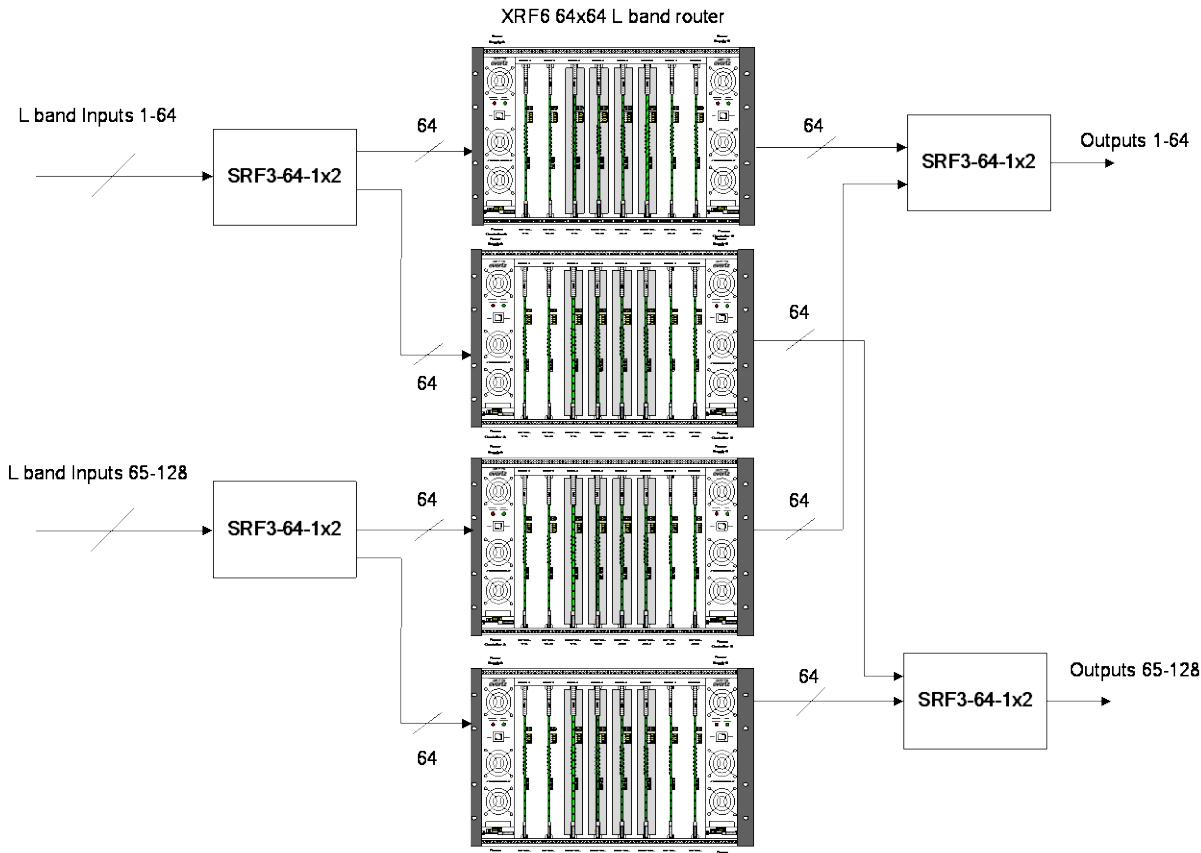


Figure 1-6: 1x16 Splitter / 16x1 Combiner

1.2. TYPICAL APPLICATION DIAGRAM

Figure 1-7 illustrates the use of four SRF3-64-1x2 modules to achieve a 128x128 router using four XRF6 L band routers. On the input side, the SRF functions as a splitter and as a combiner on the output side, allowing non-blocking routing of any input to all outputs.



**Figure 1-7: 128x128 L Band Matrix Using XRF6 64x64
Routers and SRF3-64-1x2 Modules**

2. INSTALLATION

The SRF splitters and combiners have RF coaxial connectors on the front and back side of the chassis. The common and monitoring ports are on the front of the panel. Output connectors are located on the rear side of the chassis.

The monitoring port can be used for diagnostics and monitoring. This port is a -20dB tap of the common port. Terminate this port with a 75 Ohm load when not connected.



Please note all unused ports on a channel (including monitoring ports) must be terminated with a 75 Ohm load if they are not connected. Please contact Evertz Microsystems for recommended termination suppliers.

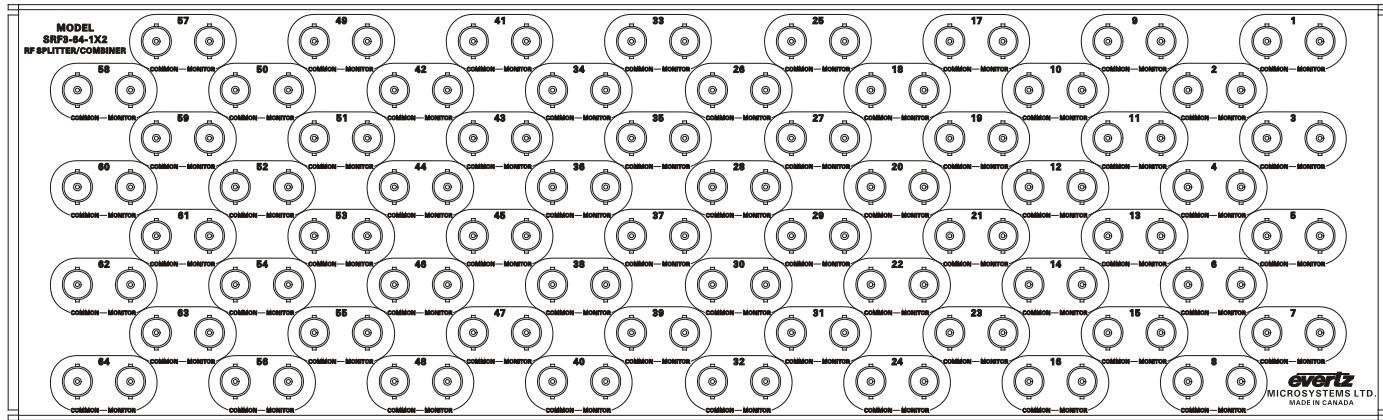


Figure 2-1: Front Panel of SRF3-64-1x2 Chassis

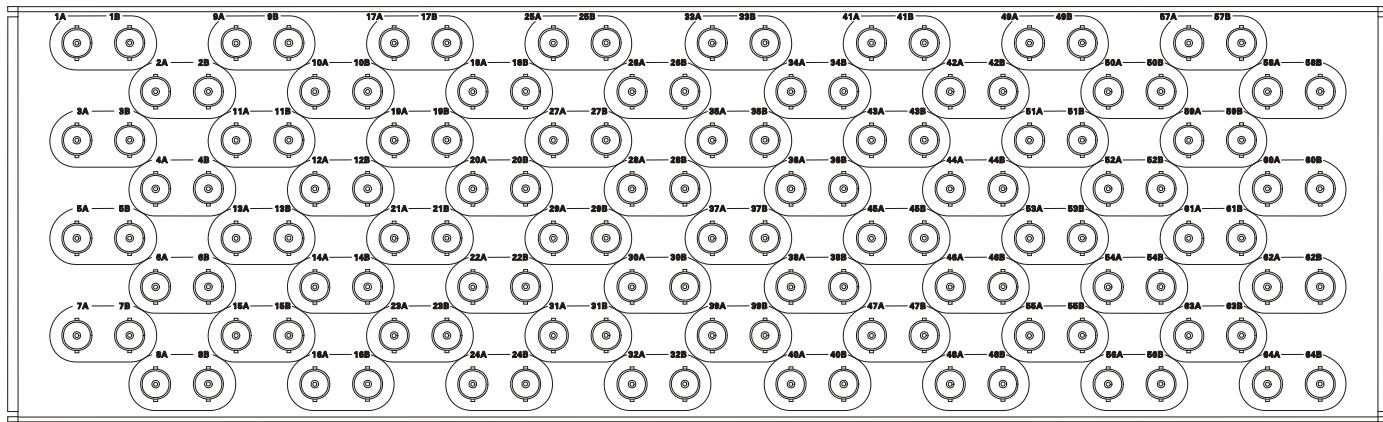


Figure 2-2: Rear Panel of SRF3-64-1x2 Chassis

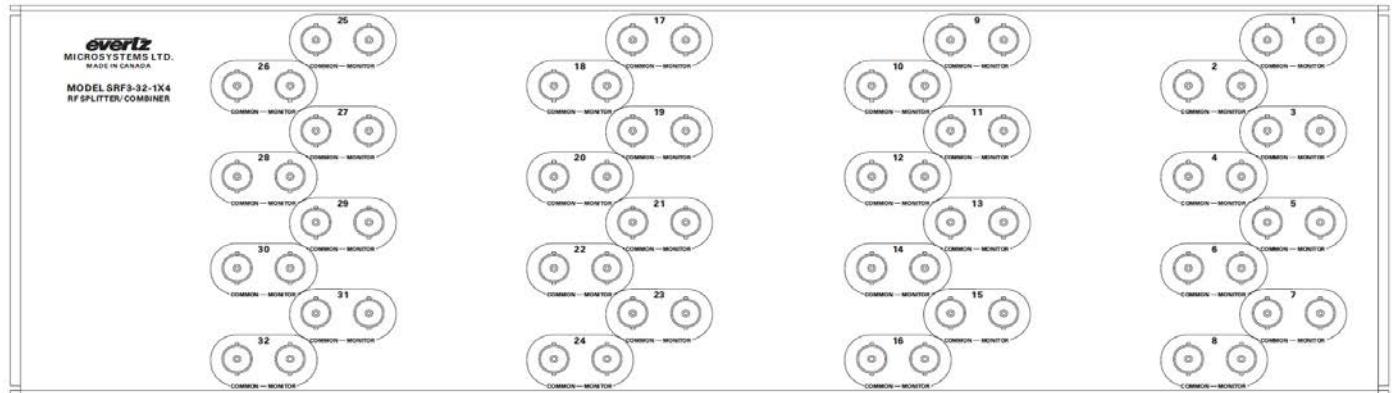


Figure 2-3: Front Panel of SRF3-32-1x4 Chassis

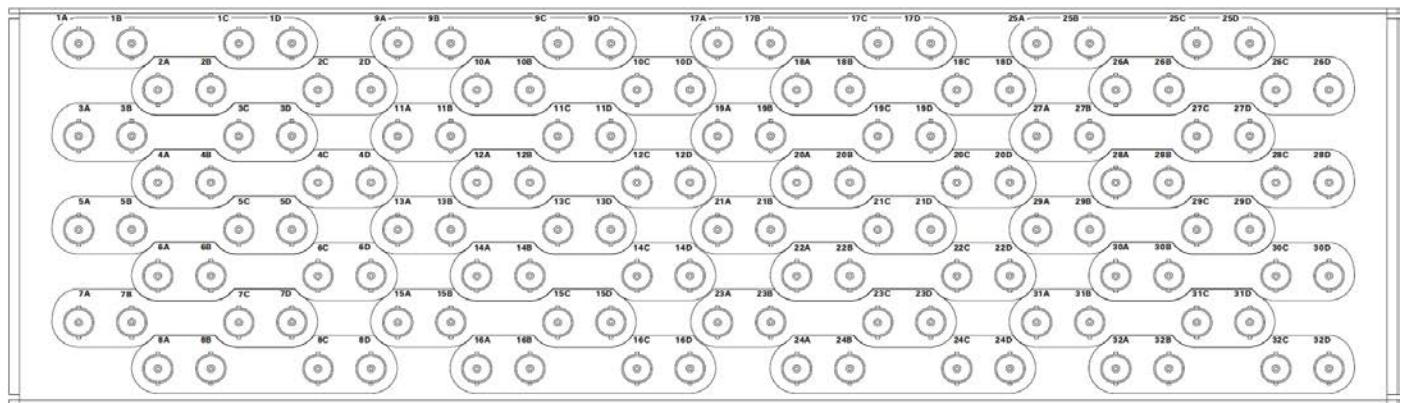


Figure 2-4: Rear Panel of SRF3-32-1x4 Chassis

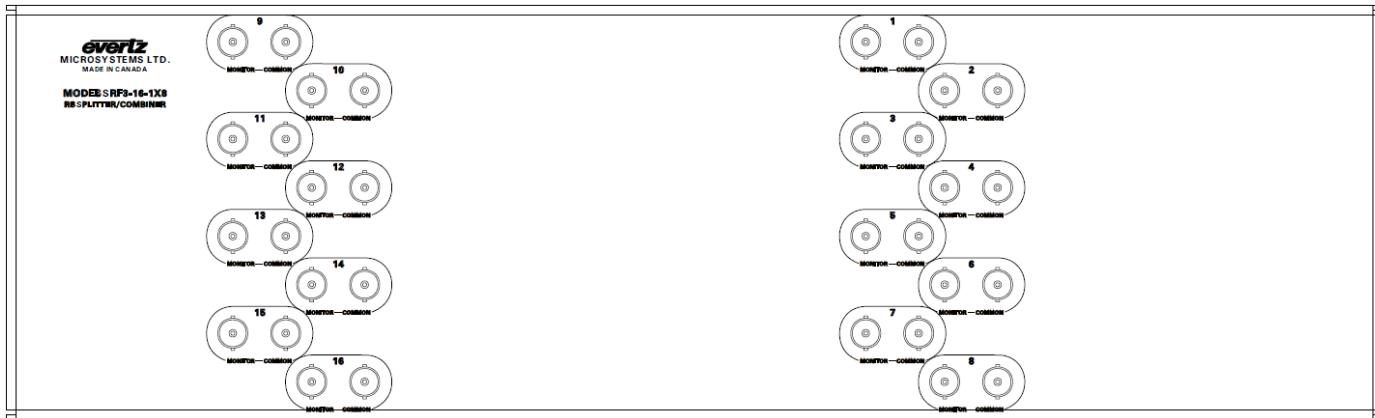


Figure 2-5: Front Panel of SRF3-16-1x8 Chassis

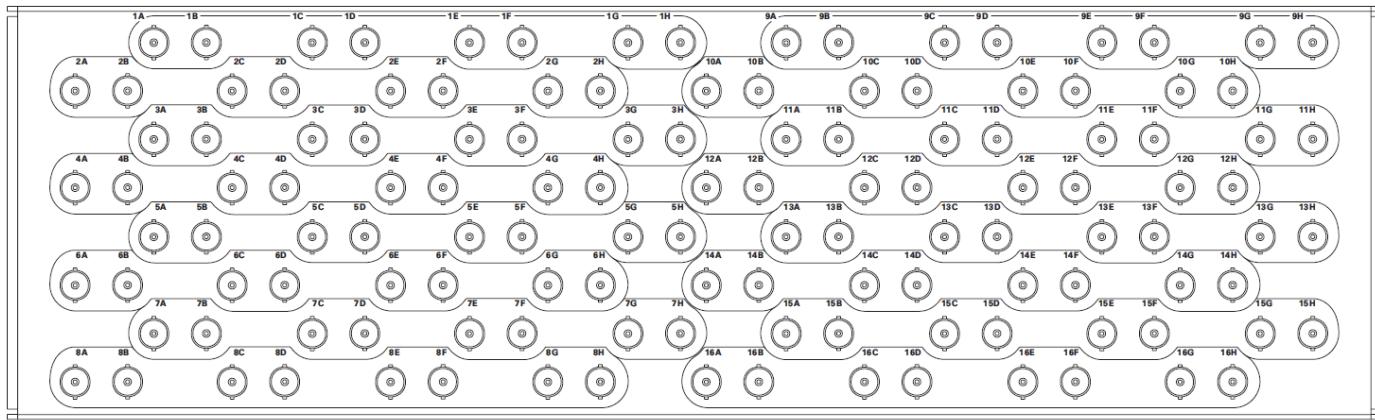


Figure 2-6: Rear Panel of SRF3-16-1x8 Chassis

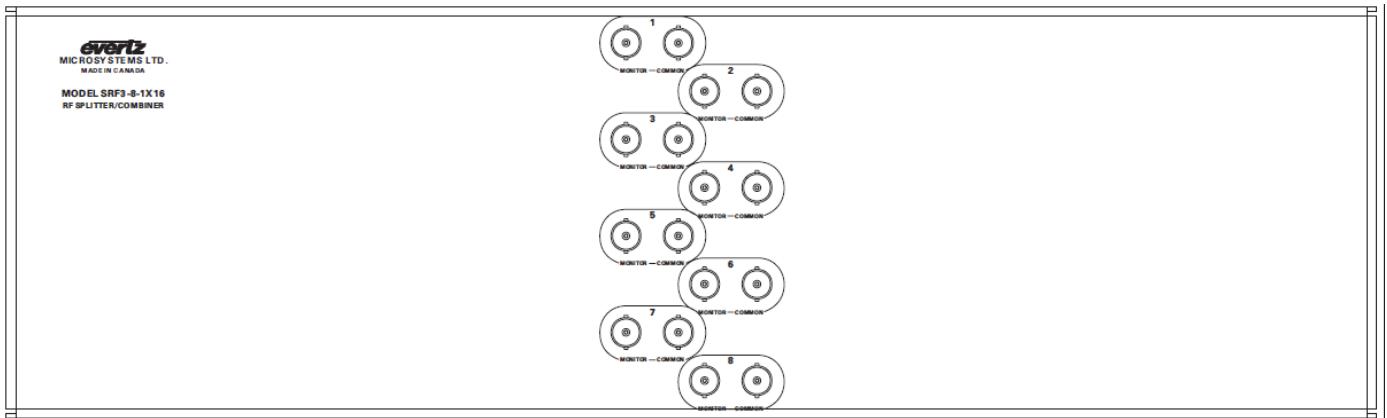


Figure 2-7: Front Panel of SRF3-8-1x16 Chassis

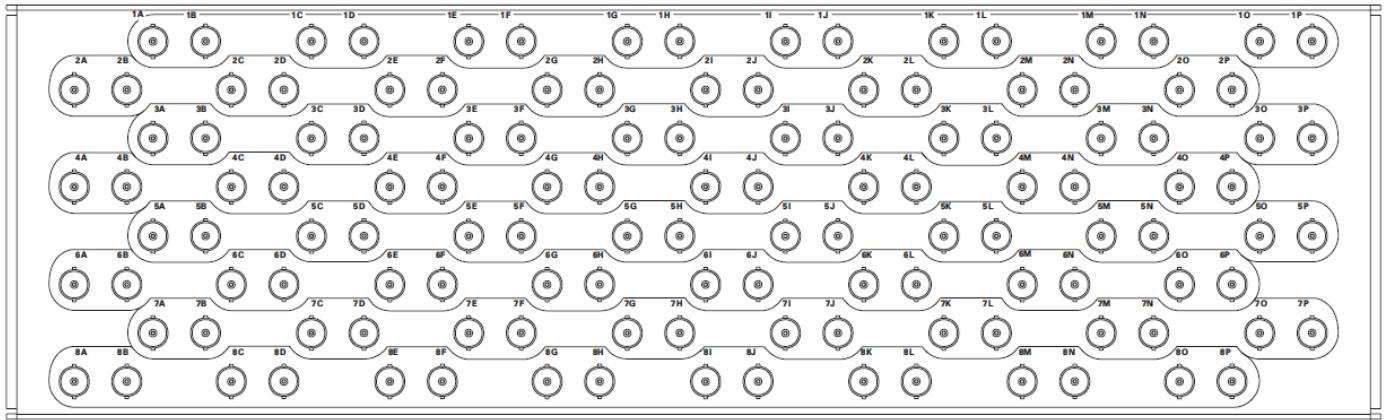


Figure 2-8: Rear Panel of SRF3-8-1x16 Chassis



SRF1 models occupy 1RU of rack space and have similar layouts but with fewer connectors than the depicted SRF3 models.

3. SPECIFICATIONS

3.1. SRF1

SRF1	SRF1-16-1x2	SRF1-8-1x4	SRF1-4-1x8	SRF1-2-1x16
Number of Channels	16 1x2's	8 1x4's	4 1x8's	2 1x16's
Frequency Range	40MHz-300MHz	40MHz-300MHz	600MHz-2200MHz	800MHz-2200MHz
Insertion Loss	4.2dB±0.5dB	7.5dB ± 0.75dB	11dB ± 1dB	14dB ± 1dB
Isolation	>60dB	>55dB	>55dB	>55dB
Return Loss(>250MHz)	>15dB	>15dB	>14dB	>14dB
Dimensions	19"Wx1.75"Hx5.5D	19"Wx1.75"Hx5.5D	19"Wx1.75"Hx9.5D	19"Wx1.75"Hx9.5D

3.2. SRF3

SRF3	SRF3-64-1x2	SRF3-32-1x4	SRF3-16-1x8	SRF3-8-1x16
Number of Channels	64 1x2's	32 1x4's	16 1x8's	8 1x16's
Frequency Range	40MHz-300MHz	40MHz-300MHz	600MHz-2200MHz	800MHz-2200MHz
Insertion Loss	4.2dB±0.5dB	7.5dB ± 0.75dB	11dB ± 1dB	14dB ± 1dB
Isolation	>60dB	>55dB	>55dB	>55dB
Return Loss(>250MHz)	>15dB	>15dB	>14dB	>14dB
Dimensions	19"Wx5.25"Hx5.5D	19"Wx5.25"Hx5.5D	19"Wx5.25"Hx9.5D	19"Wx5.25"Hx9.5D

Impedance: 75ohm

Connectors: BNC per IEC 61169-8 Annex A (F type optional)

Monitoring Output: -20dB ± 2dB relative to common port



All ports except the monitor ports are DC coupled and will pass LNB power and DiSEqC signals.