

High Density Modular Audio Router

USER MANUAL

© Copyright 2010 - 2016

EVERTZ MICROSYSTEMS LTD.

5292 John Lucas Drive
Burlington, Ontario
Canada L7L 5Z9



Phone: 905-335-3700
Sales: sales@evertz.com Fax: 905-335-3573
Tech Support: service@evertz.com Fax: 905-335-7571
Web Page: <http://www.evertz.com>

Version 1.8, February 2016

The material contained in this manual consists of information that is the property of Evertz Microsystems and is intended solely for the use of purchasers of the EMR. Evertz Microsystems expressly prohibits the use of this manual for any purpose other than the operation of the EMR. Due to ongoing research and development, features and specifications in this manual are subject to change without notice.

All rights reserved. No part of this publication may be reproduced without the express written permission of Evertz Microsystems Ltd. Copies of this manual can be ordered from your Evertz dealer or from Evertz Microsystems.

IMPORTANT SAFETY INSTRUCTIONS

	The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-insulated, dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (i.e.: servicing) instructions in the literature accompanying the product.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Don't use this apparatus near water.
- Clean only with a dry cloth.
- Don't block any ventilation openings.
- Install in accordance with the manufacturer's instructions.
- Don't install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
- Don't defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than other. A grounding-type plug has two blades and a third grounding prong. The wide blade or third prong is provided for your safety. If the plug provided does not fit into your outlet, consult an electrician to replace the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer
- Unplug this apparatus during lightning storms, or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as damage to the power-supply cord or plug, contact with liquid (or any object small enough to enter the apparatus), exposure to rain or moisture, drop damage, or upon experiencing any abnormal operation.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, **DO NOT** EXPOSE THIS APPARATUS TO RAIN OR MOISTURE

WARNING:

DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ARE PLACED ON THE EQUIPMENT

WARNING:

TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE

WARNING:

THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE

WARNING



Never look directly into an optical fiber. Irreversible eye damage can occur in a matter of milliseconds.

INFORMATION FOR USERS IN EUROPE

This equipment with the CE marking complies with the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European standards:

- EN60065 Product Safety
- EN55103-1 Electromagnetic Interference Class A (Emission)
- EN55103-2 Electromagnetic Susceptibility (Immunity)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to the European Union EMC directive. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

INFORMATION FOR USERS IN THE U.S.A.

FCC Class A Digital Device or Peripheral

This equipment has been tested and found to comply with the regulations for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

WARNING

Changes or modifications not expressly approved by Evertz Microsystems Ltd. could void the user's authority to operate the equipment.

Use of unshielded plugs or cables may cause radiation interference. Properly shielded interface cables with the shield connected to the chassis ground of the device must be used.

REVISION HISTORY

<u>REVISION</u>	<u>DESCRIPTION</u>	<u>DATE</u>
0.1	Preliminary Release	Aug 2010
1.0	First Release	Sep 2010
1.1	Removed references to 3000PS-FM and 3000PS-QT-FM. Updates made in sections 2.2 & 2.3.	Nov 2010
1.2	Corrections made to Delay (+DLY) section	Nov 2010
1.3	Added EMR-ADMX-16X16, EMR-IP16-MADI, EMR-OP16-MADI. Added more information for LTC and data port routers. Updated VistaLINK® Screens and descriptions.	Oct 2011
1.3.1	Updated Electrical specification	May 2013
1.4	Updates throughout	Aug 2013
1.5	Added EMR-ADMX-16X16/A and EMR-ADMX-48X48	Dec 2013
1.6	Added Section 9: Appendix A – ADMX-16X16A and ADMX-48X48 Redundancy Setup	Jan 2014
1.7	Updated Images	Jun 2015
1.8	Added EMR-IO8-MADI Updated EMR- ADMX-16X16A and ADMX-48X48 Redundancy Setup	Feb 2016

Information contained in this manual is believed to be accurate and reliable. However, Evertz assumes no responsibility for the use thereof, nor for the rights of third parties, which may be affected in any way by the use thereof. Any representations in this document concerning performance of Evertz products are for informational use only and are not warranties of future performance, either expressed or implied. The only warranty offered by Evertz in relation to this product is the Evertz standard limited warranty, stated in the sales contract or order confirmation form.

Although every attempt has been made to accurately describe the features, installation and operation of this product in this manual, no warranty is granted nor liability assumed in relation to any errors or omissions unless specifically undertaken in the Evertz sales contract or order confirmation. Information contained in this manual is periodically updated and changes will be incorporated into subsequent editions. If you encounter an error, please notify Evertz Customer Service department. Evertz reserves the right, without notice or liability, to make changes in equipment design or specifications.

EMR User's Guide

High Density Modular Audio Router (AES, Analog, MADI, TimeCode, Data)



This page left intentionally blank

TABLE OF CONTENTS

1. OVERVIEW	1
1.1. FEATURES & BENEFITS.....	2
1.2. SIGNAL TYPES	2
2. COMPONENT OVERVIEW	3
2.1. EMR FRAME	3
2.2. EMR I/O MODULES.....	6
2.2.1. EMR-IP96 (48)-AESU (B) AES Audio Input Module.....	6
2.2.1.1. Unbalanced AES Input Rear Panel.....	7
2.2.1.2. Balanced AES Input Rear Panel.....	9
2.2.1.3. Balanced AES Input D50 Connector – Pin Out.....	10
2.2.1.4. Front Card Edge Controls and LEDs	11
2.2.1.5. Configuration and Monitoring Menu	12
2.2.2. EMR-OP96 (48)-AESU (B) AES Audio Output Module	13
2.2.2.1. Unbalanced AES Output Rear Panel.....	13
2.2.2.2. Balanced AES Output Rear Panel.....	15
2.2.2.3. Balanced AES Output D50 Connector – Pin Out	16
2.2.2.4. Front Card Edge Controls and LEDs	17
2.2.2.5. Configuration and Monitoring Menu	18
2.2.3. EMR-IP48-AA Analog Audio Input Module.....	23
2.2.3.1. Analog Audio D50 Connector – Pin Out	25
2.2.3.2. Front Card Edge Controls and LEDs	25
2.2.3.3. Configuration and Monitoring Menu	27
2.2.4. EMR-OP48-AA Analog Audio Output Module	28
2.2.4.1. Analog Audio D50 Connector – Pin Out	30
2.2.4.2. Front Card Edge Controls and LEDs	31
2.2.4.3. Configuration and Monitoring Menu	32
2.2.5. EMR-ADMX-16X16/A, EMR-ADMX-48X48 and 3000ADMX-16X16 Crosspoint Modules.....	38
2.2.5.1. Front Card Edge Controls and LEDs	39
2.2.5.2. EMR-ADMX-48X48 and EMR-ADMX-16X16A User Commands:	40
2.2.6. EMR-IP16-MADI and 3000MADI16-TDM4 MADI Input Modules	41
2.2.6.1. Front Card Edge Controls and LEDs	42
2.2.6.2. Configuration and Monitoring Menu	43
2.2.7. EMR-OP16-MADI and 3000TDM4-MADI16 MADI Output Modules	43
2.2.7.1. Front Card Edge Controls and LEDs	45
2.2.7.2. Configuration and Monitoring Menu	46
2.2.8. EMR-IP96 (48)-LTC Time Code Input Module	46
2.2.8.1. LTC Input D50 Connector – Pin Out	48
2.2.8.2. Front Card Edge Controls and LEDs	49
2.2.8.3. Configuration and Monitoring Menu	50
2.2.9. EMR-OP96 (48)-LTC TimeCode Output Module.....	51
2.2.9.1. LTC Output D50 Connector – Pin Out	53
2.2.9.2. Front Card Edge Controls and LEDs	54

2.2.9.3. Configuration and Monitoring Menu.....	55
2.2.10. EMR-PR48 Data Module	57
2.2.10.1. Data Port D50 Connector – Pin Out	59
2.2.11. EMR-PR48-A Data Module.....	65
2.2.11.1. Learn Modes	65
2.2.11.2. Special Modes.....	66
2.2.11.3. Configuration and Monitoring Menu.....	67
2.2.11.4. Status Signal.....	68
2.2.11.5. Data Port D50 Connector – Pin Out	68
2.2.11.6. Multicard Systems.....	73
2.2.11.7. Front Card Edge Control and LEDs.....	78
2.2.12. EMR-IO8-MADI	80
2.3. INSTALLING AND REMOVING THE MODULES	82
2.3.1. Installing the Module Rear Plate	82
2.3.2. Opening and Closing the Front Panel	82
2.3.3. Installing a Module.....	83
2.3.4. Removing a Module.....	83
2.4. MOUNTING	83
2.5. COOLING	83
2.5.1. Fan Exhaust	84
2.6. SERVICING INSTRUCTIONS.....	84
2.6.1. Changing the Fuses.....	84
2.6.2. Replacing the Power Supply	85
2.7. POWER	87
2.7.1. Connecting the Power	87
2.7.2. Turning the Power On and Off	88
2.7.3. Power Supply Status Indicators	88
2.8. FRAME STATUS FAULT CONDITIONS	89
2.9. CARE AND HANDLING OF OPTICAL FIBER.....	90
2.9.1. Safety 90	
2.9.2. Assembly.....	90
2.9.3. Labeling 90	
2.9.4. Handling and Connecting Fibers.....	91
3. SPECIFICATIONS.....	93
3.1. EMR SPECIFICATIONS	93
3.1.1. Configuration	93
3.1.2. Audio Inputs - AES	93
3.1.2.1. Balanced Version	93
3.1.2.2. Unbalanced Version.....	93
3.1.3. Audio Outputs - AES.....	93
3.1.3.1. Balanced Version	93
3.1.3.2. Unbalanced Version	94
3.1.4. Analog Audio	94

3.1.5.	Analog to Digital Conversion.....	94
3.1.6.	Digital to Analog Conversion.....	94
3.1.7.	Data Input Port	95
3.1.8.	Data Output Port.....	95
3.1.9.	LTC Reader	95
3.1.10.	LTC Generator.....	95
3.1.11.	Switching Reference.....	95
3.1.12.	Control	95
3.1.13.	Electrical	95
3.1.14.	Physical	96
3.2.	3000FC FRAME CONTROLLER MODULE	97
3.2.1.	Specifications	97
3.2.1.1.	Ethernet	97
3.2.1.2.	Serial Communications.....	97
3.2.1.3.	Electrical	97
3.3.	EMX-FC FRAME CONTROLLER MODULE	98
3.3.1.	Specifications	98
3.3.1.1.	Ethernet	98
3.3.1.2.	Serial Communications.....	98
3.3.1.3.	Electrical	98
4.	SYSTEM OVERVIEW	99
4.1.	INTEGRATED AUDIO ROUTING	99
4.1.1.	Audio Components Connected	99
4.1.2.	Connecting to EQX for Embedded Audio Embedding/De-embedding	101
4.1.3.	Referencing the Audio Routing System	103
4.1.4.	Cable Length Limitations	103
4.1.5.	Optional Audio Features	105
4.1.5.1.	Sample Rate Conversion (+SRC).....	105
4.1.5.2.	Signal Processing (+DSP).....	105
4.1.5.3.	Delay (+DLY).....	105
4.1.5.4.	Advanced Monitoring (+AM)	106
4.2.	TIME CODE ROUTING	107
4.2.1.	Configuring the LTC Router	108
4.2.2.	Referencing the LTC Router	109
4.3.	DATA PORT ROUTING	109
4.3.1.	Configuring the Data Port Router	110
4.3.2.	Referencing	110
5.	WHAT IS VISTALINK®?	111
5.1.	EMR AUDIO VISTALINK® PARAMETERS.....	112
5.1.1.	General VistaLINK® Parameters for EMR Audio	112
5.1.1.1.	General VistaLINK® Control Parameters	113
5.1.1.2.	General VistaLINK® Monitor Parameters	113
5.1.1.3.	General VistaLINK® Audio Traps.....	114
5.1.2.	Audio Channel Control VistaLINK® Parameters for Audio EMR	114

5.1.2.1.	Audio Channel Control VistaLINK [®] Control Parameters	115
5.1.2.2.	Audio Channel Control VistaLINK [®] Monitor Parameters	116
5.1.3.	Audio Channel Processing VistaLINK [®] Parameters for Audio EMR	116
5.1.3.1.	Audio Channel Processing VistaLINK [®] Control Parameters	118
5.1.4.	Audio Pair Control VistaLINK [®] Parameters for Audio EMR	118
5.1.4.1.	Audio Pair Control VistaLINK [®] Control Parameters	119
5.1.5.	Audio Channel Fault Definitions VistaLINK [®] Parameters for Audio EMR	119
5.1.5.1.	Audio Channel Fault Definitions VistaLINK [®] Control Parameters	120
5.1.5.2.	Audio Channel Fault Definitions VistaLINK [®] Traps	120
5.1.6.	Audio Pair Fault Definitions VistaLINK [®] Parameters for Audio EMR	120
5.1.6.1.	Audio Pair Fault Definitions VistaLINK [®] Control Parameters	121
5.1.6.2.	Audio Pair Fault Definitions VistaLINK [®] Traps	122
5.1.6.3.	Audio Bar Graphs in VistaLINK [®]	122
5.2.	EMR DATA PORT VISTALINK[®] PARAMETERS	123
5.2.1.	Port Configuration VistaLINK [®] Parameters for EMR Data Port	123
5.2.1.1.	Port Configuration VistaLINK [®] Control Parameters	123
5.2.1.2.	Port Configuration VistaLINK [®] Monitor Parameters	123
6.	EMR CONFIGURATION WITH MAGNUM	125
6.1.	EMR INTEGRATED AUDIO ROUTING	125
6.1.1.	Configuration Using Magnum	125
6.1.2.	Adding EMR Audio Modules to Magnum	125
6.1.3.	Adding EQX Embedding and De-Embedding Modules to Magnum	127
6.1.4.	Interfacing All EMR Audio Modules	128
6.2.	TIME CODE ROUTING	129
6.3.	DATA PORT ROUTING	130
7.	MODULE UPGRADES	131
7.1.	NETWORKING FUNDAMENTALS (FTP UPGRADE PROCESS)	131
7.2.	UPGRADING THE APPLICATION CODE	131
7.2.1.	FTP Upgrade Method	131
7.2.2.	Serial Upload Method	132
7.2.3.	Upgrading 3000FC and EMX-FC Application Code	134
7.2.3.1.	FTP Upgrade Method	134
7.2.3.2.	Serial Upgrade Method	135
8.	TROUBLESHOOTING THE EMR	137
8.1.	TDM CONNECTIONS	137
8.1.1.	Verifying TDM Connections to the EMR-ADMX	137
8.1.2.	Verifying TDM Connections to the EMR Output Modules	137
8.1.3.	Verifying TDM Connections to the EQX Embedder and EMR-OP16-MADI Modules	137
8.2.	REFERENCES	138
8.2.1.	Verifying Reference to the EMR Modules	138

8.2.2.	Verifying Reference to the EMR-OP16-MADI	138
8.2.3.	Verifying Reference to the EQX De-Embedder and Embedder Modules.....	138
8.3.	SIGNALS	138
8.3.1.	Verifying Input Signals to EMR Modules	138
8.3.2.	Verifying Output Signals from EMR Modules	139
8.3.3.	Verifying Input Signals to the EMR-IP16-MADI	139
8.4.	MAGNUM CONFIGURATION.....	139
8.4.1.	Verifying Tieline Definitions.....	139
8.4.2.	Verifying Source Availability.....	139
8.5.	TROUBLESHOOTING CHECKLIST.....	139
9.	APPENDIX A - ADMX-16X16A AND ADMX-48X48 REDUNDANCY SETUP	141
9.1.	OVERVIEW.....	141
9.2.	MINIMUM REQUIREMENT.....	141
9.3.	ADMX CONFIGURATION.....	142
9.3.1.	Checking The Firmware Version.....	142
9.3.2.	Checking or Setting The IP addresses.....	143
9.3.3.	Upgrading The Module	143
9.4.	EMX-FC CONFIGURATION	143
9.5.	EMX-FC TCP PROXY CONFIGURATION	145
9.5.1.	Setting TCP Proxy on the Left EMX-FC.....	145
9.5.2.	Setting TCP Proxy on the Right EMX-FC.....	146
9.6.	EMX-FC UPGRADE.....	148
9.7.	MAGNUM SERVER CONFIGURATION	148
9.8.	USEFUL COMMANDS.....	150

FIGURES

Figure 2-1:	3000FR Rear View	4
Figure 2-2:	EMX6-FR Rear View	5
Figure 2-3:	EMX3-FR Rear View	5
Figure 2-4:	EMR-IP96 (48)-AESU Rear Plate.....	7
Figure 2-5:	EMR-IP96 (48)-AESB Rear Plate.....	9
Figure 2-6:	EMR-IP96 (48)-AESU (B) Front Card Edge	11
Figure 2-7:	EMR-OP96 (48)-AESU Rear Plate.....	14
Figure 2-8:	EMR-OP96 (48)-AESB Rear Plate.....	15
Figure 2-9:	EMR-OP96 (48)-AESU (B) Front Card Edge	17
Figure 2-10:	Basic EMR AESB Setup with ADMX-48x48.....	20
Figure 2-11:	Basic EMR AESB Setup with ADMX-16X16/A.....	21
Figure 2-12:	Basic EMR AESB Setup with ADMX.....	22
Figure 2-13:	EMR-IP48-AA Rear Plate	24

Figure 2-14: EMR-IP48-AA Front Card Edge	26
Figure 2-15: EMR-OP48-AA Rear Plate	29
Figure 2-16: EMR-OP48-AA Front Card Edge	31
Figure 2-17: Basic EMR-AA Setup with 3000 ADMX	34
Figure 2-18: Basic EMR-AA Setup with ADMX-48X48	35
Figure 2-19: Basic EMR-AA Setup without ADMX-16X16/A	36
Figure 2-20: Basic EMR-AA Setup without ADMX	37
Figure 2-21: EMR-ADMX-16X16/A (left), EMR-ADMX-48X48 (center) and 3000ADMX-16X16 (right)	38
Figure 2-22: From left to right EMR-ADMX-48X48, EMR-ADMX-16X16A, EMR-ADMX-16X16 and 3000ADMX-16X16) Front Card Edges	39
Figure 2-23: EMR-IP16-MADI (left) and 3000MADI16-TDM4 (right) Rear Plates	41
Figure 2-24: EMR-IP16-MADI (left) and 3000MADI16-TDM4 (right) Front Card Edges	42
Figure 2-25: EMR-OP16-MADI (left) and 3000TDM4-MADI16 (right) Rear Plates	44
Figure 2-26: EMR-OP16-MADI (left) and 3000TDM4-MADI16 (right) Front Card Edges	45
Figure 2-27: EMR-IP96 (48)-LTC Rear Plate	47
Figure 2-28: EMR-IP96 (48)-LTC Front Card Edge	49
Figure 2-29: EMR-OP96 (48)-LTC Rear Plate	52
Figure 2-30: EMR-OP96 (48)-LTC Front Card Edge	54
Figure 2-31: Basic LTC Setup with ADMX-48X48	56
Figure 2-32: Basic LTC Setup without ADMX	57
Figure 2-33: EMR-PR48 Rear Plate	58
Figure 2-34: Data Port Pin-Out	59
Figure 2-35: EMR-PR48 Front Card Edge	62
Figure 2-36: Basic 2x EMR Port Router Setup	64
Figure 2-37: Data Port D50 Connector – Pin Out	69
Figure 2-38: Example System Connections	72
Figure 2-39: EMR-PR48-A Rear Plate	77
Figure 2-40: EMR-PR48-A Front Card Edge	79
Figure 2-41 : EMR-IO8-MADI Rear Plate	80
Figure 2-42 : Front Card Edge of EMR-IO8-MADI	81
Figure 2-43: Locating the Power Supply Mounting Screw	86
Figure 2-44: Connecting the Power to the Frame	87
Figure 2-45: Power Supply Status Indicators	88
Figure 2-46: Reproduction of Laser Certification and Identification Label	90
Figure 4-1: EMR Audio Connected with MADI Interface	99
Figure 4-2: EMR Audio Connected with TDM Interface	100
Figure 4-3: EQX and EMR Interconnection	102
Figure 4-4: TDM Cable Length Limitations	104
Figure 4-5: Audio Processing Signal Flow	106
Figure 4-6: 96x96 LTC Configuration	107
Figure 4-7: 288x288 LTC Configuration	108
Figure 4-8: 96 Port Configuration	110
Figure 5-1: VistaLINK® General Tab for EMR Audio	112
Figure 5-2: VistaLINK® Audio Channel Control Tab for EMR Audio	114
Figure 5-3: VistaLINK® Audio Channel Processing Tab for EMR Audio	117
Figure 5-4: VistaLINK® Audio Pair Control Tab for EMR Audio	118
Figure 5-5: VistaLINK® Audio Channel Fault Definitions Tab for EMR Audio	119
Figure 5-6: VistaLINK® Audio Pair Fault Definitions Tab for EMR Audio	121
Figure 5-7: VistaLINK® Audio Bar Graph	122
Figure 5-8: VistaLINK® Port Control Tab for EMR Data Port	123
Figure 6-1: Magnum Add Device Dialog	126
Figure 6-2: Magnum Add Device Dialog	126
Figure 6-3: Magnum Devices Page	127
Figure 6-4: Magnum EQX Layout Page	127
Figure 6-5: Inserting Existing Device	128
Figure 6-6: Magnum Tielines Page	129

Figure 7-1: Run Window	132
Figure 7-2 : Run Window	134
Figure 9-1: ADMX Redundancy Layout	142
Figure 9-2: ADMX Configuration in Magnum Server	149

TABLES

Table 2-1: Link Module Options for EMR-IP96 (48)-AESU	8
Table 2-2: Balanced AES Audio Input Pin-Out	10
Table 2-3: Description of EMR-IP96 (48)-AESU (B) Card Edge	12
Table 2-4: Link Module Options for EMR-OP96 (48)-AESU	14
Table 2-5: Balanced AES Audio Output Pin-Out	16
Table 2-6: Description of EMR-OP96 (48)-AESU (B) Card Edge	18
Table 2-7: Analog Audio Input Pin-Out	25
Table 2-8: Description of EMR-IP48-AA Card Edge	27
Table 2-9: Analog Audio Output Pin-Out	30
Table 2-10: Description of EMR-OP48-AA Card Edge	32
Table 2-11: Description of EMR-ADMX-16X16 and 3000ADMX-16X16 Card Edges	40
Table 2-12: Description of ADMX-48X48 and ADMX-16X16A Card Edges	40
Table 2-13: Description of EMR-IP16-MADI and 3000MADI16-TDM4 Card Edge	43
Table 2-14: Description of EMR-OP16-MADI and 3000TDM4-MADI16 Card Edges	46
Table 2-15: LTC Input Pin-Out	48
Table 2-16: Description of EMR-IP96 (48)-LTC Card Edge	50
Table 2-17: EMR-OP96 (48)-LTC TDM Connections	52
Table 2-18: LTC Output Pin-Out	53
Table 2-19: Description of EMR-OP96 (48)-LTC Card Edge	55
Table 2-20: EMR-PR48 TDM Connections	58
Table 2-21: Data Port Pin-Out	61
Table 2-22: Description of EMR-PR48 Card Edge	63
Table 2-23: External Device Standard Controller and Slave D9 Pinouts	70
Table 2-24: Recommended Port Wiring	71
Table 2-25: Multi-Card TDM Cables (96 Ports, 2 Card Systems)	73
Table 2-26: Multi-Card TDM Cables (144 Ports, 3 Card Systems)	73
Table 2-27: Multi-Card TDM Cables (192 Ports, 4 Card Systems)	73
Table 2-28: Multi-Card TDM Cables (240 Ports, 5 Card Systems)	74
Table 2-29: Multi-Card TDM Cables (288 Ports, 6 Card Systems)	75
Table 2-30: Multi-Card TDM Cables (336 Ports, 7 Card Systems)	76
Table 2-31: EMR-PR48-A TDM Connections	77
Table 2-32: Description of EMR-PR48-A Card Edge	78
Table 2-33 : Description of EMR-IO8-MADI Card Edge	82
Table 7-1: FTP Window	134
Table 9-1: ADMX IP Config	143
Table 9-2 : ADMX FTP Upgrade	143
Table 9-3: Left and Right EMX-FCs Network Config	144
Table 9-4: Left FC TCP Proxy Config	146
Table 9-5 : Right FC TCP Proxy Config	147

This page left intentionally blank

1. OVERVIEW

The EMR is a multi-format modular router that provides a high density solution without compromising functionality. The EMR provides a unified platform for routing digital audio, analog audio, MADI audio, data, and time code. The EMR uses a packet routing core that allows for highly dense applications and also provides the flexibility for expansion as demands grow.

A single 6RU frame can accommodate 288x288 AES, 288 data ports, 288x288 time code signals, or a mix of everything in between. Expansion beyond this is as easy as adding another frame. With two 6RU frames, the EMR can accommodate 576x576 AES signals with full redundancy.

The modular design of the EMR means that there are no limitations to the signal formats that can be added to the router, or limitations to the size at which it can be expanded to. Other products that can be combined with the EMR are master controllers, multi-viewers and more.

Configuration:

The EMR allows any mix of formats within a frame. The inputs and outputs are scalable in blocks of 96 or 48 depending on the format. A system consists of the input stage, the crosspoint, and the output stage. Each input and output device is connected to the crosspoint through a proprietary TDM connection. It is the use of this connection that provides the flexibility for the system to scale and evolve with changing needs.

Scalability:

The EMR can be scaled well beyond a single frame. A single crosspoint module can support up to 16/48 input modules and 16/48 output modules, allowing a system to scale to 10240x10240/30720x30720 AES. For larger requirements, multiple crosspoint modules can be combined to scale even further. There really is no limit to the range of the EMR.

Redundancy:

Each input and output card in the EMR contains Multiple TDM interfaces that allow connections to multiple crosspoints. Each input card provides Main and Redundant TDM outputs that can be used for redundant connections, and each output card provides Main and Redundant TDM inputs that can be setup to automatically failover if the primary connection fails. The redundancy structure of the EMR minimizes the chances of any failure to the system.

Control:

When combined with Magnum, the EMR can be controlled using a wide range of control panels and interfaces. The EMR also provides a SNMP interface to control various configuration options.

System Integration:

When combined with the EQX, the EMR provides the ability to route audio universally across various formats. Embedded audio from EQX video sources can be de-embedded and routed to AES, analog, or MADI destinations. The system also allows discrete audio sources from AES, analog or MADI to be routed to audio embedders on the EQX. This unique system provides maximum flexibility for routing any audio source to any audio destination.

1.1. FEATURES & BENEFITS

Audio Routing:

- Support for unbalanced/balanced AES, analog, and MADI audio formats
- Input and output sample rate conversion
- Processing capabilities for per channel gain, inversion, quad-mixing and per channel audio delay
- Advanced audio monitoring for loss, silence, over, phase and mono
- Unique HD video output with audio level display for all audio inputs

Data Port Routing:

- Support for RS-232 and RS-422 devices (selectable)
- Conversion between RS-232 and RS-422 devices
- Manual or automatic sensing of controlling and controlled devices
- Sony interface for detecting controlling or controlled devices

Time Code Routing:

- Decoding and encoding capabilities for advanced monitoring
- Handles shuffle speeds up to 70x

Advanced System Control & Interfacing:

- Supports the full range of Quartz remote control panels
- Full VistaLINK[®] PRO command & control, SNMP
- Supports a wide selection of control protocols
- Ethernet, Serial RS-422/RS-232 connections
- Full integration with 3rd party automation systems

High Availability, 24/7 Design:

- Full modular design
- All modules are hot swappable
- All components are front accessible
- Passive I/O
- External MI connection
- Redundant crosspoint
- Redundant power supply
- Comprehensive system monitoring bus
- VistaLINK[®] PRO SNMP monitoring of I/O modules

1.2. SIGNAL TYPES

TDM (Time Division Multiplexed): 640 channels per stream.

MADI (Multichannel Audio Digital Interface): 64 channels of audio per stream. Please note 56 channels in older systems.

AES: 2 audio channels per stream, single Dolby E/D compressed stream.

Analog: Mono differential signal.

2. COMPONENT OVERVIEW

2.1. EMR FRAME

The EMR is housed in one of three rack-mountable frames. The three available frames are the 3000FR, the EMX6-FR and the EMX3-FR. The 3000FR and EMX6-FR frames can accommodate up to 2 hot-swappable power supply units and up to 15 single slots, hot-swappable I/O modules. The EMX3-FR frame can accommodate up to 2 hot-swappable power supply units and up to 5 single slots, hot-swappable I/O modules. Each module has a corresponding passive rear plate, which is mounted via screws to the frame. It is important that all screws are used to fasten the rear plates to ensure proper connectivity with the I/O modules.

The EMR frame is also equipped with a frame controller unit used for facilitating network communications between the frame modules and Magnum.

The 3000FR frame uses a 3000FC frame controller which provides one network connection via an RJ-45 connector and two references via BNC connectors. The BNC labeled 59.94 Hz is the main reference and the BNC labeled 50 Hz is the backup reference. The references do not need to be the frequencies indicated on the frame. Figure 2-1 shows the rear of the 3000FR frame and 3000FC connections.

The EMX6-FR and EMX3-FR frames use an EMX-FC frame controller which provides two network connections via RJ-45 connectors and two references via BNC connectors. The BNC labeled Ref 1 is the main reference and the BNC labeled Ref 2 is the backup reference. Figure 2-2 and Figure 2-3 show the rear of the EMX6-FR and EMX3-FR frames respectively. There are also main and backup serial connections to the EMX-FC that are provided for future use.

The EMX6-FR and EMX3-FR frames have optional redundant frame controller configurations.



Note: Rear panels are placed horizontally in the EMX3-FR frame and as a result, some screening labels will be upside down. This is the case for the Analog Audio, Balanced AES, LTC and Data Port modules.

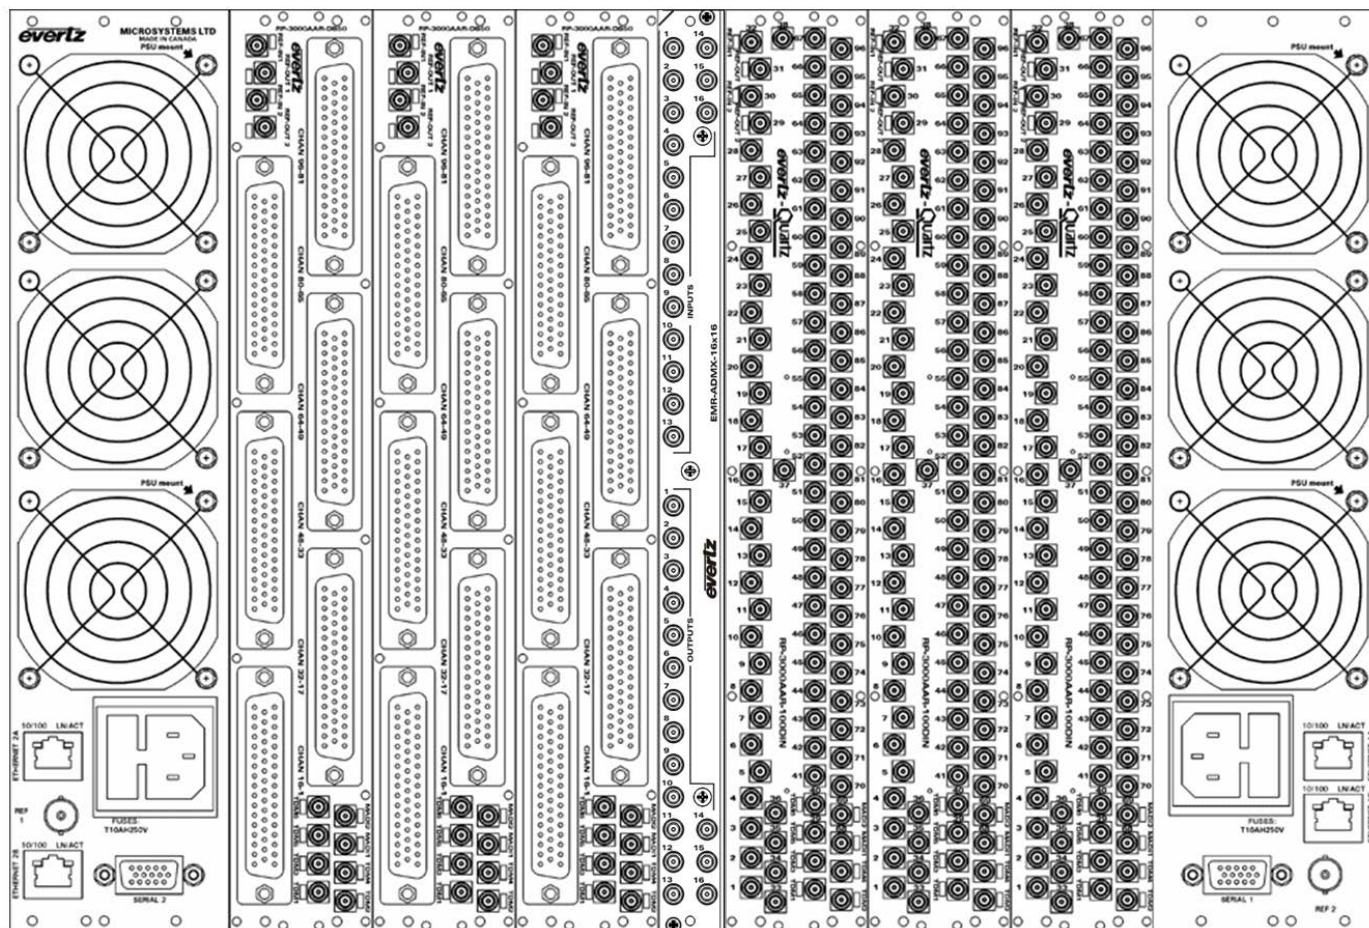


Figure 2-1: 3000FR Rear View

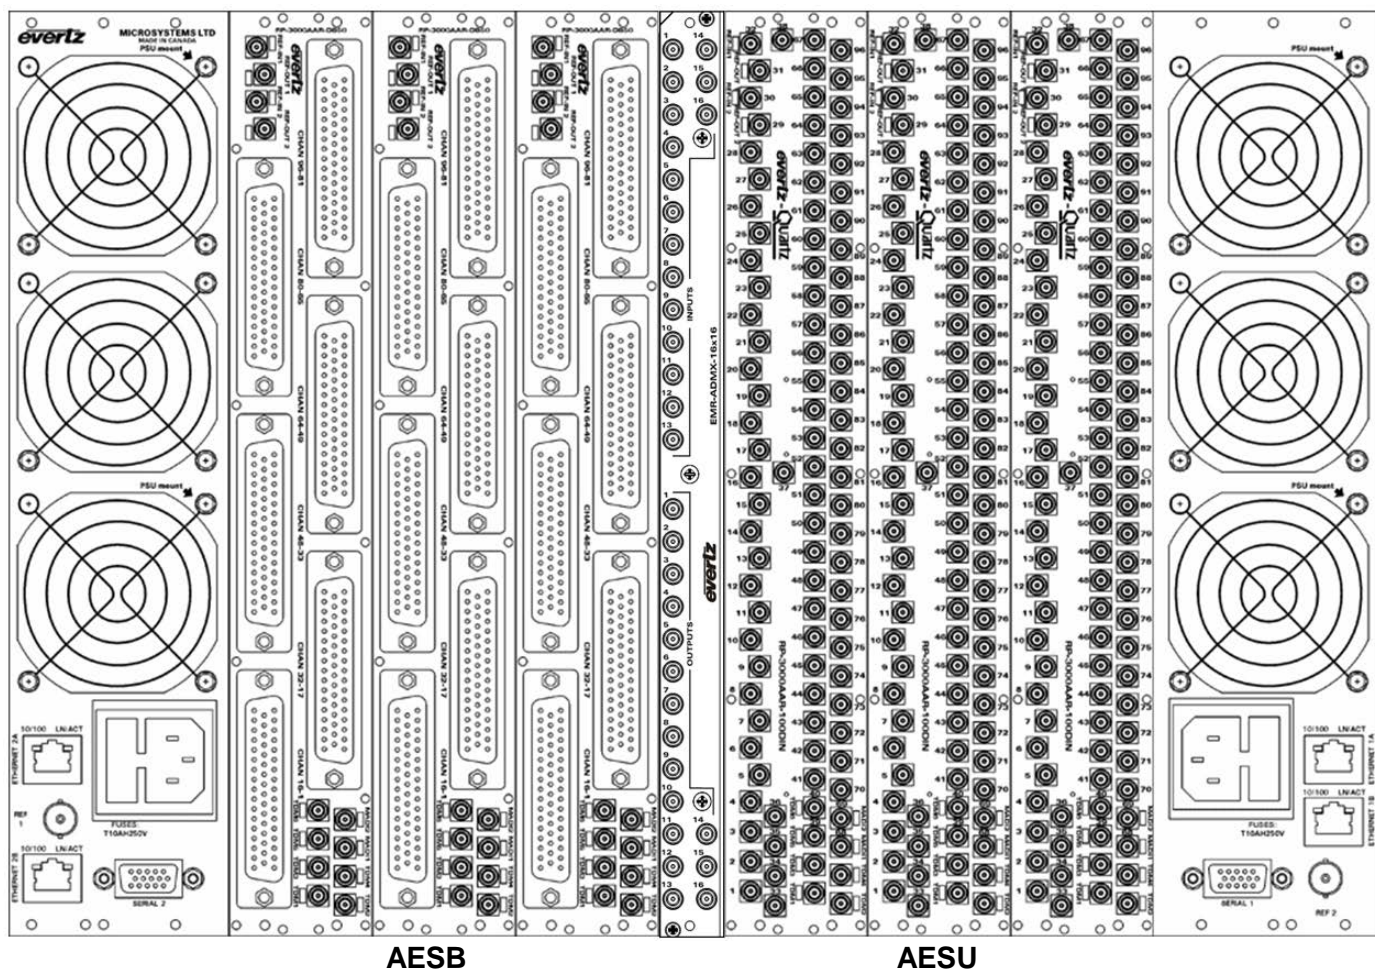


Figure 2-2: EMX6-FR Rear View

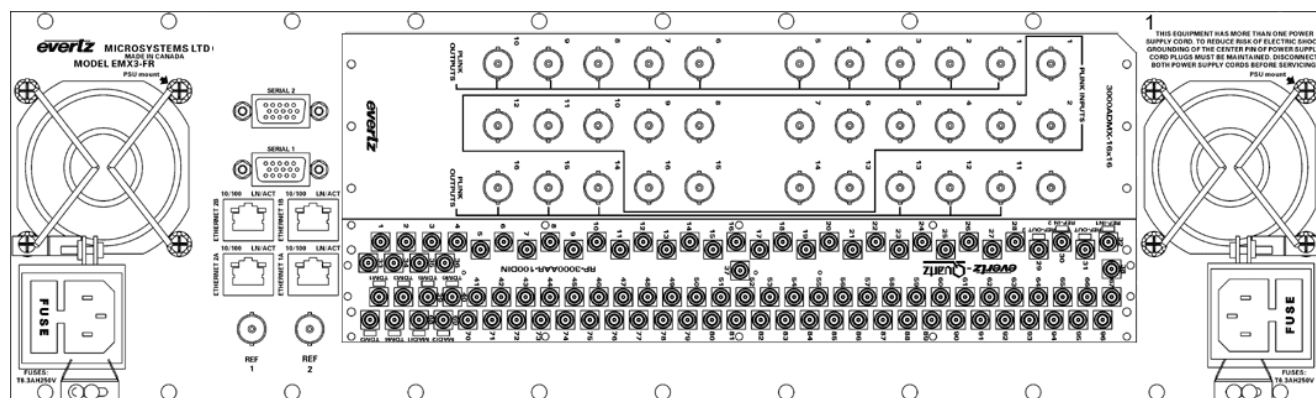


Figure 2-3: EMX3-FR Rear View

2.2. EMR I/O MODULES

The EMR system is built from a variety of input and output modules. All modules are hot-swappable and can reside in any one of the 15 slots of the 3000FR or EMX6-FR frames or 5 slots of the EMX3-FR frame.

Available I/O modules include:

1. EMR-IP96-AESU	96 Unbalanced AES inputs with TDM outputs
2. EMR-IP96-AESB	96 Balanced AES inputs with TDM outputs
3. EMR-IP48-AESU	48 Unbalanced AES inputs with TDM outputs
4. EMR-IP48-AESB	48 Balanced AES inputs with TDM outputs
5. EMR-IP48-AA	48 Analog stereo inputs with TDM outputs
6. EMR-OP96-AESU	96 Unbalanced AES outputs with TDM inputs
7. EMR-OP96-AESB	96 Balanced AES outputs with TDM inputs
8. EMR-OP48-AESU	48 Unbalanced AES outputs with TDM inputs
9. EMR-OP48-AESB	48 Balanced AES outputs with TDM inputs
10. EMR-OP48-AA	48 Analog stereo outputs with TDM inputs
11. EMR-ADMX-16X16A	16 TDM inputs and 16 TDM outputs
12. EMR-ADMX-16X16	16 TDM inputs and 16 TDM outputs
13. EMR-ADMX-48X48	48 TDM inputs and 48 TDM outputs
14. EMR-IP16-MADI	16 MADI inputs with TDM outputs
15. EMR-OP16-MADI	16 MADI outputs with TDM inputs
16. 3000ADMX-16X16	16 TDM inputs and 16 TDM outputs
17. 3000MADI16-TDM4	*OBSOLETE* 16 MADI inputs with TDM outputs
18. 3000TDM4-MADI16	*OBSOLETE* 16 MADI outputs with TDM inputs
19. EMR-IP96-LTC	96 LTC inputs with TDM outputs
20. EMR-IP48-LTC	48 LTC inputs with TDM outputs
21. EMR-OP96-LTC	96 LTC outputs with TDM inputs
22. EMR-OP48-LTC	48 LTC outputs with TDM Inputs
23. EMR-PR48	48 data ports with 4 TDM inputs and 4 TDM outputs
24. EMR-PR48-A	48 data ports with 4 TDM inputs and 4 TDM outputs
25. EMR-IO8-MADI	8 MADI inputs with TDM outputs and 8 MADI outputs with TDM inputs

Detailed module descriptions, module rear plate drawings, and specifications are provided in the following sections.

2.2.1. EMR-IP96 (48)-AESU (B) AES Audio Input Module

The EMR-IP96 (48)-AESU (B) is an AES audio input card for the EMR. It supports 96 or 48 discrete AES inputs (192 or 96 mono channels). Additionally, there is one MADI input which can carry up to 64 channels of digital audio, giving a total of 256 or 160 mono channels of audio.

The latest firmware version takes the 256 channels of audio and multiplexes them onto 2 TDM streams. One stream is the main and the other is the redundant. Either TDM stream can be used as the primary since they are identical.

There is also one video monitoring output which can be used to visualize the audio levels using level meters for each channel. This monitoring output is a 720p/59.94 signal that provides a visual confirmation of audio presence and levels. On the unbalanced AES version, the availability of this output depends on the configuration of the link module as described in Table 2-1.

2.2.1.1. Unbalanced AES Input Rear Panel

The AESU version of the rear panel occupies 2 slots in a frame and has unbalanced AES inputs with DIN 1.0/2.3 connectors as shown in Figure 2-4. The EMR-IP48-AESU uses the same rear plate as the EMR-IP96-AESU but only the first 48 AES inputs are enabled.

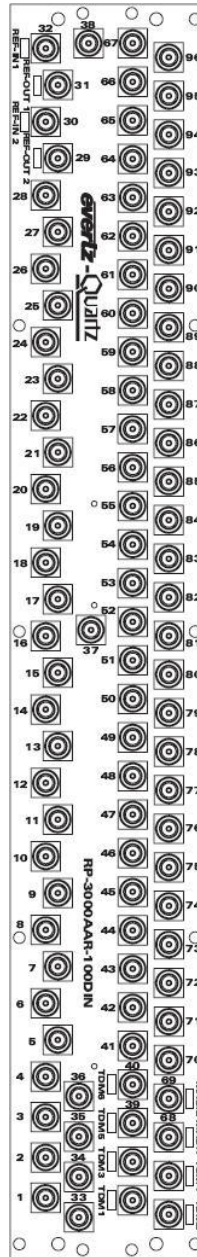


Figure 2-4: EMR-IP96 (48)-AESU Rear Plate

Of the 100 DIN 1.0/2.3 connectors, inputs 1-96 are dedicated AES inputs. The connectors TDM1 and TDM2 are dedicated TDM outputs.

Connectors TDM3, TDM4, TDM5/39, TDM6/40, MADI1/68 and MADI2/69 have different functions depending on which link module is installed. The link module is a small printed circuit board (PCB)

located near the back of the main module. Depending on which module is installed, the connectors have different functions. Table 2-1 shows the different I/O configurations available.

LINK MODULE	TDM3	TDM4	TDM5/39	TDM6/40	MADI1/68	MADI2/69
(A-EMR-AES-UNBALT3)	Video OUT	MADI IN	AES IN 39	AES IN 40	AES IN 68	AES IN 69

Table 2-1: Link Module Options for EMR-IP96 (48)-AESU

2.2.1.2. Balanced AES Input Rear Panel

The AESB version of the rear panel occupies 2 slots in a frame and has balanced AES inputs using a rear plate that has 50-pin D-Sub female connectors as shown in Figure 2-5. The EMR-IP48-AESB uses the same rear plate as the EMR-IP96-AESB but only the first three 50-pin D-Sub connectors are enabled.

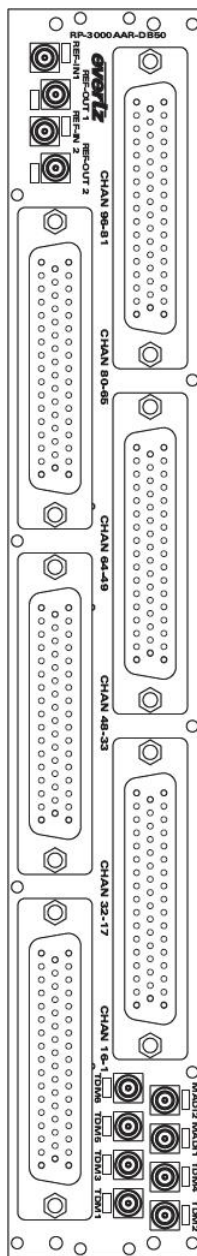



Figure 2-5: EMR-IP96 (48)-AESB Rear Plate

The balanced AES inputs are interfaced by 50-pin D-Sub female connectors. Each connector supports 16 mono channels of balanced AES. The pinout for each connector is shown in Table 2-2. All other I/O signals use DIN 1.0/2.3 connectors. The control of the monitoring ports is not currently supported.

TDM1 and TDM2 are TDM outputs, while TDM 3 is a video output. The connector MADI2 is a MADI input.

2.2.1.3. Balanced AES Input D50 Connector – Pin Out

The EMR-IP96 (48)-AESB audio cards use female 50-pin D-Sub connectors, with each connector carrying 16 signals. Table 2-2 outlines the pinout for the connectors.

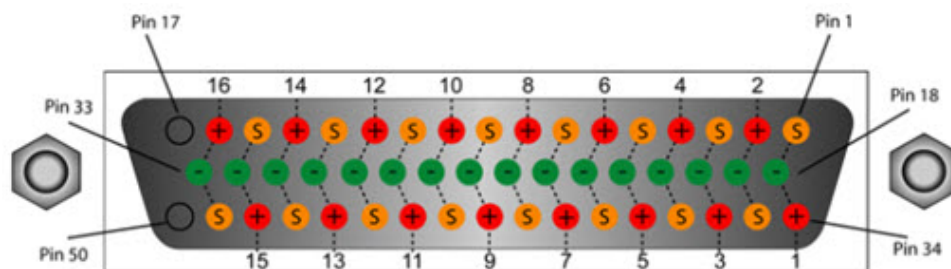

D50 Audio Pin-Out Table			
Signal	+ve Pin	-ve Pin	Screen
1	34	18	1
2	2	19	35
3	36	20	3
4	4	21	37
5	38	22	5
6	6	23	39
7	40	24	7
8	8	25	41
9	42	26	9
10	10	27	43
11	44	28	11
12	12	29	45
13	46	30	13
14	14	31	47
15	48	32	15
16	16	33	49

Table 2-2: Balanced AES Audio Input Pin-Out

2.2.1.4. Front Card Edge Controls and LEDs

The EMR-IP96 (48)-AESU (B) front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-6 and Table 2-3 show the card edge and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

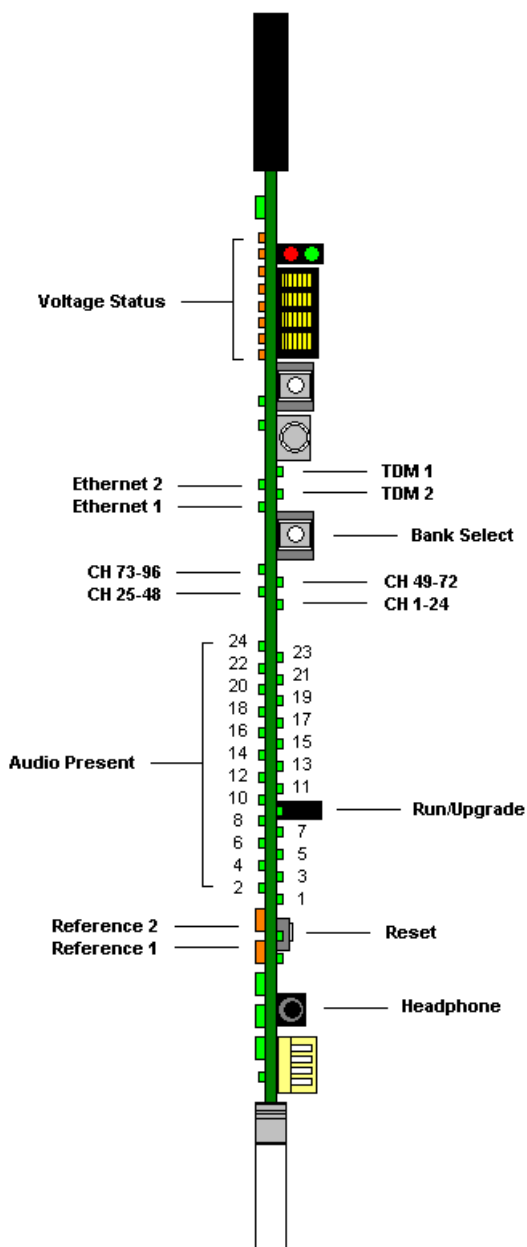


Figure 2-6: EMR-IP96 (48)-AESU (B) Front Card Edge

Component	Description
Voltage Status LEDs	This set of LEDs are amber in color and should always be ON
Ethernet 1 LED	This LED is green in color and flashes when there is activity on Ethernet port 1
Ethernet 2 LED	This LED is green in color and flashes when there is activity on Ethernet port 2
Bank Select Push Button	Selects the bank of inputs that are being monitored by the Audio Present LEDs
CH 1-24 LED	This LED is green in color and indicates that inputs 1 to 24 are currently being monitored by the Audio Present LEDs
CH 25-48 LED	This LED is green in color and indicates that inputs 25 to 48 are currently being monitored by the Audio Present LEDs
CH 49-72 LED	This LED is green in color and indicates that inputs 49 to 72 are currently being monitored by the Audio Present LEDs
CH 73-96 LED	This LED is green in color and indicates that inputs 73 to 96 are currently being monitored by the Audio Present LEDs
Audio Present LEDs	This set of LEDs are green in color and indicate the presence of audio on each respective input
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Reference 1 LED	This LED is amber in color and indicates the presence of a valid reference on input 1. It will flash rapidly if reference is present and slowly if it is the primary reference
Reference 2 LED	This LED is amber in color and indicates the presence of a valid reference on input 2. It will flash rapidly if reference is present and slowly if it is the primary reference
Reset Button	This button resets the module
Headphone Jack	This jack allows a user to monitor audio signals from a pair of headphones

Table 2-3: Description of EMR-IP96 (48)-AESU (B) Card Edge

2.2.1.5. Configuration and Monitoring Menu

EMR-IP96 (48)-AESU (B) contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

<i>Network Configuration</i>	Configuration of Network 1 and 2
<i>SNMP Configuration</i>	Configuration of Simple Network Management Protocol settings.
<i>Audio Configuration</i>	View of audio channel status, frame reference, board and TDM information. Configuration of Headphone port, Tone Gen and Audio pair control
<i>Set TDM Version</i>	Configuration of TDM versions (TDM v2 is for future use)
<i>Audio Monitor Cast Service Config</i>	Configuration of Cast service
<i>Trace - Engineering Only</i>	Configured under the supervision of Evertz technical support staff only
<i>Engineering Debug Utility</i>	Accessed by Evertz technical support staff only



Note: The default TDM version has to be set to V1; TDM V2 is for future use.

2.2.2. EMR-OP96 (48)-AESU (B) AES Audio Output Module

The EMR-OP96 (48)-AESU (B) is an AES audio output card for the EMR. It supports 96 or 48 discrete AES outputs (192 or 96 mono channels). Additionally, there is one MADI output which can carry up to 64 channels of digital audio, giving a total of 256 or 160 mono channels of audio.

The latest firmware version de-multiplexes the 256 channels of audio from 1 of 2 TDM input streams. One stream is the primary and the other is the redundant. Either TDM stream can be used as the primary since they are identical. The system can be configured to default to the redundant stream if the primary is missing.

There is also one video monitoring output which can be used to visualize the audio levels using level meters for each channel. This monitoring output is a 720p/59.94 signal that provides a visual confirmation of audio presence and levels. On the unbalanced AES version, the availability of this output depends on the configuration of the link module as described in Table 2-4: Link Module Options for EMR-OP96 (48)-AESU.

2.2.2.1. Unbalanced AES Output Rear Panel

The AESU version of the rear panel occupies 2 slots in a frame and has unbalanced AES outputs with DIN 1.0/2.3 connectors as shown in Figure 2-7. The EMR-OP48-AESU uses the same rear plate as the EMR-OP96-AESU but only the first 48 AES outputs are enabled.

Beside each input labeled TDM there is a small LED adjacent to the connector that will light up solid green if it sees a valid MADI signal or valid TDM signal. The LED will remain solid if a valid TDM is the primary TDM and it will flash if a valid TDM is detected but not currently used.

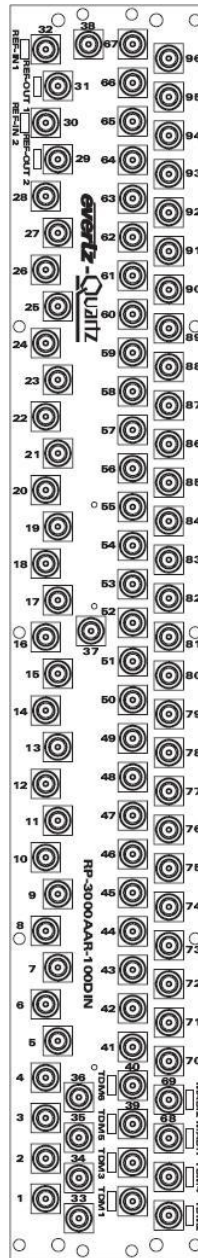


Figure 2-7: EMR-OP96 (48)-AESU Rear Plate

Link Module	TDM3	TDM4	TDM5/39	TDM6/40	MADI1/68	MADI2/69
(A-EMR-AES-UNBALT2)	MADI OUT	Video OUT	AES OUT 39	AES OUT 40	AES OUT 68	AES OUT 69

Table 2-4: Link Module Options for EMR-OP96 (48)-AESU

2.2.2.2. Balanced AES Output Rear Panel

The AESB version of the rear panel occupies 2 slots in a frame and has balanced AES outputs using a rear plate that has 50-pin D-Sub female connectors as shown in Figure 2-8. The EMR-OP48-AESB uses the same rear plate as the EMR-OP96-AESB but only the first three 50-pin D-Sub connectors are enabled. The control of the monitoring ports is not currently supported.

Connectors TDM1-TDM5 are TDM inputs and the connector MADI1 is a MADI output, and the connector TDM6 is a video output.

Beside each input labeled TDM there is a small LED adjacent to the connector that will light up solid green if it sees a valid MADI signal or valid TDM signal. The LED will remain solid if a valid TDM is the primary TDM and it will flash if a valid TDM is detected but not currently used.


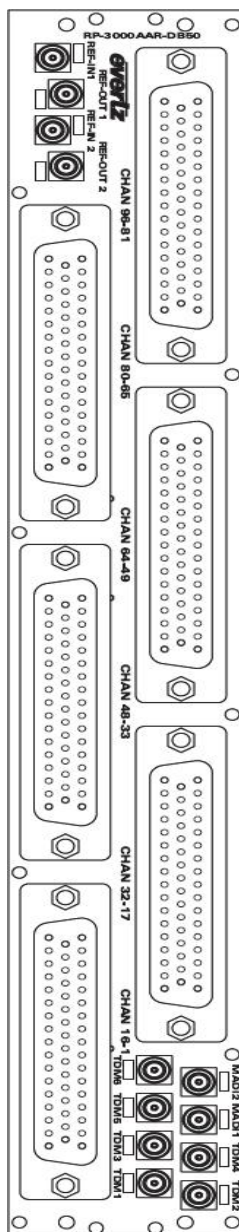


Figure 2-8: EMR-OP96 (48)-AESB Rear Plate

2.2.2.3. Balanced AES Output D50 Connector – Pin Out

The EMR-OP96 (48)-AESB audio cards use female 50-pin D-Sub connectors, with each connector carrying 16 signals. Table 2-5 outlines the pinout for the connectors.

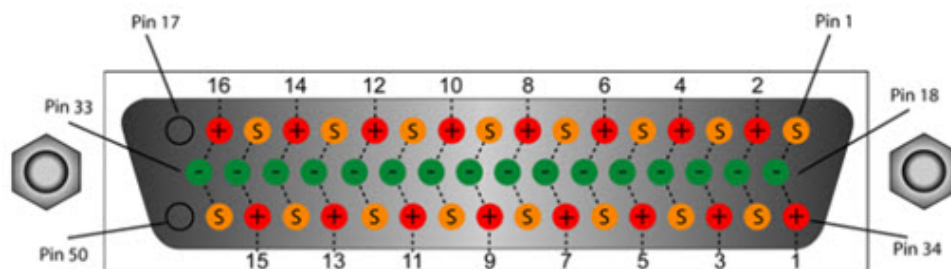

D50 Audio Pin-Out Table			
Signal	+ve Pin	-ve Pin	Screen
1	34	18	1
2	2	19	35
3	36	20	3
4	4	21	37
5	38	22	5
6	6	23	39
7	40	24	7
8	8	25	41
9	42	26	9
10	10	27	43
11	44	28	11
12	12	29	45
13	46	30	13
14	14	31	47
15	48	32	15
16	16	33	49

Table 2-5: Balanced AES Audio Output Pin-Out

2.2.2.4. Front Card Edge Controls and LEDs

The EMR-OP96 (48)-AESU (B) front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-9 and Table 2-6 show the card edge and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

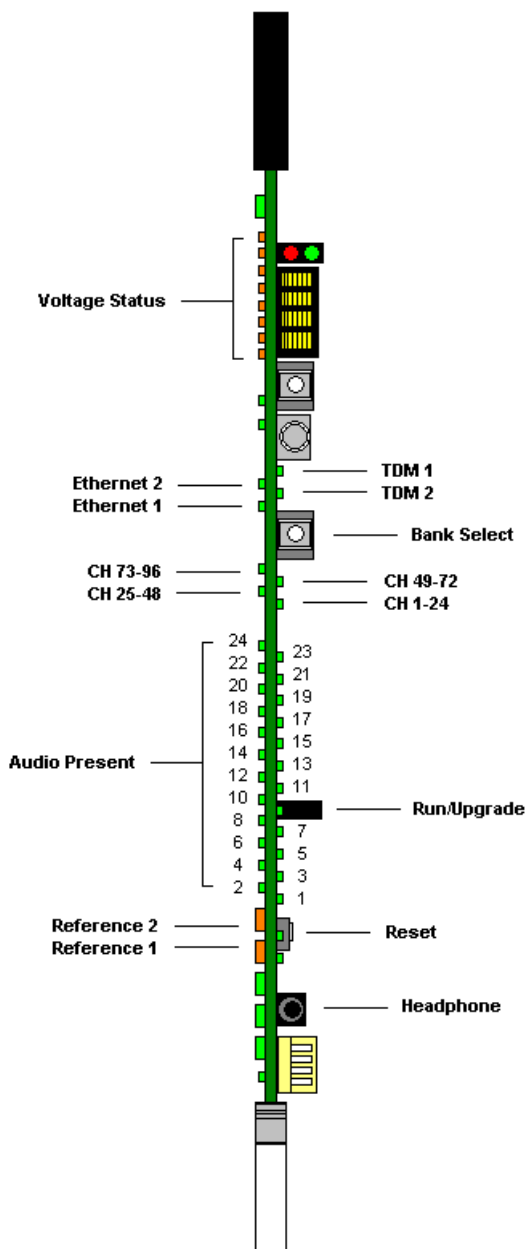


Figure 2-9: EMR-OP96 (48)-AESU (B) Front Card Edge

Component	Description
Voltage Status LEDs	This set of LEDs are amber in color and should always be ON
Ethernet 1 LED	This LED is green in color and flashes when there is activity on Ethernet port 1
Ethernet 2 LED	This LED is green in color and flashes when there is activity on Ethernet port 2
TDM 1	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 1 and is solid when it is the primary TDM
TDM 2	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 2 and is solid when it is the primary TDM
Bank Select Push Button	Selects the bank of inputs that are being monitored by the Audio Present LEDs
CH 1-24 LED	This LED is green in color and indicates that inputs 1 to 24 are currently being monitored by the Audio Present LEDs
CH 25-48 LED	This LED is green in color and indicates that inputs 25 to 48 are currently being monitored by the Audio Present LEDs
CH 49-72 LED	This LED is green in color and indicates that inputs 49 to 72 are currently being monitored by the Audio Present LEDs
CH 73-96 LED	This LED is green in color and indicates that inputs 73 to 96 are currently being monitored by the Audio Present LEDs
Audio Present LEDs	This set of LEDs are green in color and indicate the presence of audio on each respective input
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Reference 1 LED	This LED is amber in color and indicates the presence of a valid reference on input 1. It will flash rapidly if reference is present and slowly if it is the primary reference
Reference 2 LED	This LED is amber in color and indicates the presence of a valid reference on input 2. It will flash rapidly if reference is present and slowly if it is the primary reference
Reset Button	This button resets the module
Headphone Jack	This jack allows a user to monitor audio signals from a pair of headphones

Table 2-6: Description of EMR-OP96 (48)-AESU (B) Card Edge

2.2.2.5. Configuration and Monitoring Menu


EMR-OP96 (48)-AESU (B) contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

<i>Network Configuration</i>	Configuration of Network 1 and 2
<i>SNMP Configuration</i>	Configuration of Simple Network Management Protocol.
<i>Audio Configuration</i>	View of audio channel status, frame reference, board and TDM information. Configuring Headphone port, Tone Gen and Audio pair control
<i>Set TDM Version</i>	Configuration of TDM versions (TDM v2 is for future use)
<i>Audio Monitor Cast Service Config</i>	Configuration of Cast service
<i>Trace - Engineering Only</i>	Configured under the supervision of Evertz technical support staff only
<i>Engineering Debug Utility</i>	Accessed by Evertz technical support staff only



Note: The default TDM version has to be set to V1; TDM V2 is for future use.

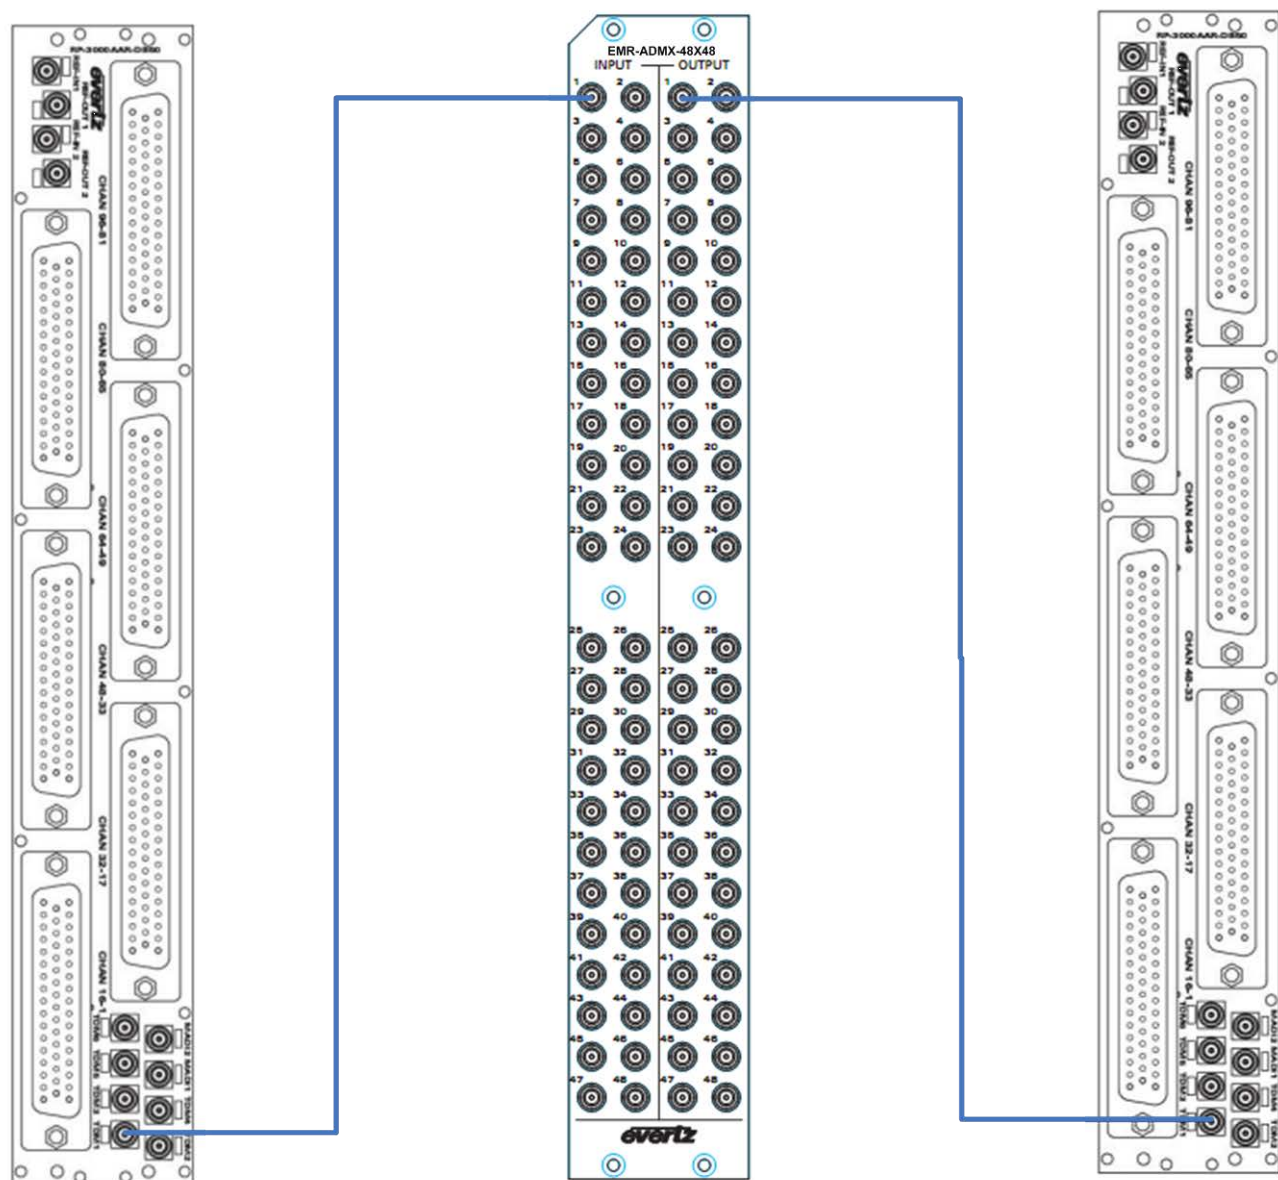

EMR-IP96(48)- AESB

EMR ADMX-48X48

EMR-OP96(48)-AESB

Figure 2-10: Basic EMR AESB Setup with ADMX-48x48

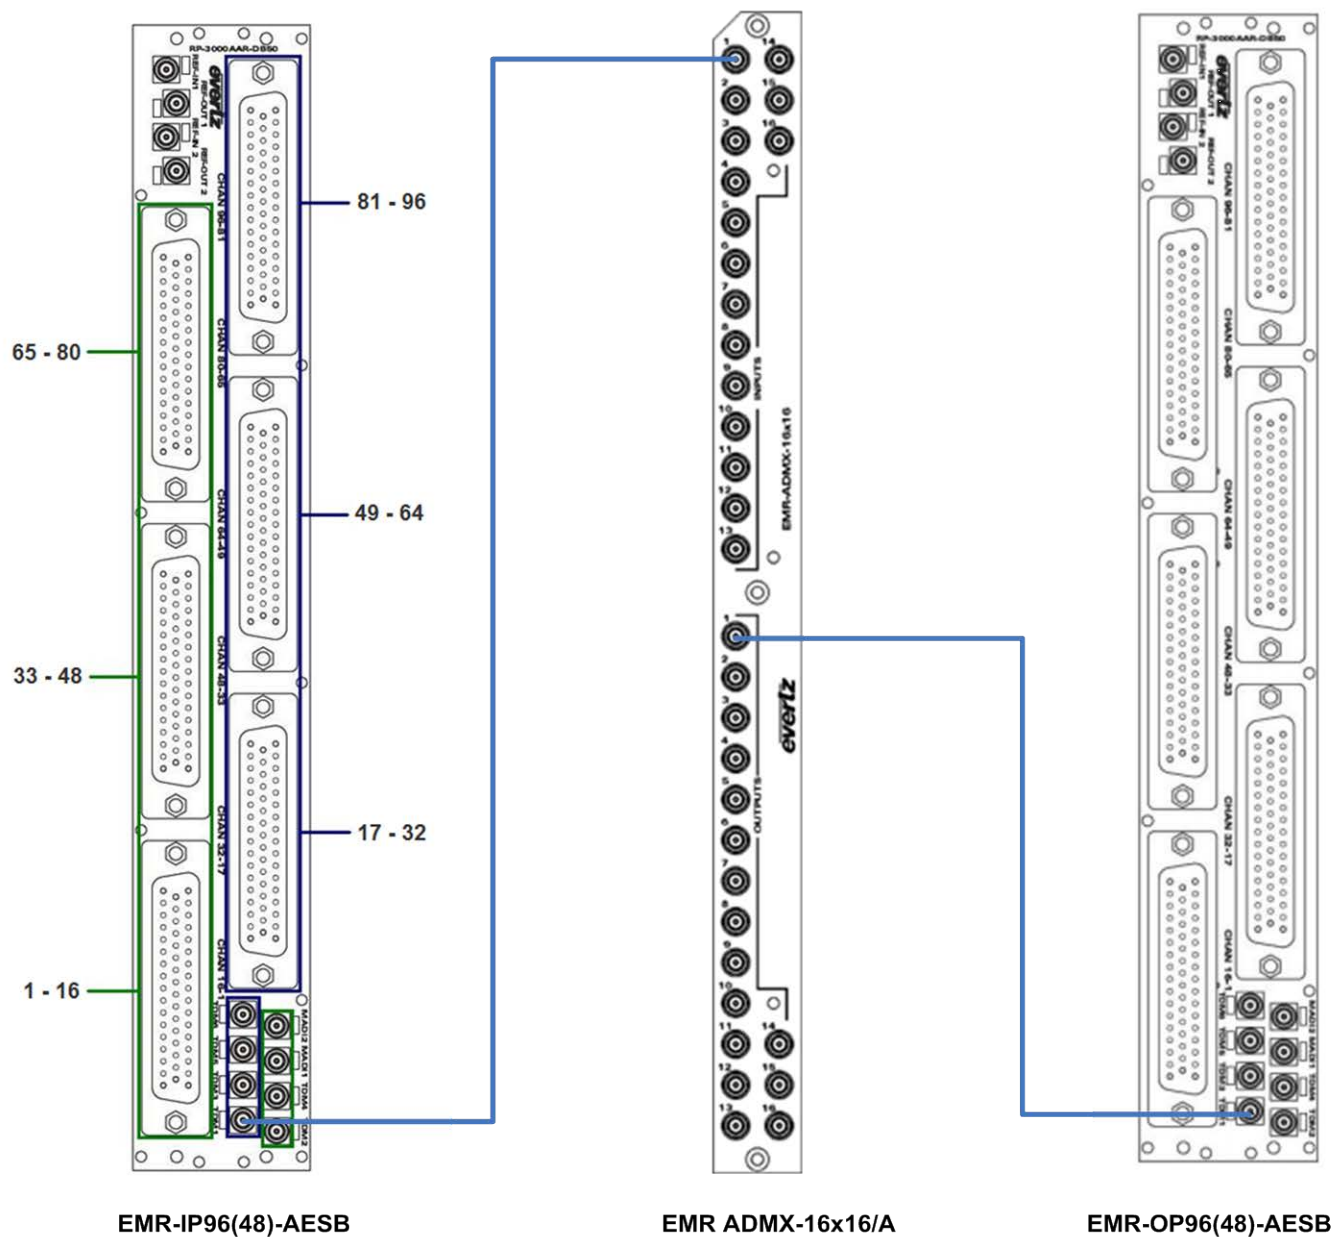


Figure 2-11: Basic EMR AESB Setup with ADMX-16X16/A

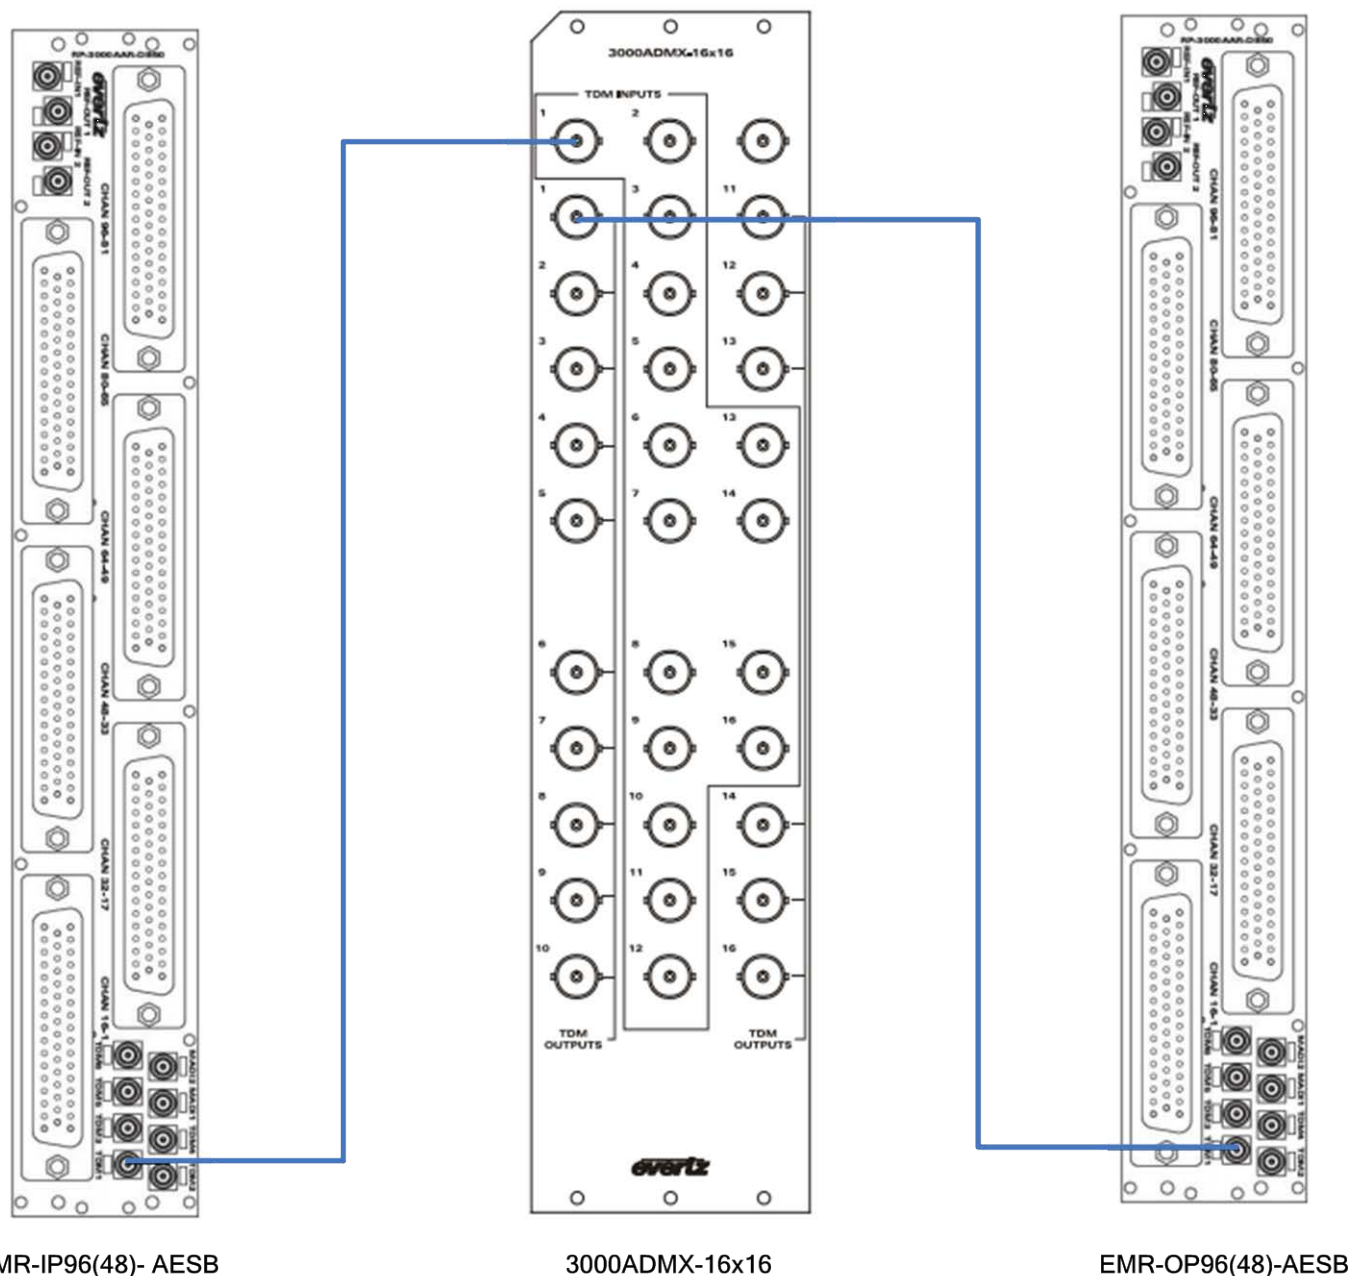


Figure 2-12: Basic EMR AESB Setup with ADMX

2.2.3. EMR-IP48-AA Analog Audio Input Module

The EMR-IP48-AA is an analog audio input card for the EMR. It supports 48 stereo analog pairs (96 mono channels). Additionally, there is one MADI input, which can carry up to 64 additional channels of audio giving a total of 160 channels of audio.

The EMR-IP48-AA consists of two identical half modules to reduce the failure block of the analog component. The latest version of firmware takes the 48 channels of audio from each half module and the MADI input, and multiplexes them onto 2 TDM streams. One stream is the main and the other is the redundant. Either TDM stream can be used as the primary since they are identical.

There is also one video monitoring output which can be used to visualize the audio levels using level meters for each channel. This monitoring output is a 720p/59.94 signal that provides a visual confirmation of audio presence and levels.

The EMR-IP48-AA rear panel occupies 2 slots in a frame and has 50-pin D-Sub female connectors as shown in Figure 2-13. The analog inputs are interfaced by the six 50-pin D-Sub female connectors. Each connector supports 8 stereo pairs of analog audio. The pin out for each connector is shown in Table 2-7. All other I/O signals use DIN 1.0/2.3 connectors. The control of the monitoring ports is not currently supported.

The TDM 1 and TDM 5 connectors are the main and redundant TDM outputs respectively. TDM 3 is the video output and the connector labeled MADI2 is a MADI Input.



Please Note: It is necessary to set the IP address on both half modules. Also, the user must load code on both half modules. The left module's IP address will be used for Winsetup & VLPRO.



Please Note: Cards will talk to one another through a link on the rear plate.


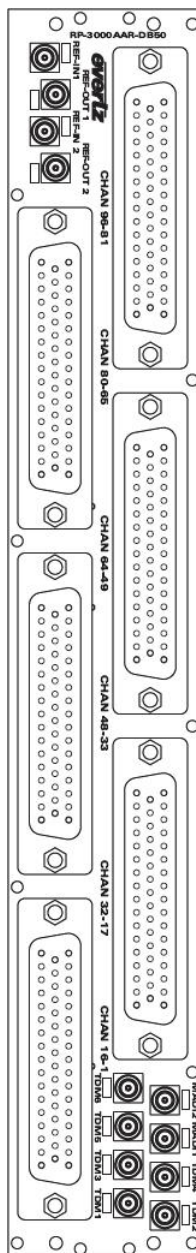


Figure 2-13: EMR-IP48-AA Rear Plate

2.2.3.1. Analog Audio D50 Connector – Pin Out

The EMR-IP48-AA analog audio cards use female D50 connectors, with each connector carrying 8 signal pairs. Table 2-7 outlines the pinout for the connectors.

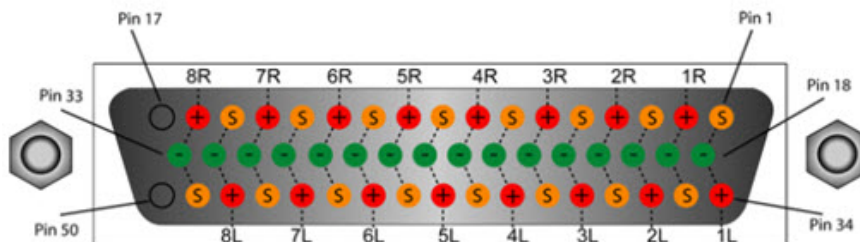

D50 Audio Pin-Out Table			
Signal	+ Pin	- Pin	Screen
1L	34	18	1
1R	2	19	35
2L	36	20	3
2R	4	21	37
3L	38	22	5
3R	6	23	39
4L	40	24	7
4R	8	25	41
5L	42	26	9
5R	10	27	43
6L	44	28	11
6R	12	29	45
7L	46	30	13
7R	14	31	47
8L	48	32	15
8R	16	33	49

Table 2-7: Analog Audio Input Pin-Out

2.2.3.2. Front Card Edge Controls and LEDs

The EMR-IP48-AA front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-14 and Table 2-8 show the card edge and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.



Please Note: The left side of the input card's IP address is used for VLPRO & Winsetup. Both half modules should have the same code loaded on it but different IP addresses.



Please Note: Analog IP card will accept an analog signal and will convert it to digital (TDM).

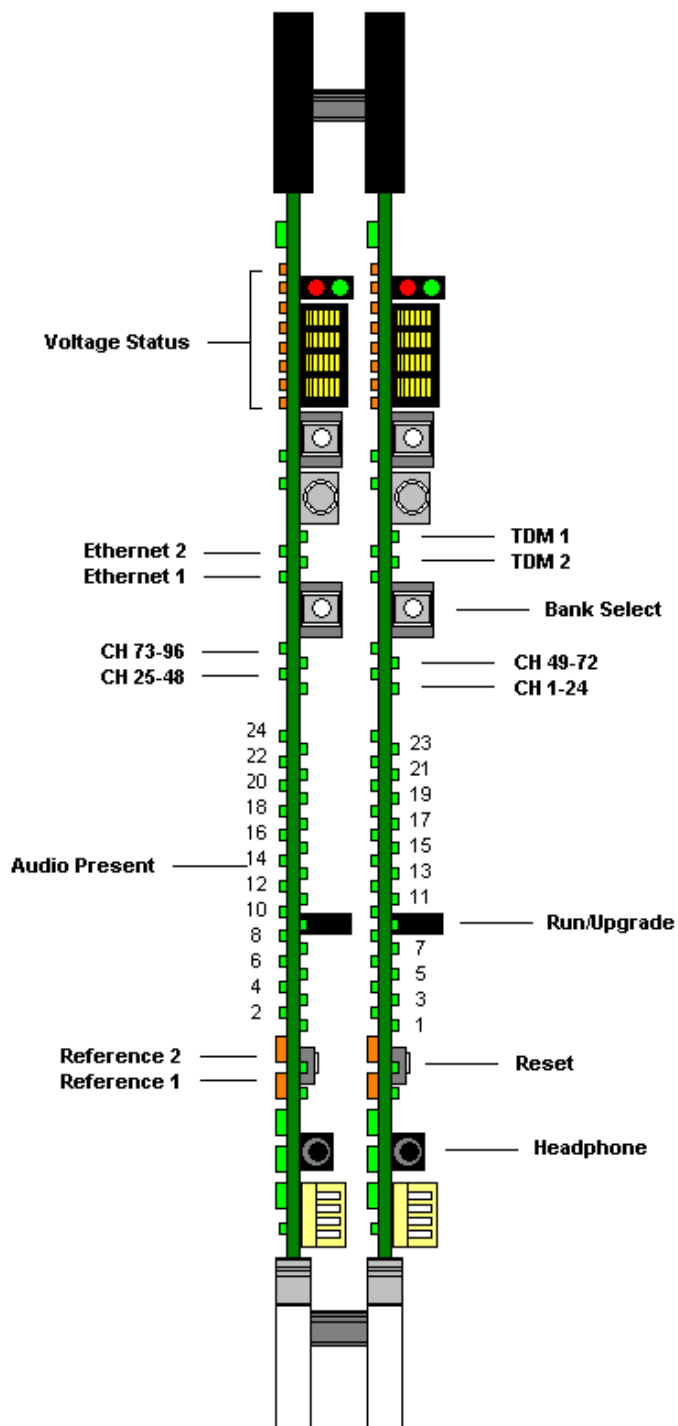


Figure 2-14: EMR-IP48-AA Front Card Edge

Component	Description
Voltage Status LEDs	This set of LEDs are amber in color and should always be ON
Ethernet 1 LED	This LED is green in color and flashes when there is activity on Ethernet port 1
Ethernet 2 LED	This LED is green in color and flashes when there is activity on Ethernet port 2
Bank Select Push Button	Selects the bank of inputs that are being monitored by the Audio Present LEDs
CH 1-24 LED	This LED is green in color and indicates that inputs 1 to 24 are currently being monitored by the Audio Present LEDs
CH 25-48 LED	This LED is green in color and indicates that inputs 25 to 48 are currently being monitored by the Audio Present LEDs
CH 49-72 LED	This LED is green in color and indicates that inputs 49 to 72 are currently being monitored by the Audio Present LEDs
CH 73-96 LED	This LED is green in color and indicates that inputs 73 to 96 are currently being monitored by the Audio Present LEDs
Audio Present LEDs	This set of LEDs are green in color and indicate the presence of audio on each respective input
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Reference 1 LED	This LED is amber in color and indicates the presence of a valid reference on input 1. It will flash rapidly if reference is present and slowly if it is the primary reference
Reference 2 LED	This LED is amber in color and indicates the presence of a valid reference on input 2. It will flash rapidly if reference is present and slowly if it is the primary reference
Reset Button	This button resets the module
Headphone Jack	This jack allows a user to monitor audio signals from a pair of headphones

Table 2-8: Description of EMR-IP48-AA Card Edge

2.2.3.3. Configuration and Monitoring Menu

EMR-IP48-AA contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

<i>Network Configuration</i>	Configuration of Network 1 and 2
<i>SNMP Configuration</i>	Configuration of Simple Network Management Protocol.
<i>Audio Configuration</i>	View of audio channel status, frame reference and board information. Configuration of Headphone port, Tone Gen and Audio Monitor
<i>Audio ADC/DAC Configuration</i>	View of Pot CMMR, Alignment and Calibration tables. Configuration of Alignment.
<i>Set TDM Version</i>	Configuration of TDM versions (TDM v2 is for future use)
<i>Audio Monitor Cast Service Config</i>	Configuration of Cast service
<i>Trace - Engineering Only</i>	Configured under the supervision of Evertz technical support staff only
<i>Engineering Debug Utility</i>	Accessed by Evertz technical support staff only



Note: The default TDM version has to be set to V1; TDM V2 is for future use.

2.2.4. EMR-OP48-AA Analog Audio Output Module

The EMR-OP48-AA is an analog audio output card for the EMR. It supports 48 stereo analog pairs (96 mono channels). Additionally, there is one MADI output, which can carry up to 64 additional channels of audio giving a total of 160 channels of audio.



Note: Analog OP card will accept a TDM signal and will convert it to analog.

The latest firmware version de-multiplexes 160 channels of audio from 1 of 2 TDM input streams. One stream is the primary and the other is the redundant. Either TDM stream can be used as the primary since they are identical. The system can be configured to default to the redundant stream if the primary is missing.

There is also one video monitoring output which can be used to visualize the audio levels using level meters for each channel. This monitoring output is a 720p/59.94 signal that provides a visual confirmation of audio presence and levels.

The EMR-OP48-AA rear panel occupies 2 slots in a frame and has 50-pin D-Sub female connectors as shown in Figure 2-15. The analog outputs are interfaced by the six 50-pin D-Sub female connectors. Each connector supports 8 stereo pairs of analog audio. The pin out for each connector is shown in Table 2-9. All other I/O signals use DIN 1.0/2.3 connectors. The control of the monitoring ports is not currently supported.

The connectors labeled TDM1 and TDM 2 are the main and redundant TDM inputs respectively, TDM 6 is the video output and the connector labeled MADI1 is a MADI output.

Beside each input labeled TDM there is a small LED adjacent to the connector that will light up solid green if it sees a valid TDM signal. The LED will remain solid if a valid TDM is the primary TDM and it will flash if a valid TDM is detected but not currently used.



The following signal levels are available: 24dBu, 18dBu and 15dBu.


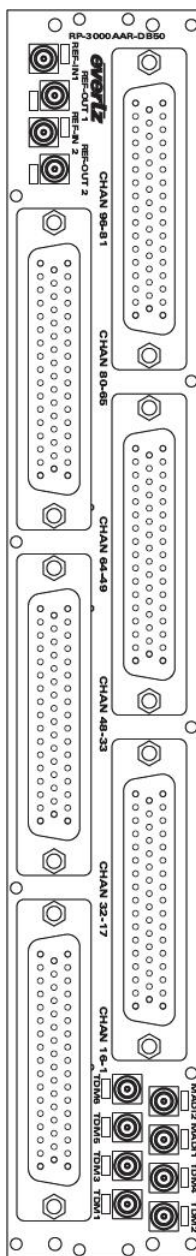


Figure 2-15: EMR-OP48-AA Rear Plate

2.2.4.1. Analog Audio D50 Connector – Pin Out

The EMR-OP48-AA analog audio cards use female D50 connectors, with each connector carrying 8 signal pairs. Table 2-9 outlines the pinout for the connectors.

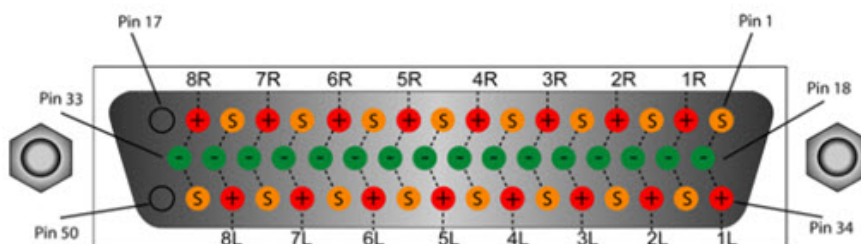

D50 Audio Pin-Out Table			
Signal	+ Pin	- Pin	Screen
1L	34	18	1
1R	2	19	35
2L	36	20	3
2R	4	21	37
3L	38	22	5
3R	6	23	39
4L	40	24	7
4R	8	25	41
5L	42	26	9
5R	10	27	43
6L	44	28	11
6R	12	29	45
7L	46	30	13
7R	14	31	47
8L	48	32	15
8L	16	33	49

Table 2-9: Analog Audio Output Pin-Out

2.2.4.2. Front Card Edge Controls and LEDs

The EMR-OP48-AA front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-16 and Table 2-10 show the card edge and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

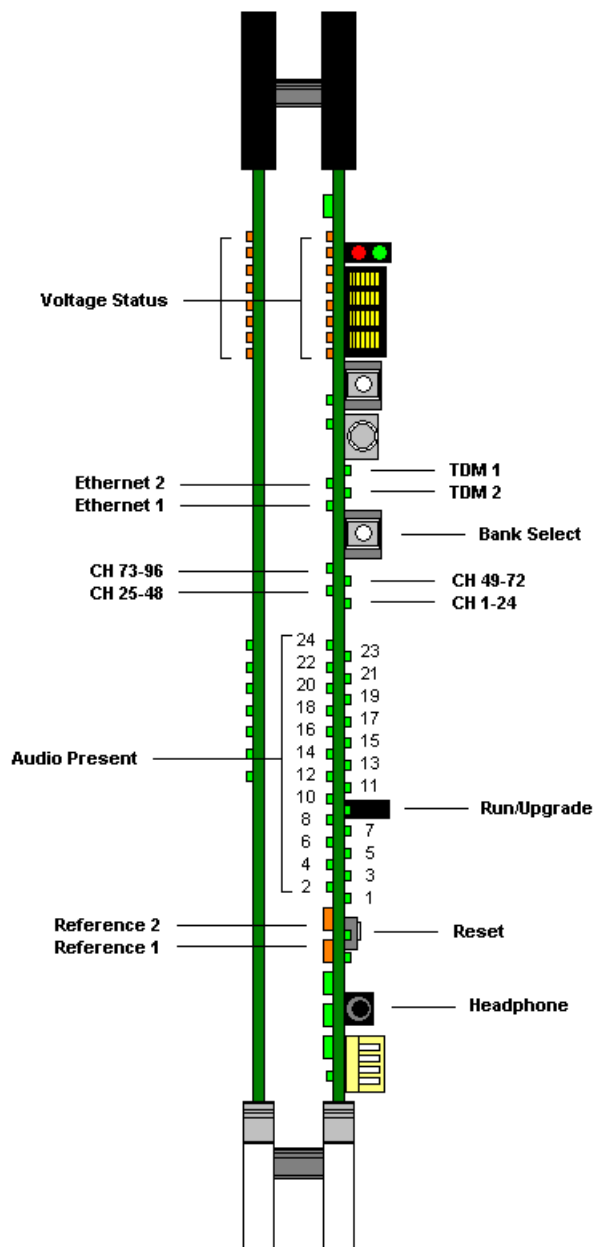


Figure 2-16: EMR-OP48-AA Front Card Edge

Component	Description
Voltage Status LEDs	This set of LEDs are amber in color and should always be ON
Ethernet 1 LED	This LED is green in color and flashes when there is activity on Ethernet port 1
Ethernet 2 LED	This LED is green in color and flashes when there is activity on Ethernet port 2
TDM 1	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 1 and is solid when it is the primary TDM
TDM 2	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 2 and is solid when it is the primary TDM
Bank Select Push Button	Selects the bank of inputs that are being monitored by the Audio Present LEDs
CH 1-24 LED	This LED is green in color and indicates that inputs 1 to 24 are currently being monitored by the Audio Present LEDs
CH 25-48 LED	This LED is green in color and indicates that inputs 25 to 48 are currently being monitored by the Audio Present LEDs
CH 49-72 LED	This LED is green in color and indicates that inputs 49 to 72 are currently being monitored by the Audio Present LEDs
CH 73-96 LED	This LED is green in color and indicates that inputs 73 to 96 are currently being monitored by the Audio Present LEDs
Audio Present LEDs	This set of LEDs are green in color and indicate the presence of audio on each respective input
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Reference 1 LED	This LED is amber in color and indicates the presence of a valid reference on input 1. It will flash rapidly if reference is present and slowly if it is the primary reference
Reference 2 LED	This LED is amber in color and indicates the presence of a valid reference on input 2. It will flash rapidly if reference is present and slowly if it is the primary reference
Reset Button	This button resets the module
Headphone Jack	This jack allows a user to monitor audio signals from a pair of headphones

Table 2-10: Description of EMR-OP48-AA Card Edge

2.2.4.3. Configuration and Monitoring Menu

EMR-OP48-AA contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

<i>Network Configuration</i>	Configuration of Network 1 and 2
<i>SNMP Configuration</i>	Configuration of Simple Network Management Protocol.
<i>Audio Configuration</i>	View of audio channel status, frame reference and board information. Configuration of Headphone port, Tone Gen, Audio Monitor and MADI Mode.
<i>Audio ADC/DAC Configuration</i>	View of Alignment and Calibration tables. Configuration of Alignment.
<i>Set TDM Version</i>	Configuration of TDM versions (TDM v2 is for future use)
<i>Audio Monitor Cast Service Config</i>	Configuration of Cast service
<i>Trace - Engineering Only</i>	Configured under the supervision of Evertz technical support staff only
<i>Engineering Debug Utility</i>	Accessed by Evertz technical support staff only



Note: The default TDM version has to be set to V1; TDM V2 is for future use.


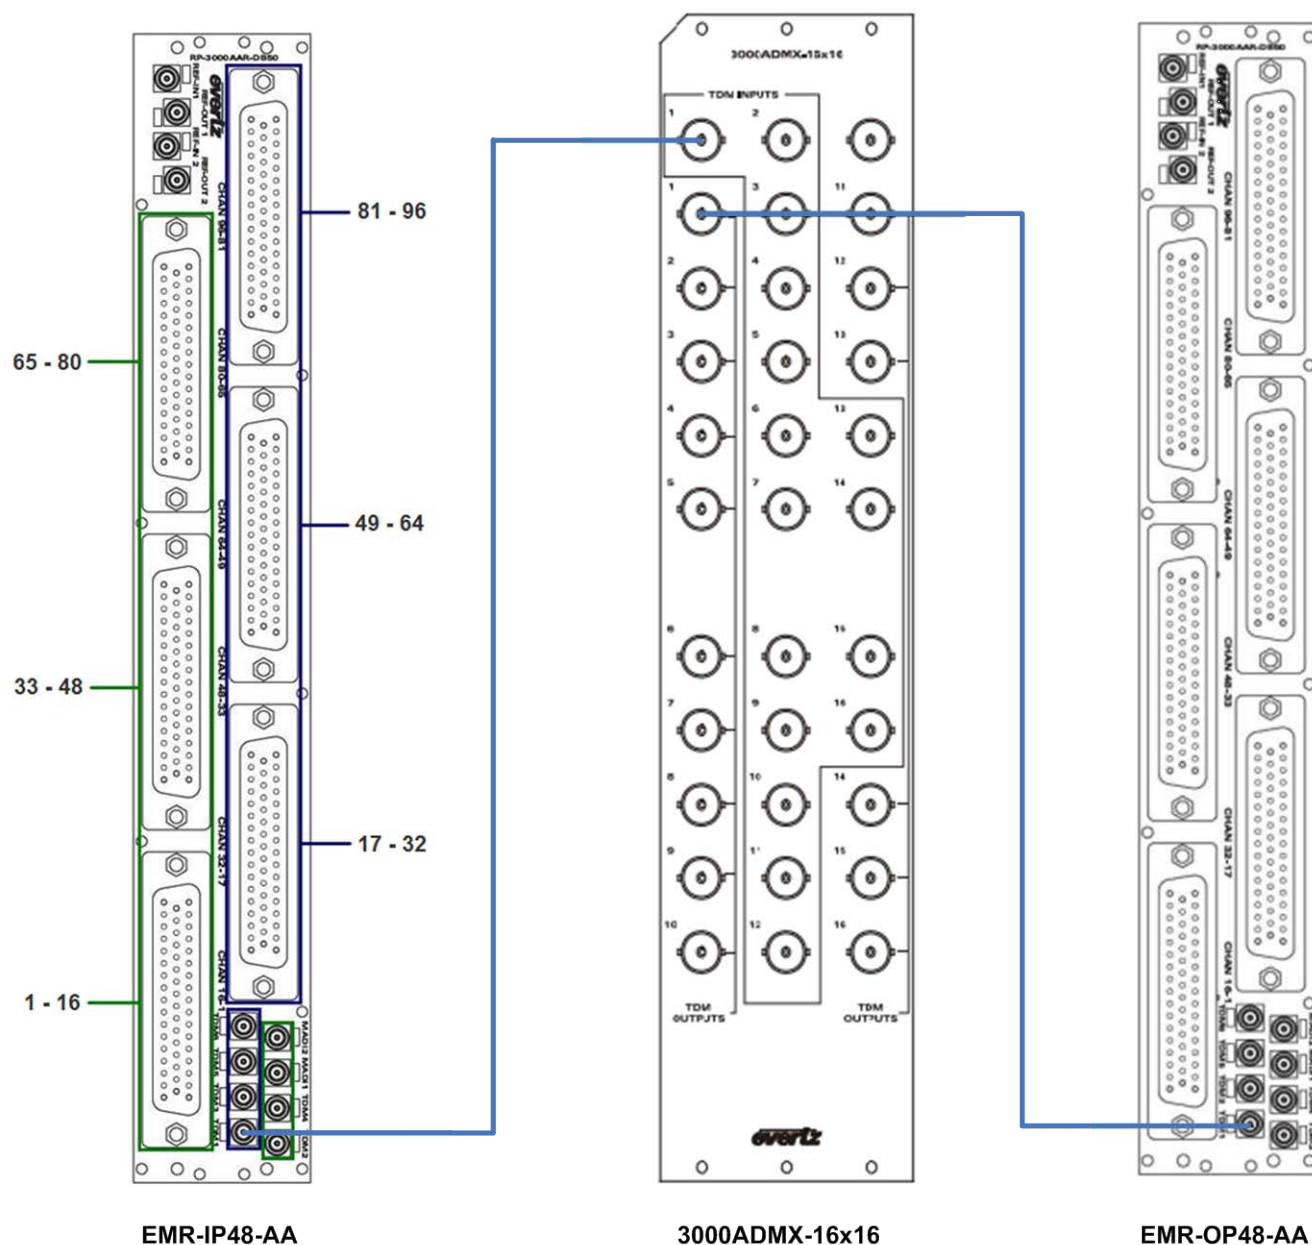


Figure 2-17: Basic EMR-AA Setup with 3000 ADMX

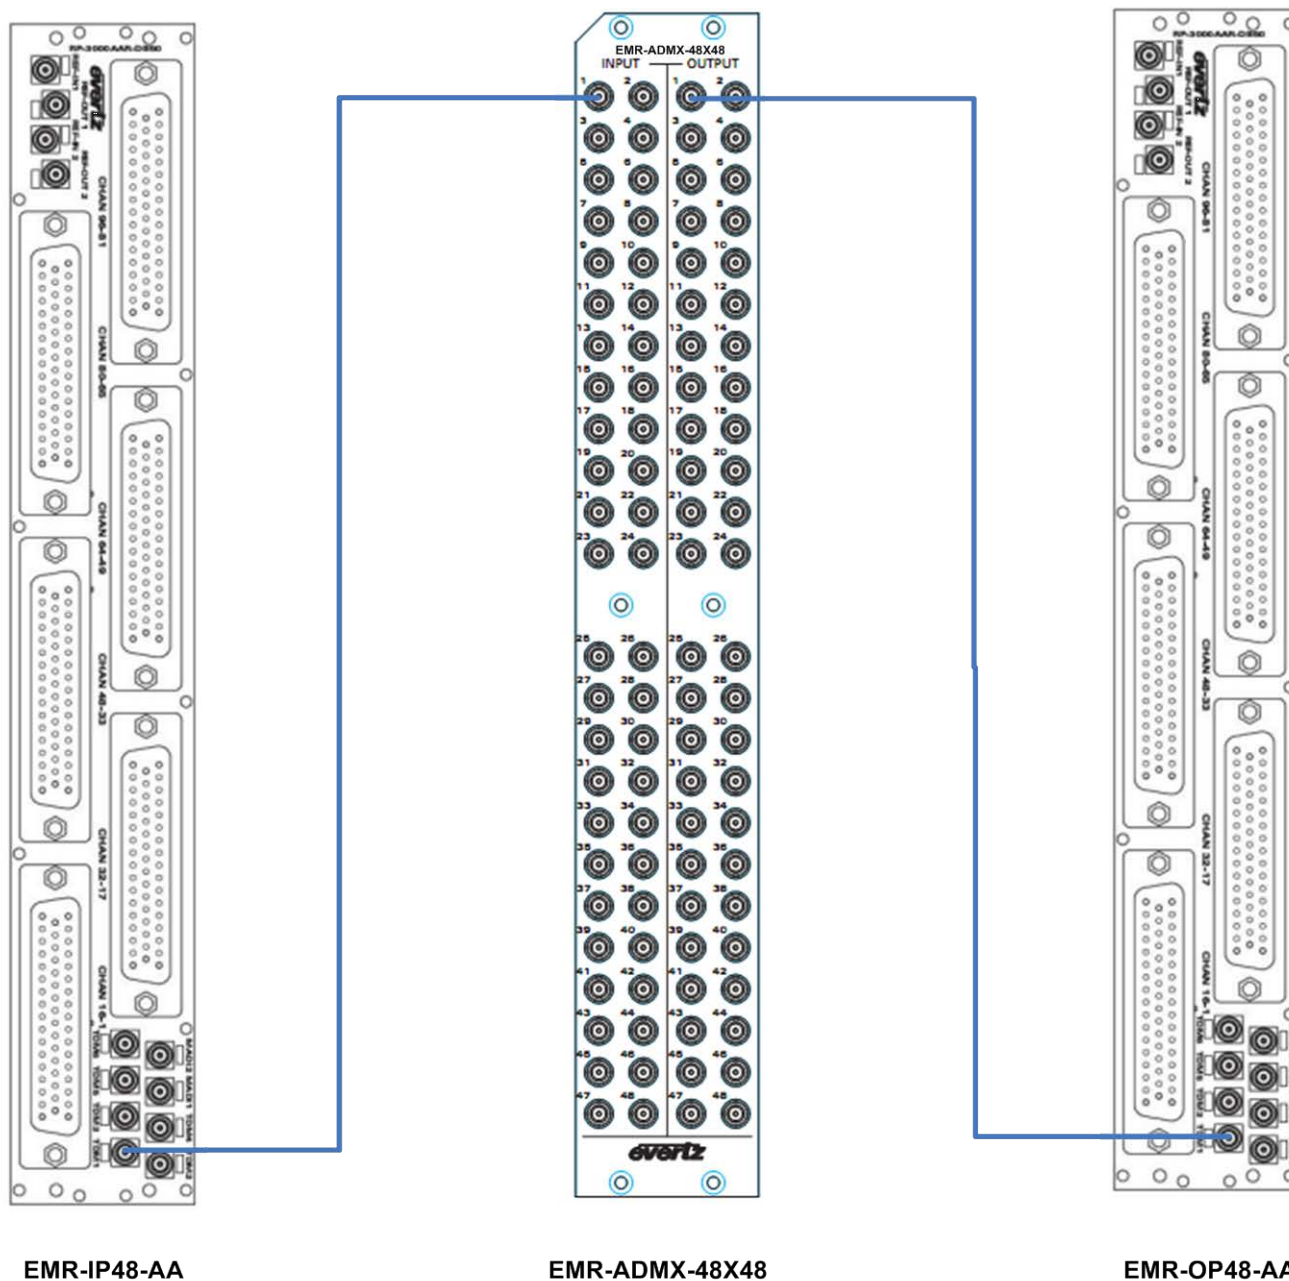

EMR-IP48-AA

EMR-ADMX-48X48

EMR-OP48-AA

Figure 2-18: Basic EMR-AA Setup with ADMX-48X48

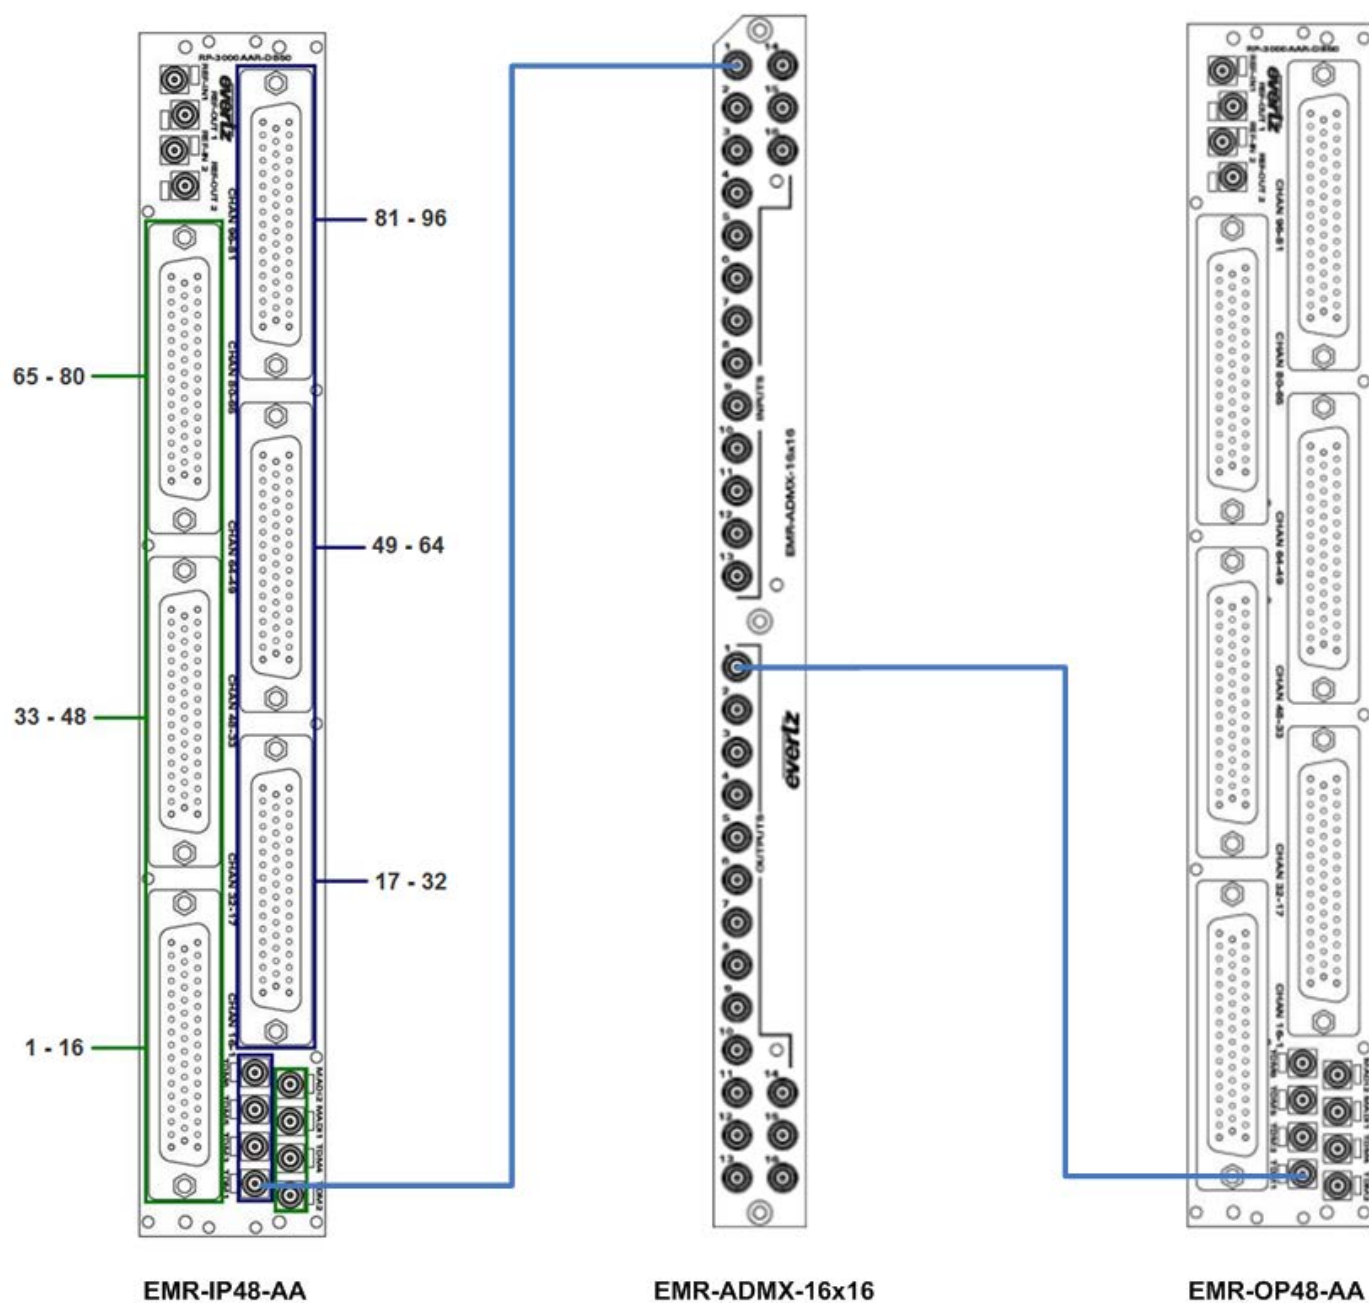


Figure 2-19: Basic EMR-AA Setup without ADMX-16X16/A

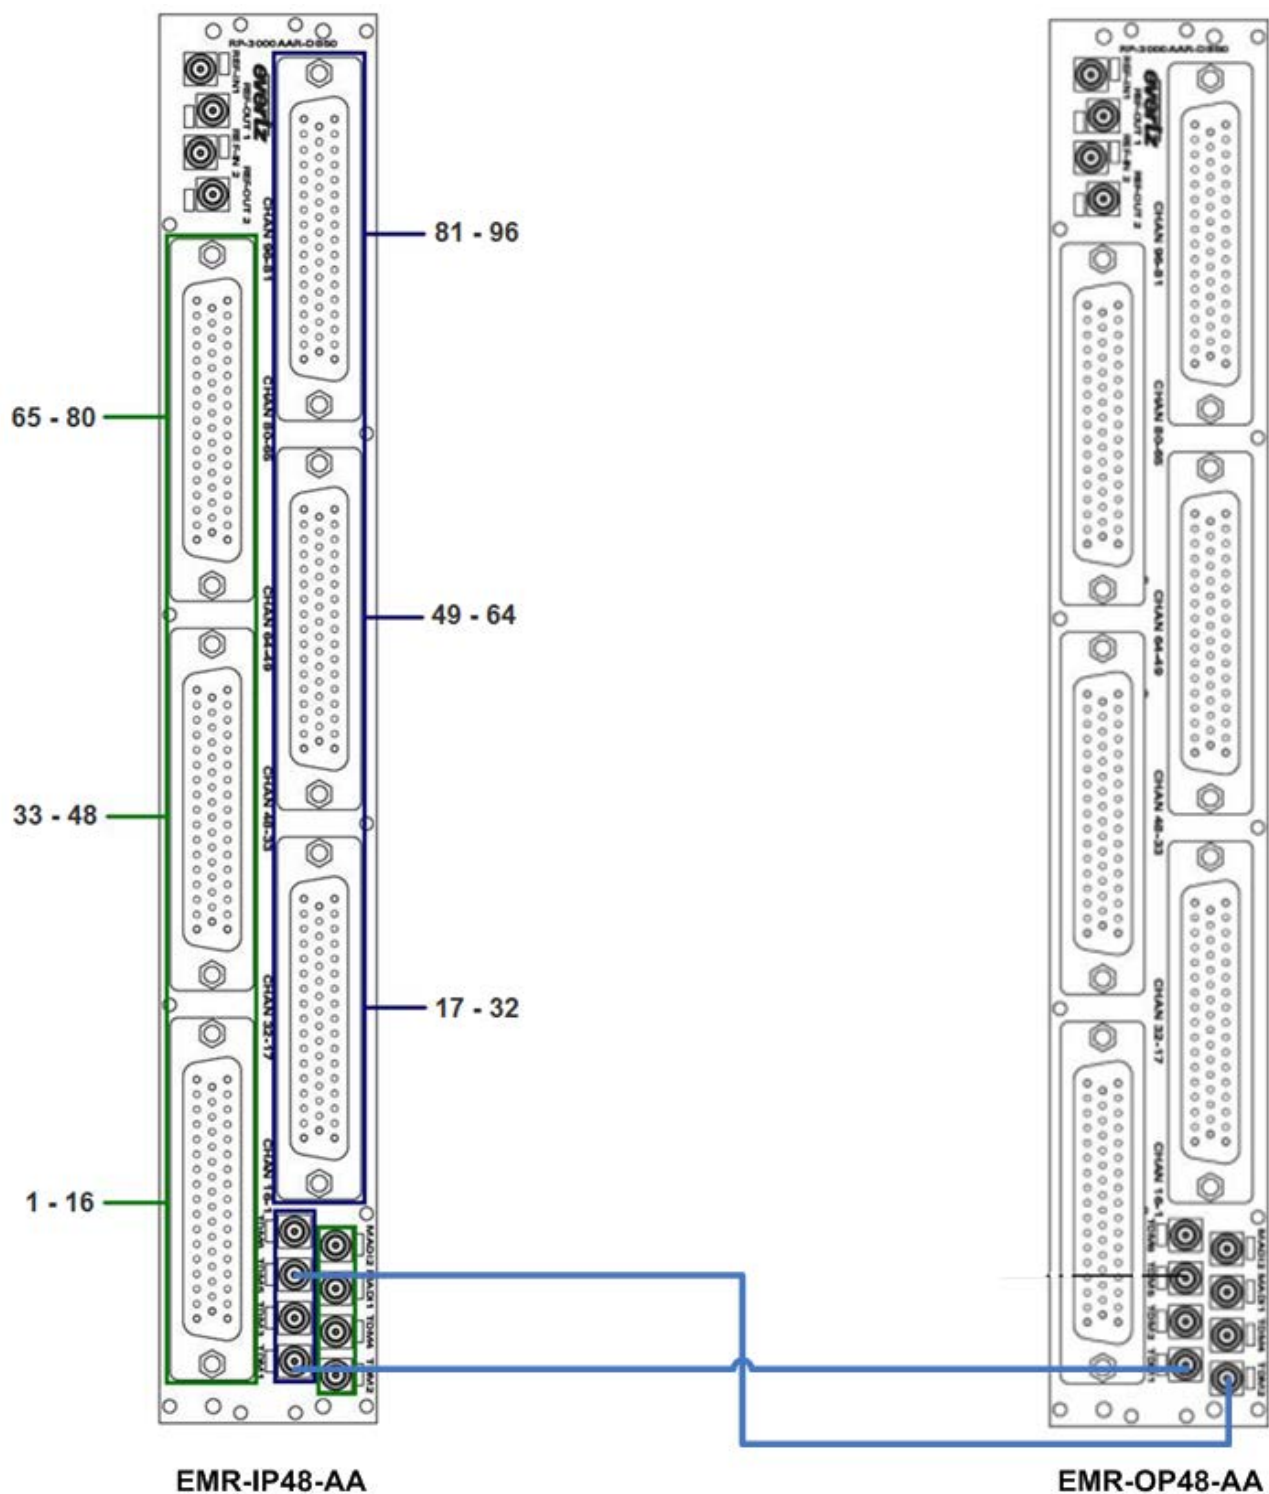


Figure 2-20: Basic EMR-AA Setup without ADMX

2.2.5. EMR-ADMX-16X16/A, EMR-ADMX-48X48 and 3000ADMX-16X16 Crosspoint Modules

The EMR-ADMX-16X16/A, EMR-ADMX-48X48 and 3000ADMX-16X16 are the crosspoint cards for the EMR. They utilize a TDM core to allow up to 30720x30720 mono audio channels to be routed. EMR-ADMX-16X16/A and the 3000ADMX-16X16 have 16 TDM inputs and EMR-ADMX-48X48 has 48 TDM inputs which allow them to be interfaced with any of the EMR input modules or AVIP and 16 TDM and 48 TDM outputs that allow them to be interfaced with any of the EMR output modules or AVOP.

The EMR-ADMX-16X16/A rear panel occupies 1 slot in a frame and uses DIN 1.0/2.3 connectors, EMR-ADMX-48X48 rear panel occupies 2 slots in a frame and uses DIN 1.0/2.3 connectors while the 3000ADMX-16X16 rear panel occupies 3 slots in a frame and has BNC connectors. All three plates are shown in Figure 2-21.

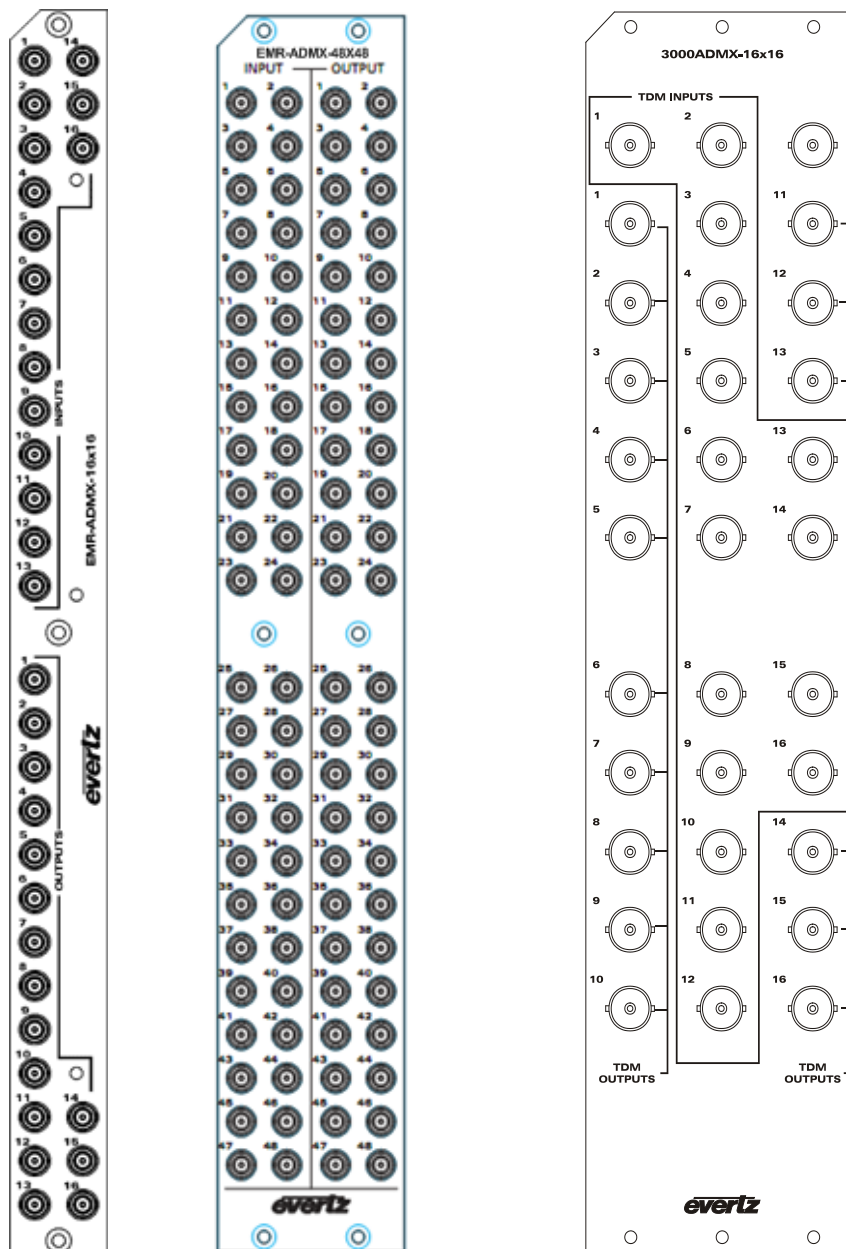


Figure 2-21: EMR-ADMX-16X16/A (left), EMR-ADMX-48X48 (center) and 3000ADMX-16X16 (right)

2.2.5.1. Front Card Edge Controls and LEDs

The EMR-ADMX-48X48, EMR-ADMX-16X16/A and the 3000ADMX-16X16 front card edges have some key controls and indicators that can help in the installation and debugging processes. Figure 2-22 and Table 2-11 show the card edges and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

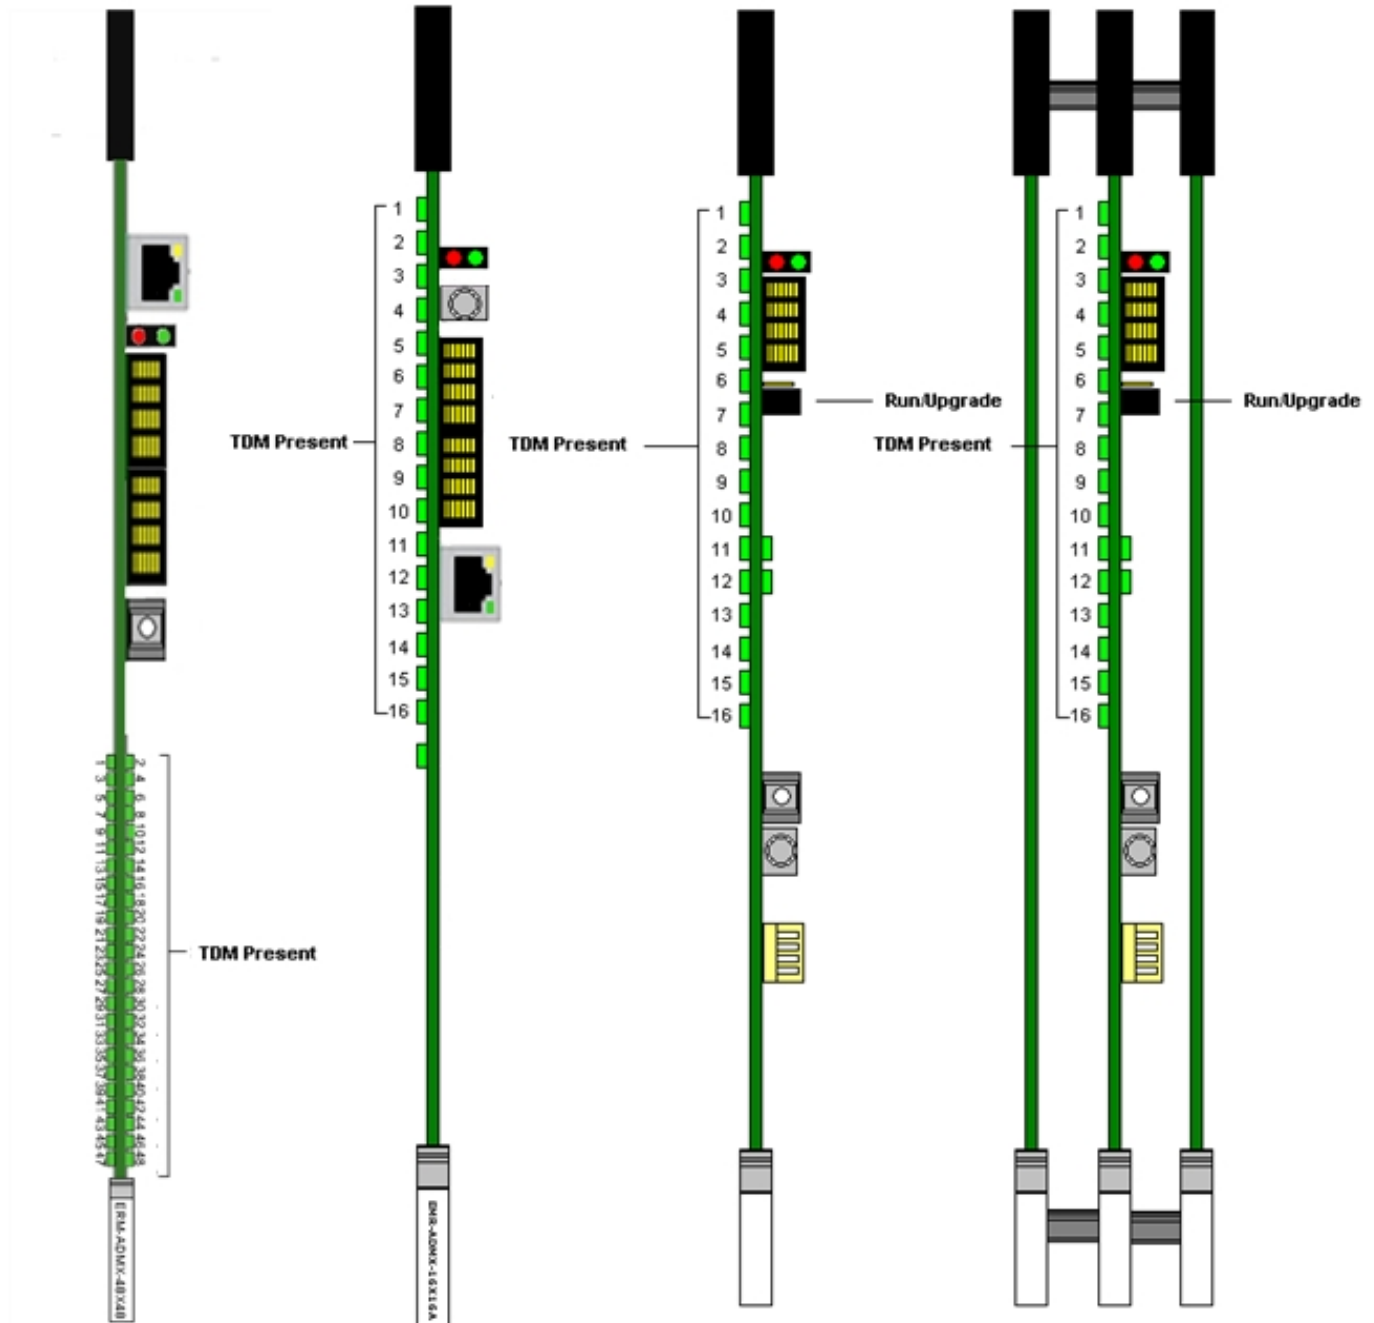


Figure 2-22: From left to right EMR-ADMX-48X48, EMR-ADMX-16X16A, EMR-ADMX-16X16 and 3000ADMX-16X16) Front Card Edges

Component	Description
TDM Present LEDs	This set of LEDs are green in color and indicate the presence of a valid TDM connection on each respective input
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware

Table 2-11: Description of EMR-ADMX-16X16 and 3000ADMX-16X16 Card Edges

Component	Description
TDM Present LEDs	Red No signal or link error
	Blue Audio packet without LSID
	Green Audio packet with LSID
	Amber LSID with no Audio packet
Ethernet Port	No function
Rotary Switch	Switches the display to view, FIFO/Mem, Version, IP address A, IP address B, Input error and Interlink error

Table 2-12: Description of ADMX-48X48 and ADMX-16X16A Card Edges



Note: If it appears that the TDM presence LEDs do not light up with valid TDM connections, ensure that the module is firmly connected to the rear plate.

2.2.5.2. EMR-ADMX-48X48 and EMR-ADMX-16X16A User Commands:

Menus in ADMX-48X48 and ADMX-16X16A are command based. Important commands are listed in the table below in order to configure some parameter in the card:

ifconfig 0 inet x.x.x.x netmask y.y.y.y broadcast z.z.z.z	Configures Network 1
ifconfig 1 inet x.x.x.x netmask y.y.y.y broadcast z.z.z.z	Configures Network 2
ifconfig	Displays the current network setting
iproute add default xxx.xxx.xxx.xxx	Sets the default gateway address
iproute load	Displays the current default gateway address
iproute add default 0.0.0.0	Removes the default gateway
TDM version 1	Sets TDM to version 1 (Reboot required)
TDM version 2	Sets TDM to version 2 (Future use)
TDM version	Displays the current TDM version
version	Displays the installed firmware version
reset	Resets the unit



Note: The default TDM version is V1. TDM V2 is for future use.

2.2.6. EMR-IP16-MADI and 3000MADI16-TDM4 MADI Input Modules

The EMR-IP16-MADI and 3000MADI16-TDM4 are MADI audio input cards for the EMR. They support 16 MADI inputs and 4 TDM outputs. Each MADI input can support both 64 channels and 56 channels MADI.

Of the 4 TDM outputs, only outputs 1 and 2 are required for operation. Outputs 3 and 4 can be used as redundant TDM connections for systems that have more than 1 crosspoint module. TDM output 1 carries 512 audio signals corresponding to MADI inputs 1-8. TDM output 2 carries 512 audio signals corresponding to MADI inputs 9-16.

The EMR-IP16-MADI rear panel occupies 1 slot in a frame and has DIN 1.0/2.3 connectors, while the 3000MADI16-TDM4 rear panel occupies 3 slots in a frame and has BNC connectors. Both are shown in Figure 2-23.

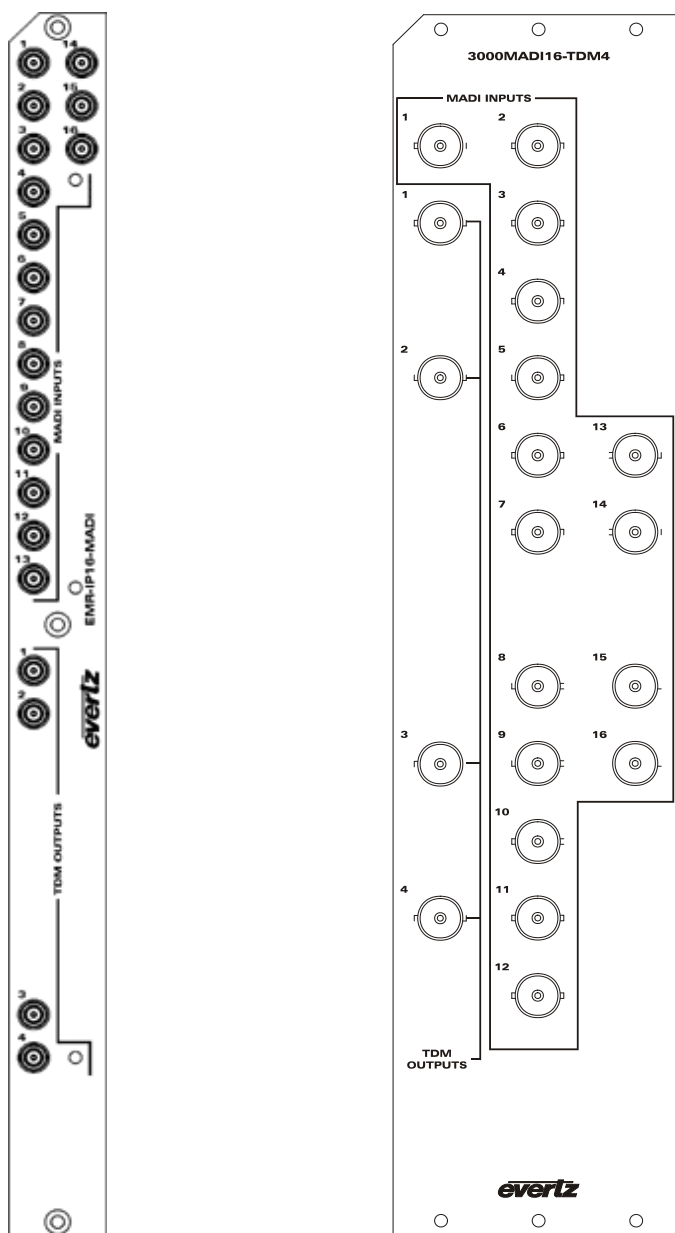


Figure 2-23: EMR-IP16-MADI (left) and 3000MADI16-TDM4 (right) Rear Plates

2.2.6.1. Front Card Edge Controls and LEDs

The EMR-IP16-MADI and 3000MADI16-TDM4 front card edges have some key controls and indicators that can help in the installation and debugging processes. Figure 2-24 and Table 2-13 show the card edges and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

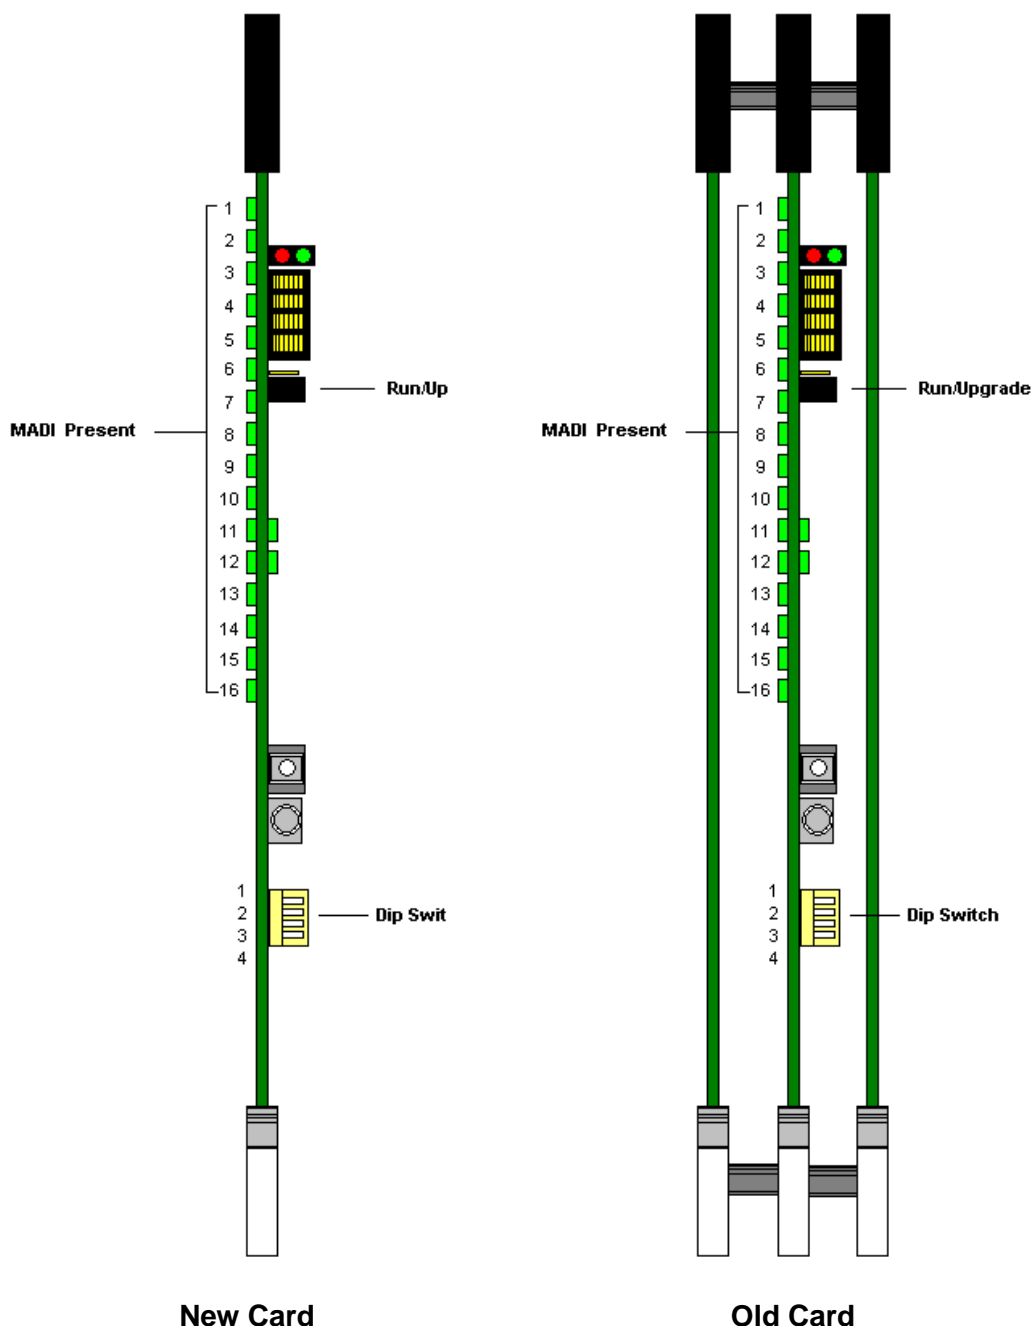


Figure 2-24: EMR-IP16-MADI (left) and 3000MADI16-TDM4 (right) Front Card Edges

Component	Description
MADI Present LEDs	This set of LEDs are green in color and indicate the presence of a valid MADI connection on each respective input
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Dip Switch	This set of switches control the mode of the device. Dip 1 must be up and 3-4 must be down.

Table 2-13: Description of EMR-IP16-MADI and 3000MADI16-TDM4 Card Edge



Note: For normal operation of the 3000MADI16-TDM4 module, dip switch 1 must be set to the up position (OPEN) and dip switches 2-4 must be set to the down position.

2.2.6.2. Configuration and Monitoring Menu

EMR-IP16-MADI contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

<i>Network Configuration</i>	Configuration of Network 1
<i>Audio Diagnostics</i>	Shows the MADI Input status, Current route map and Genlock status
<i>Engineering Menu</i>	Accessed by Evertz technical support staff only

2.2.7. EMR-OP16-MADI and 3000TDM4-MADI16 MADI Output Modules

The EMR-OP16-MADI and 3000TDM4-MADI16 are MADI audio output cards for the EMR. They support 4 TDM inputs and 16 MADI outputs. Each MADI output supports 56 or 64 channel MADI depending on a setting in the serial menu.

Of the 2 TDM inputs, only inputs 1 and 2 are required for operation. Inputs 3 and 4 can be used as redundant TDM connections for systems that have more than 1 crosspoint module. TDM input 1 carries 512 audio signals corresponding to MADI outputs 1-8. TDM input 2 carries 512 audio signals corresponding to MADI outputs 9-16.

The EMR-OP16-MADI rear panel occupies 1 slot in a frame and has DIN 1.0/2.3 connectors. The 3000TDM4-MADI16 rear panel occupies 3 slots in a frame and has BNC connectors. Both are shown in Figure 2-25 below.

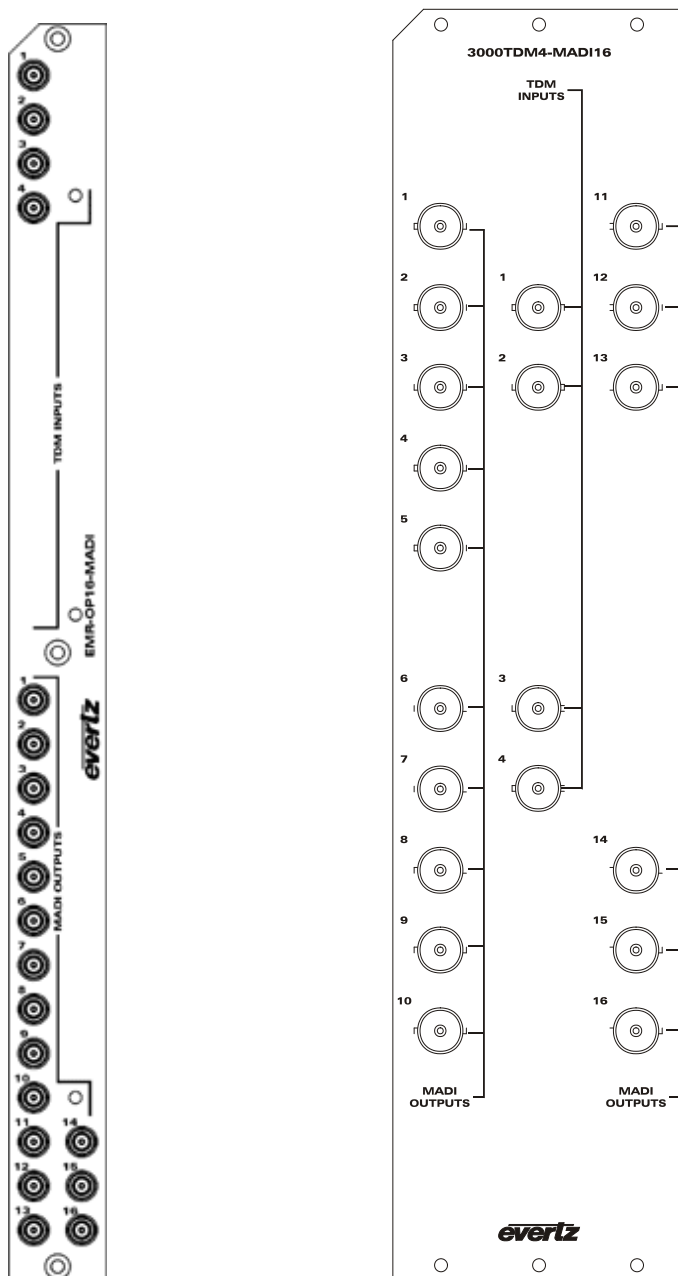


Figure 2-25: EMR-OP16-MADI (left) and 3000TDM4-MADI16 (right) Rear Plates

2.2.7.1. Front Card Edge Controls and LEDs

The EMR-OP16-MADI and 3000TDM4-MADI16 front card edges have some key controls and indicators that can help in the installation and debugging processes. Figure 2-26 and Table 2-14 show the card edges and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

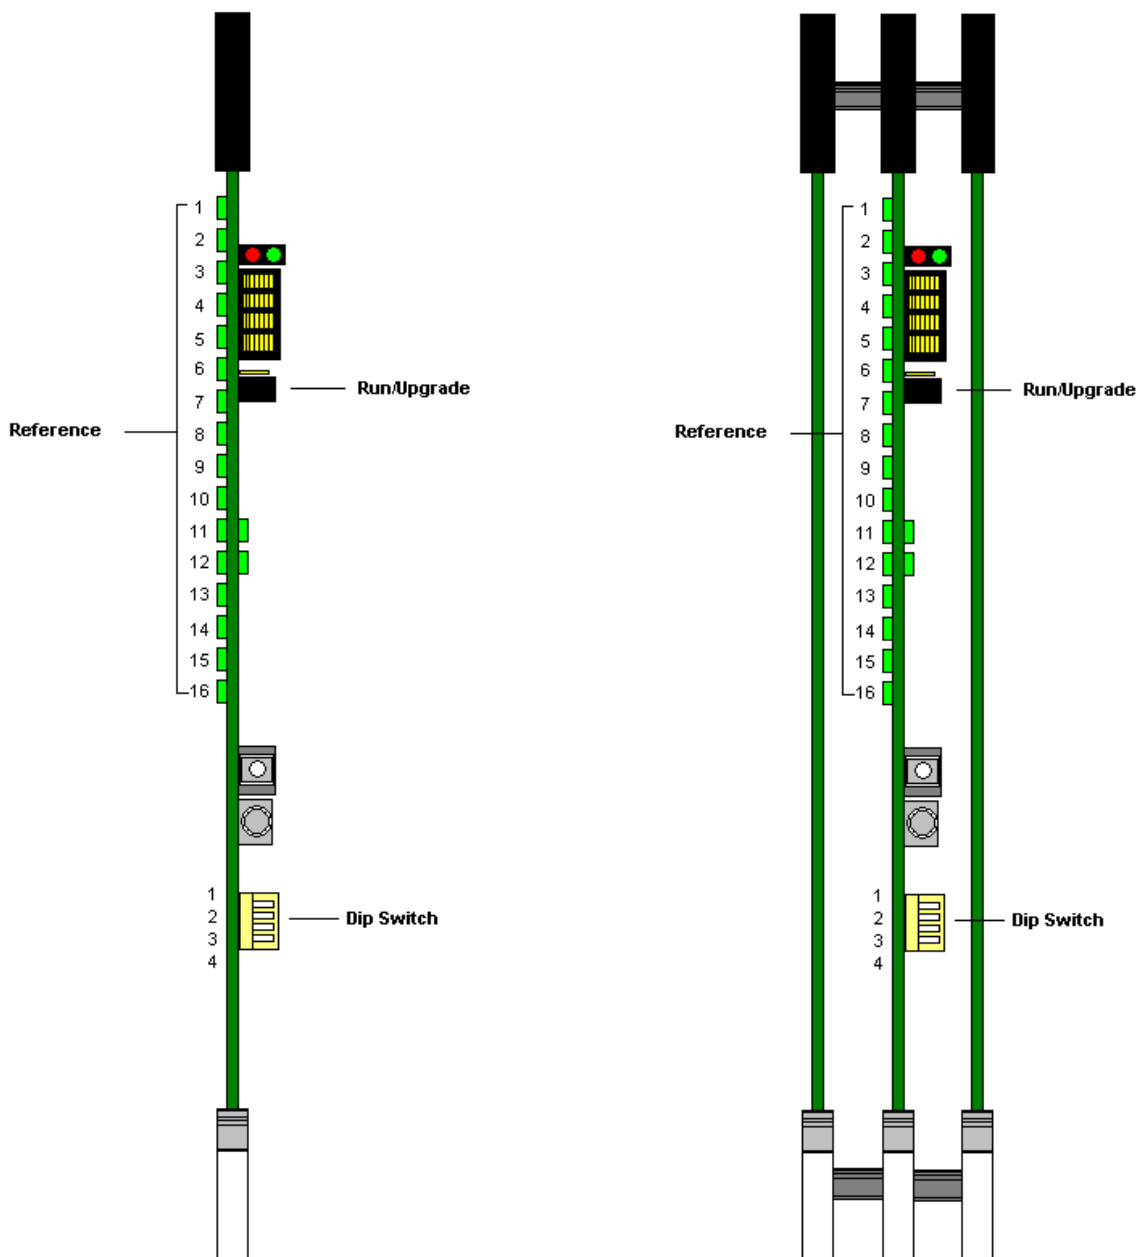


Figure 2-26: EMR-OP16-MADI (left) and 3000TDM4-MADI16 (right) Front Card Edges

Component	Description
Reference LEDs	These sets of LEDs are green in color and will in 1 second interval if a valid reference is detected. If no reference is detected they will cycle between on for 1 second and off for 3 seconds.
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Dip Switch	This set of switches control the mode of the device. Dip 1 must be up and 3-4 must be down.

Table 2-14: Description of EMR-OP16-MADI and 3000TDM4-MADI16 Card Edges



Note: For normal operation of the 3000TDM4-MADI16 module, dip switch 1 must be set to the up position (OPEN) and dip switches 2-4 must be set to the down position.

2.2.7.2. Configuration and Monitoring Menu

EMR-OP16-MADI contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

<i>Network Configuration</i>	Configuration of Network 1
<i>MADI output Format</i>	Configuration of MADI output to 56 Channels or 64 Channels
<i>Audio Diagnostics</i>	Shows current route map, LSID presence status and data rate
<i>Engineering Menu</i>	Accessed by Evertz technical support staff only

2.2.8. EMR-IP96 (48)-LTC Time Code Input Module

The EMR-IP96 (48)-LTC is a time code input card for the EMR. It supports 96 or 48 balanced LTC inputs.

The EMR-IP96 (48)-LTC input card does not require the use of a 3000ADMX-16X16 for systems with less than 768 LTC inputs. Each LTC input card connects directly to each LTC output card via one of 8 identical TDM outputs.

The EMR-IP96-LTC rear panel occupies 2 slots in a frame and has 50-pin D-Sub female connectors as shown in Figure 2-27. The LTC inputs are interfaced by the six 50-pin D-Sub female connectors. Each connector supports 16 LTC input signals. The pin out for each connector is shown in Table 2-15. The TDM outputs all use DIN 1.0/2.3 connectors.

The EMR-IP48-LTC uses the same rear plate but only the first three 50-pin D-Sub connectors are enabled.



Note: The IP and OP LTC cards use balanced rear plates.


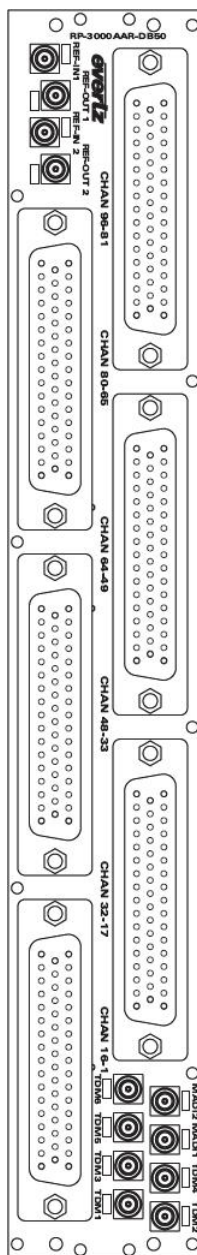


Figure 2-27: EMR-IP96 (48)-LTC Rear Plate

2.2.8.1. LTC Input D50 Connector – Pin Out

The EMR-IP96 (48)-LTC time code cards use female D50 connectors, with each connector carrying 16 signals. Table 2-15 outlines the pinout for the connectors.

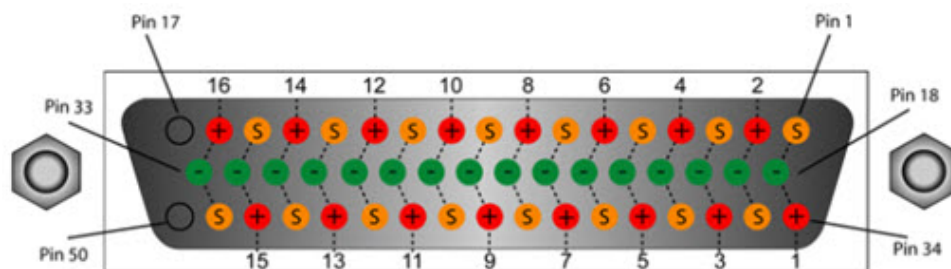

D50 LTC Pin-Out Table			
Signal	+ve Pin	-ve Pin	Screen
1	34	18	1
2	2	19	35
3	36	20	3
4	4	21	37
5	38	22	5
6	6	23	39
7	40	24	7
8	8	25	41
9	42	26	9
10	10	27	43
11	44	28	11
12	12	29	45
13	46	30	13
14	14	31	47
15	48	32	15
16	16	33	49

Table 2-15: LTC Input Pin-Out

2.2.8.2. Front Card Edge Controls and LEDs

The EMR-IP96 (48)-LTC front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-28 and Table 2-16 show the card edge and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

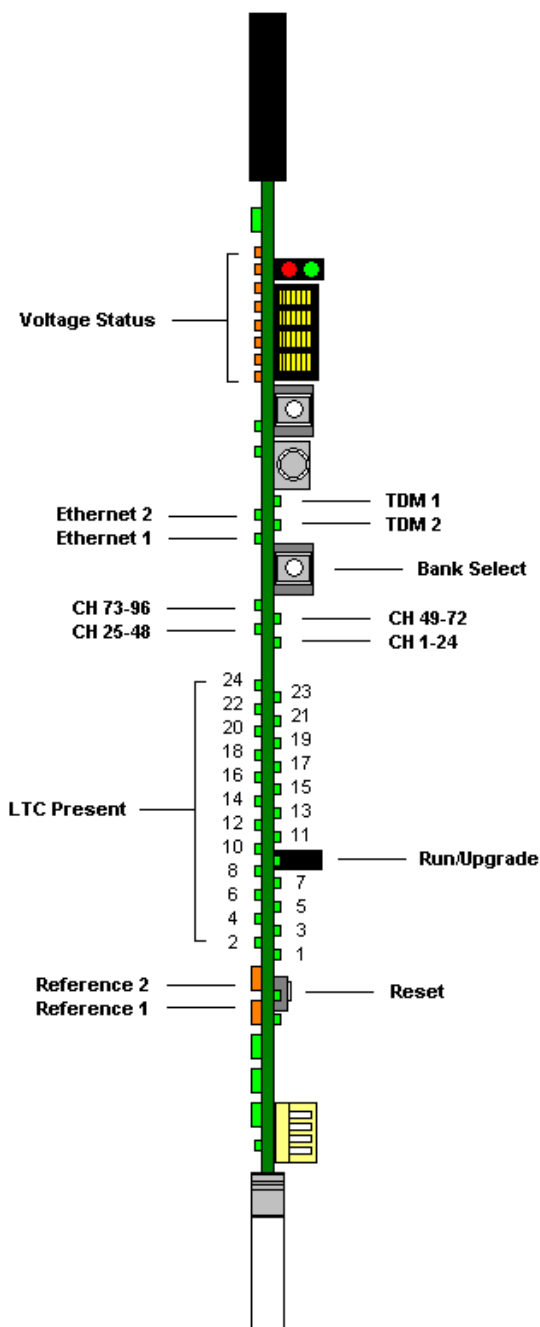


Figure 2-28: EMR-IP96 (48)-LTC Front Card Edge

Component	Description
Voltage Status LEDs	This set of LEDs are amber in color and should always be ON
Ethernet 1 LED	This LED is green in color and flashes when there is activity on Ethernet port 1
Ethernet 2 LED	This LED is green in color and flashes when there is activity on Ethernet port 2
TDM 1	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 1 and is solid when it is the primary TDM
TDM 2	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 2 and is solid when it is the primary TDM
Bank Select Push Button	Selects the bank of inputs that are being monitored by the LTC Present LEDs
CH 1-24 LED	This LED is green in color and indicates that inputs 1 to 24 are currently being monitored by the LTC Present LEDs
CH 25-48 LED	This LED is green in color and indicates that inputs 25 to 48 are currently being monitored by the LTC Present LEDs
CH 49-72 LED	This LED is green in color and indicates that inputs 49 to 72 are currently being monitored by the LTC Present LEDs
CH 73-96 LED	This LED is green in color and indicates that inputs 73 to 96 are currently being monitored by the LTC Present LEDs
LTC Present LEDs	This set of LEDs are green in color and indicate the presence of LTC on each respective input
Reference 1 LED	This LED is amber in color and indicates the presence of a valid reference on input 1. It will flash rapidly if reference is present and slowly if it is the primary reference
Reference 2 LED	This LED is amber in color and indicates the presence of a valid reference on input 2. It will flash rapidly if reference is present and slowly if it is the primary reference
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Reset Button	This button resets the module

Table 2-16: Description of EMR-IP96 (48)-LTC Card Edge

2.2.8.3. Configuration and Monitoring Menu

EMR-IP48-LTC contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

<i>Network Configuration</i>	Configuration of Network 1 and 2
<i>SNMP Configuration</i>	Configuration of Simple Network Management Protocol.
<i>LTC Port Configuration</i>	Views LTC port routing, port status table, frame reference status, frame reference and plink status.
<i>Trace - Engineering Only</i>	Configured under the supervision of Evertz technical support staff only
<i>Engineering Debug Utility</i>	Accessed by Evertz technical support staff only

2.2.9. EMR-OP96 (48)-LTC TimeCode Output Module

The EMR-OP96 (48)-LTC is a time code output card for the EMR. It supports 96 or 48 balanced LTC outputs.

The EMR-OP96 (48)-LTC output card does not require the use of an ADMX for systems with less than 768 LTC outputs. Each LTC output card connects directly to each LTC input card via one of 8 TDM inputs.

The EMR-OP96-LTC rear panel occupies 2 slots in a frame and has 50-pin D-Sub female connectors as shown in Figure 2-29. The LTC outputs are interfaced by the six 50-pin D-Sub female connectors. Each connector supports 16 LTC output signals. The pin out for each connector is shown in Table 2-18. The TDM inputs all use DIN 1.0/2.3 connectors and are identified using Table 2-17. The sequence in which input cards are connected to the output card determine the sequence of the LTC inputs. The EMR-OP48-LTC uses the same rear plate but only the first three 50-pin D-Sub connectors are enabled.

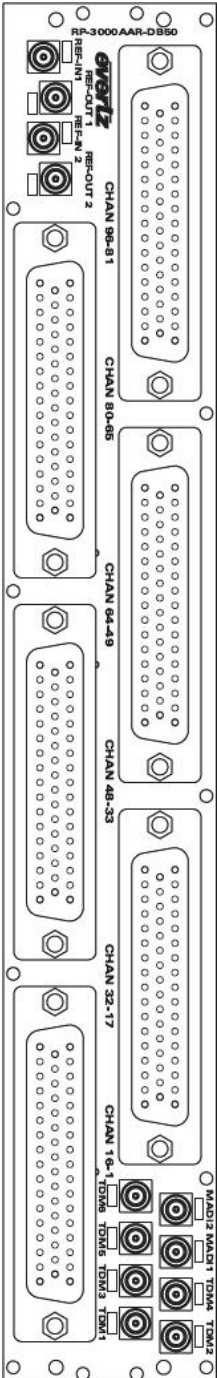



Figure 2-29: EMR-OP96 (48)-LTC Rear Plate

Label	TDM 1	TDM 3	TDM 2	TDM 4	TDM 5	TDM 6	MADI 1	MADI 2
TDM Inputs	TDM IN 1	TDM IN 2	TDM IN 3	TDM IN 4	TDM IN 5	TDM IN 6	TDM IN 7	TDM IN 8
LTC Inputs	1-96	97-192	193-288	289-384	385-480	481-576	577-672	673-768

Table 2-17: EMR-OP96 (48)-LTC TDM Connections

2.2.9.1. LTC Output D50 Connector – Pin Out

The EMR-OP96 (48)-LTC time code cards use female D50 connectors, with each connector carrying 16 signals. Table 2-18 outlines the pinout for the connectors.

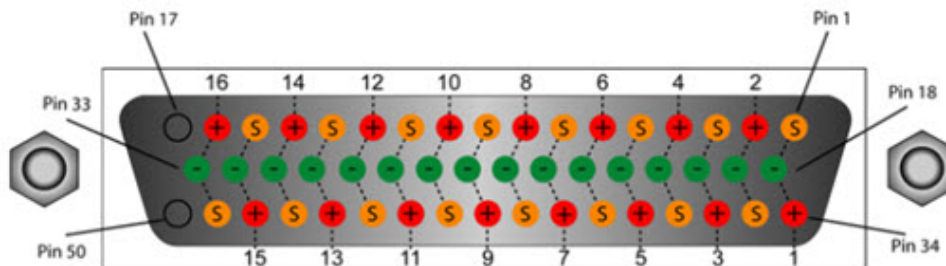

D50 LTC Pin-Out Table			
Signal	+ve Pin	-ve Pin	Screen
1	34	18	1
2	2	19	35
3	36	20	3
4	4	21	37
5	38	22	5
6	6	23	39
7	40	24	7
8	8	25	41
9	42	26	9
10	10	27	43
11	44	28	11
12	12	29	45
13	46	30	13
14	14	31	47
15	48	32	15
16	16	33	49

Table 2-18: LTC Output Pin-Out

2.2.9.2. Front Card Edge Controls and LEDs

The EMR-OP96 (48)-LTC front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-30 and Table 2-19 show the card edge and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

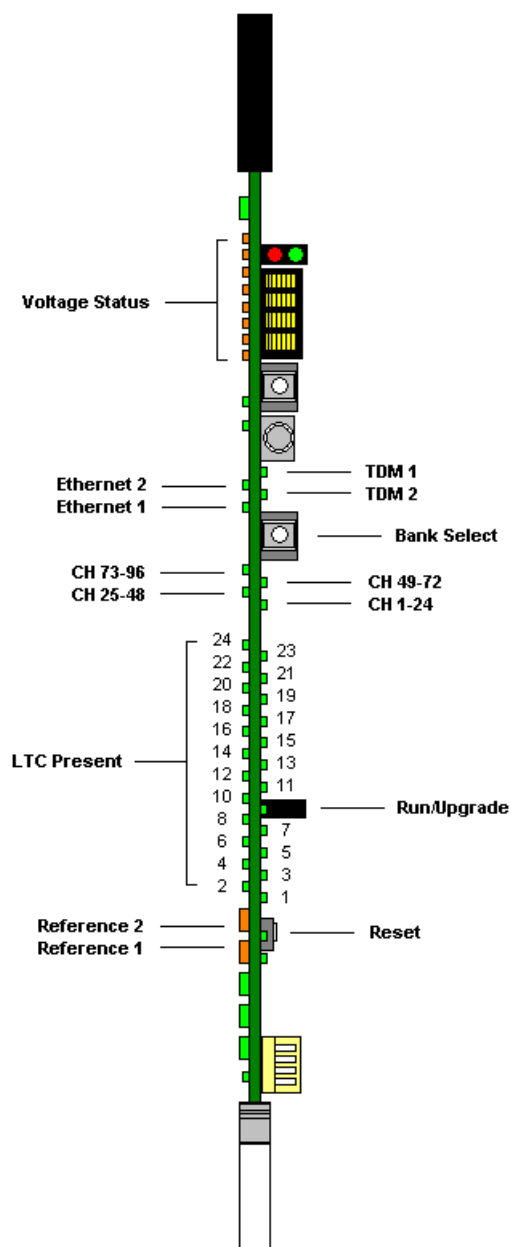


Figure 2-30: EMR-OP96 (48)-LTC Front Card Edge

Component	Description
Voltage Status LEDs	This set of LEDs are amber in color and should always be ON
Ethernet 1 LED	This LED is green in color and flashes when there is activity on Ethernet port 1
Ethernet 2 LED	This LED is green in color and flashes when there is activity on Ethernet port 2
TDM 1	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 1 and is solid when it is the primary TDM
TDM 2	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 2 and is solid when it is the primary TDM
Bank Select Push Button	Selects the bank of inputs that are being monitored by the LTC Present LEDs
CH 1-24 LED	This LED is green in color and indicates that inputs 1 to 24 are currently being monitored by the LTC Present LEDs
CH 25-48 LED	This LED is green in color and indicates that inputs 25 to 48 are currently being monitored by the LTC Present LEDs
CH 49-72 LED	This LED is green in color and indicates that inputs 49 to 72 are currently being monitored by the LTC Present LEDs
CH 73-96 LED	This LED is green in color and indicates that inputs 73 to 96 are currently being monitored by the LTC Present LEDs
LTC Present LEDs	This set of LEDs are green in color and indicate the presence of LTC on each respective input
Reference 1 LED	This LED is amber in color and indicates the presence of a valid reference on input 1. It will flash rapidly if reference is present and slowly if it is the primary reference
Reference 2 LED	This LED is amber in color and indicates the presence of a valid reference on input 2. It will flash rapidly if reference is present and slowly if it is the primary reference
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Reset Button	This button resets the module

Table 2-19: Description of EMR-OP96 (48)-LTC Card Edge

2.2.9.3. Configuration and Monitoring Menu

EMR-OP48-LTC contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

Network Configuration	Configuration of Network 1 and 2
SNMP Configuration	Configuration of Simple Network Management Protocol.
LTC Port Configuration	Views LTC port routing, port status table, frame reference status, Card ID, LTC output amplitude and plink status.
Trace - Engineering Only	Configured under the supervision of Evertz technical support staff only
Engineering Debug Utility	Accessed by Evertz technical support staff only


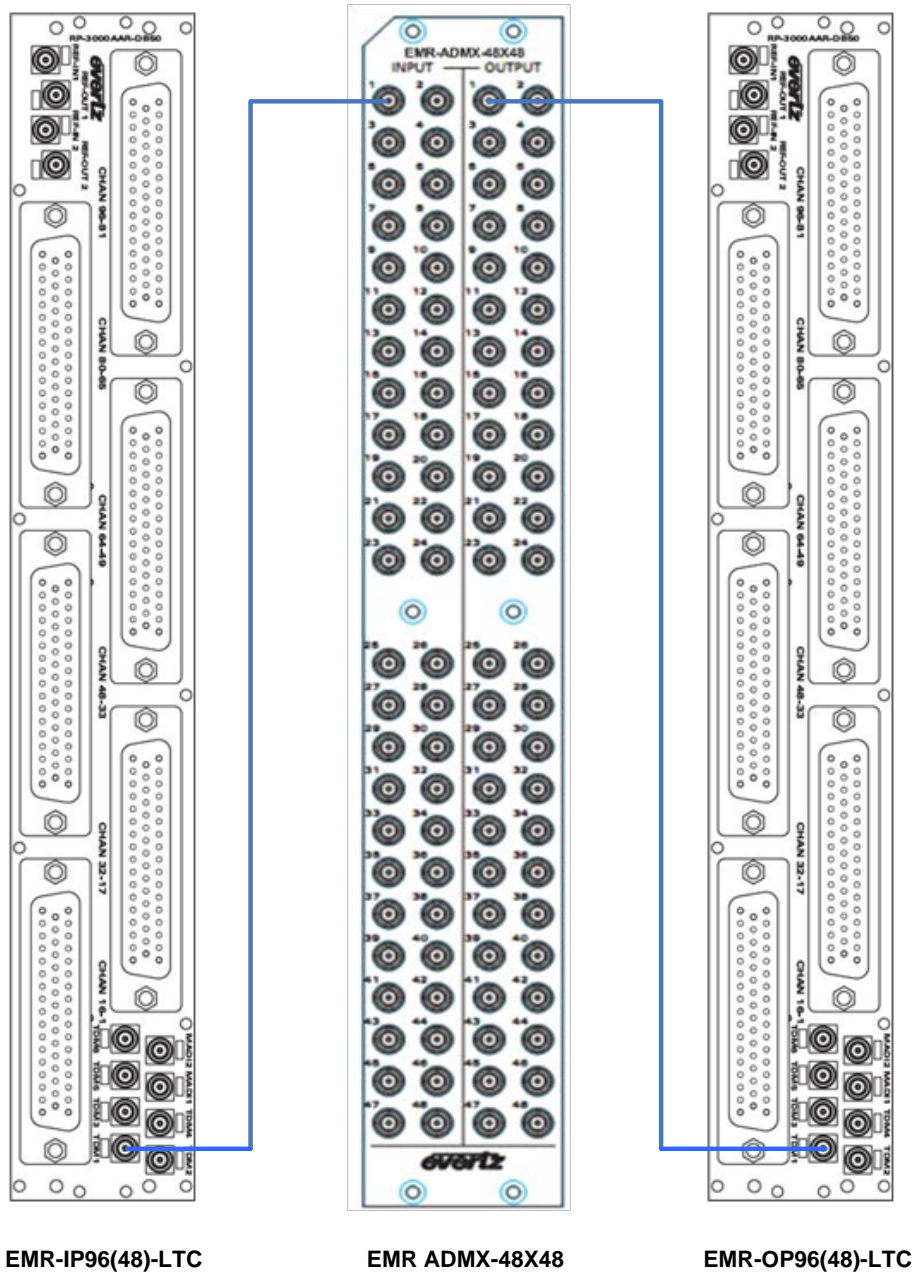


Figure 2-31: Basic LTC Setup with ADMX-48X48

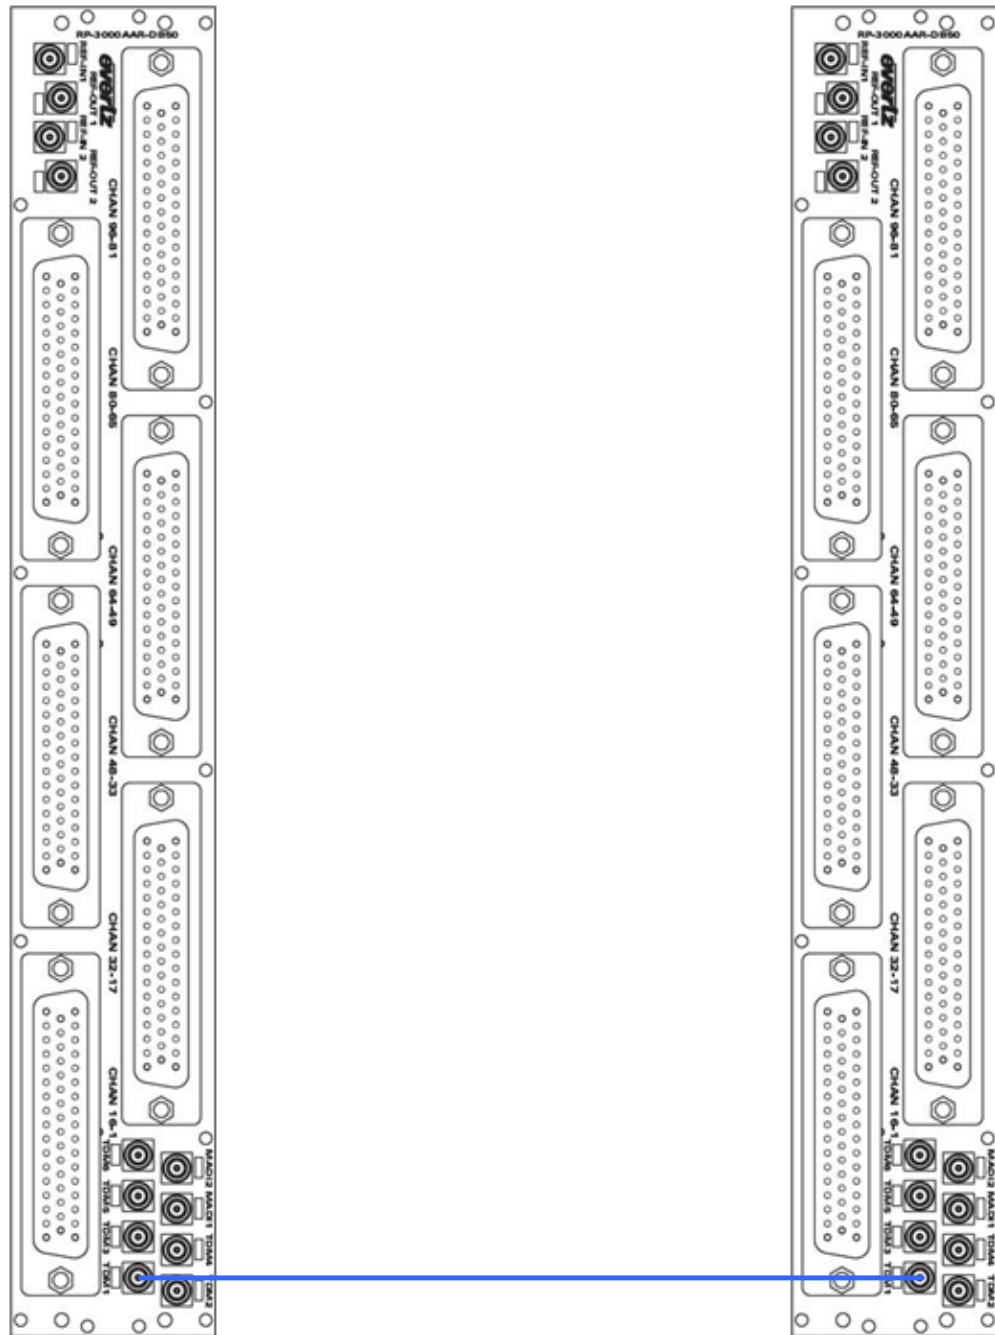

EMR-IP96(48)-LTC

EMR-OP96(48)-LTC

Figure 2-32: Basic LTC Setup without ADMX

2.2.10. EMR-PR48 Data Module

The EMR-PR48 is a data port router card for the EMR. Each of the 48 data ports that are available on the module can be configured to support either RS-422 or RS-232 serial protocols. Additionally, each port can be configured to be a master or slave so that devices can be set to controlling or controlled devices.

The EMR-PR48 rear panel occupies 2 slots in a frame and uses 50-pin D-Sub female connectors as shown in Figure 2-33. Each connector supports 8 serial data ports (RS-232 or RS-422).

The EMR-PR48 rear plate also has 6 TDM outputs and 6 TDM inputs via DIN 1.0/2.3 connectors. These connectors allow for further port expansion. The EMR-PR48 can expand to a system of 288 ports without the need for an ADMX crosspoint and 336x336 with an ADMX crosspoint. Details of the expansion are shown in Section 4.2.1.

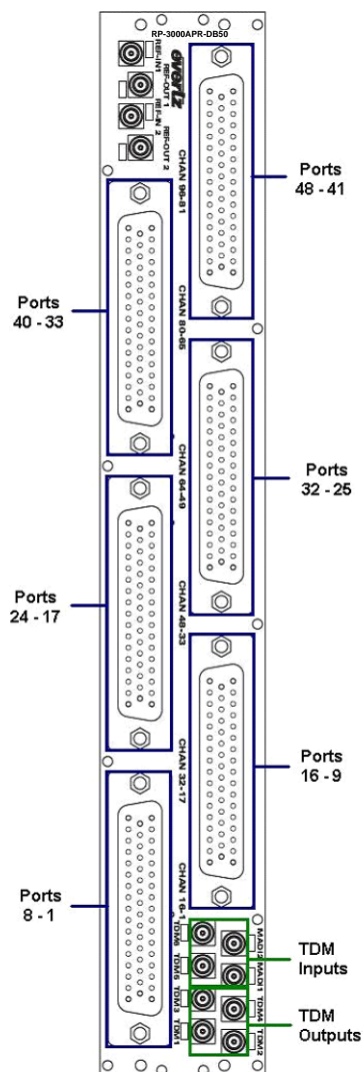


Figure 2-33: EMR-PR48 Rear Plate

Label	TDM 1	TDM 3	TDM 2	TDM 4	TDM 5	TDM 6	MADI 1	MADI 2
Actual I/O	TDM OUT 1	TDM OUT 2	TDM OUT 3	TDM OUT 4	TDM IN 1	TDM IN 2	TDM IN 3	TDM IN 4

Table 2-20: EMR-PR48 TDM Connections

2.2.10.1. Data Port D50 Connector – Pin Out

EMR-PR48 analog audio frames use female D50 connectors, with each connector carrying 8 data ports. The details of how each of the D50 pins map to each of the 8 ports is shown in Figure 2-34 .

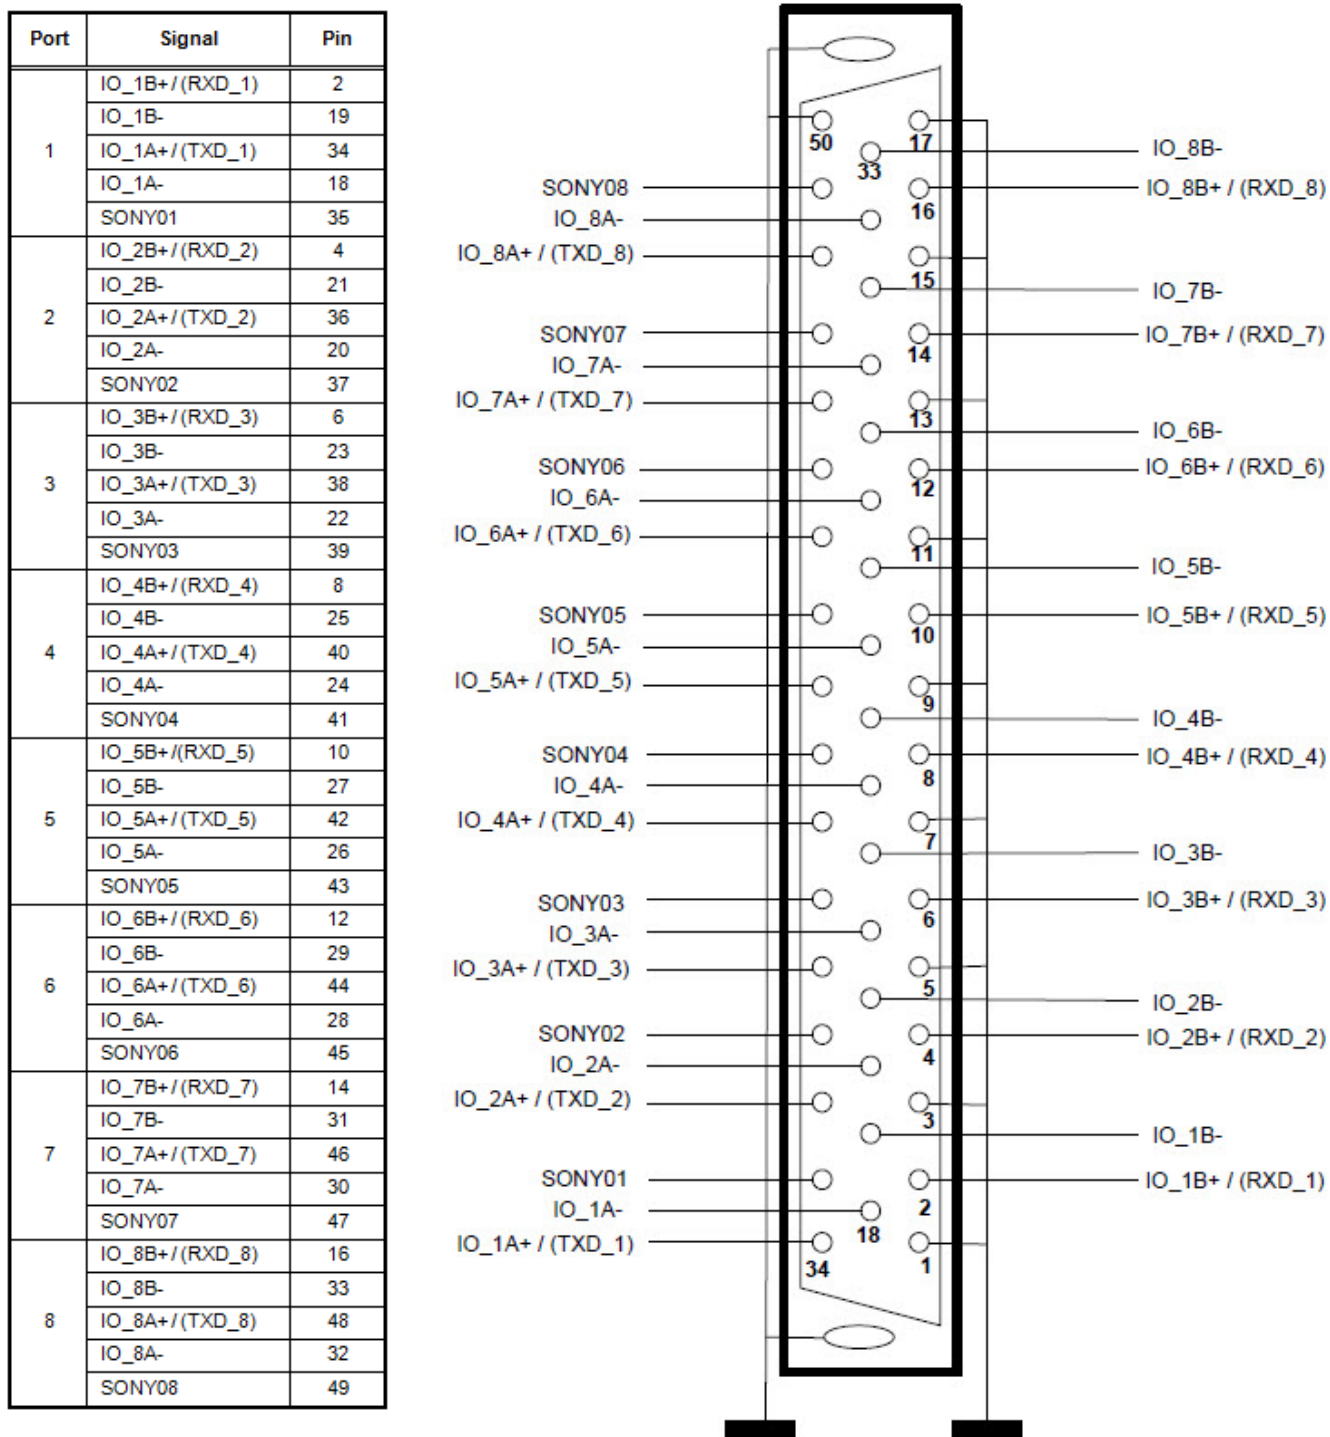


Figure 2-34: Data Port Pin-Out

The pins on each port can vary depending on whether the port is configured for RS-232 or RS-422 and whether the port is configured as a controller or a slave. Depending on these configuration parameters, the pin-outs for each port are different. Table 2-21 shows the mapping for each port with various configurations and the pinouts for the DB50 breakout cable for connecting the VTRs.

PR48-A Port Mode				Remote Unit		
	CTRL	SLAVE	D50	RS422	RS232	D9
1	Rx+	Tx+	2	Tx+	TXD	Pin 3
	Rx-	Tx-	19	Tx-		Pin 8
	Tx+	Tx+	34	Rx+	RXD	Pin 7
	Tx-	Tx-	18	Rx-		Pin 2
	Sony	Sony	35	Sony		Pin 5
	0v	0v	1	0v	0v	Pin 4 & 6
2	Rx+	Tx+	4	Tx+	TXD	Pin 3
	Rx-	Tx-	21	Tx-		Pin 8
	Tx+	Tx+	36	Rx+	RXD	Pin 7
	Tx-	Tx-	20	Rx-		Pin 2
	Sony	Sony	37	Sony		Pin 5
	0v	0v	3	0v	0v	Pin 4 & 6
3	Rx+	Tx+	6	Tx+	TXD	Pin 3
	Rx-	Tx-	23	Tx-		Pin 8
	Tx+	Tx+	38	Rx+	RXD	Pin 7
	Tx-	Tx-	22	Rx-		Pin 2
	Sony	Sony	39	Sony		Pin 5
	0v	0v	5	0v	0v	Pin 4 & 6
4	Rx+	Tx+	8	Tx+	TXD	Pin 3
	Rx-	Tx-	25	Tx-		Pin 8
	Tx+	Tx+	40	Rx+	RXD	Pin 7
	Tx-	Tx-	24	Rx-		Pin 2
	Sony	Sony	41	Sony		Pin 5
	0v	0v	7	0v	0v	Pin 4 & 6
5	Rx+	Tx+	10	Tx+	TXD	Pin 3
	Rx-	Tx-	27	Tx-		Pin 8
	Tx+	Tx+	42	Rx+	RXD	Pin 7
	Tx-	Tx-	26	Rx-		Pin 2
	Sony	Sony	43	Sony		Pin 5
	0v	0v	9	0v	0v	Pin 4 & 6
6	Rx+	Tx+	12	Tx+	TXD	Pin 3
	Rx-	Tx-	29	Tx-		Pin 8
	Tx+	Tx+	44	Rx+	RXD	Pin 7
	Tx-	Tx-	28	Rx-		Pin 2
	Sony	Sony	45	Sony		Pin 5
	0v	0v	11	0v	0v	Pin 4 & 6

7	Rx+	Tx+	14	Tx+	TXD	Pin 3
	Rx-	Tx-	31	Tx-		Pin 8
	Tx+	Tx+	46	Rx+	RXD	Pin 7
	Tx-	Tx-	30	Rx-		Pin 2
	Sony	Sony	47	Sony		Pin 5
	0v	0v	13	0v	0v	Pin 4 & 6
8	Rx+	Tx+	16	Tx+	TXD	Pin 3
	Rx-	Tx-	33	Tx-		Pin 8
	Tx+	Tx+	48	Rx+	RXD	Pin 7
	Tx-	Tx-	32	Rx-		Pin 2
	Sony	Sony	49	Sony		Pin 5
	0v	0v	15	0v	0v	Pin 4 & 6

Table 2-21: Data Port Pin-Out

The EMR-PR48 front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-35 and Table 2-22 show the card edge and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

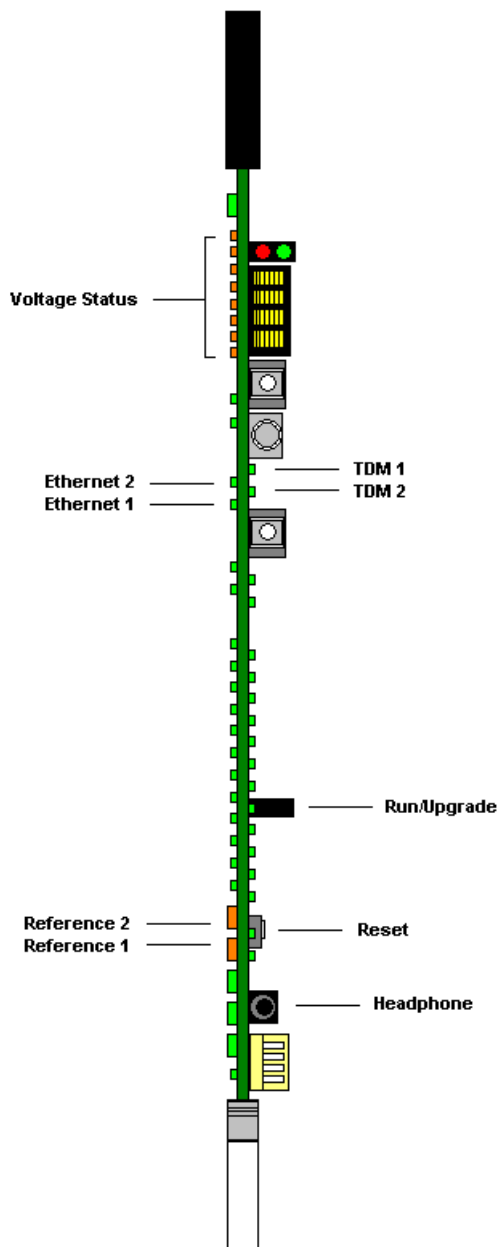


Figure 2-35: EMR-PR48 Front Card Edge

Component	Description
Voltage Status LEDs	This set of LEDs are amber in color and should always be ON
Ethernet 1 LED	This LED is green in color and flashes when there is activity on Ethernet port 1
Ethernet 2 LED	This LED is green in color and flashes when there is activity on Ethernet port 2
TDM 1	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 1 and is solid when it is the primary TDM
TDM 2	This LED is green in color and flashes when a valid TDM signal is detected on TDM input 2 and is solid when it is the primary TDM
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Reset Button	This button resets the module

Table 2-22: Description of EMR-PR48 Card Edge

EMR-PR48 Rear Plate

EMR-PR48 Rear Plate

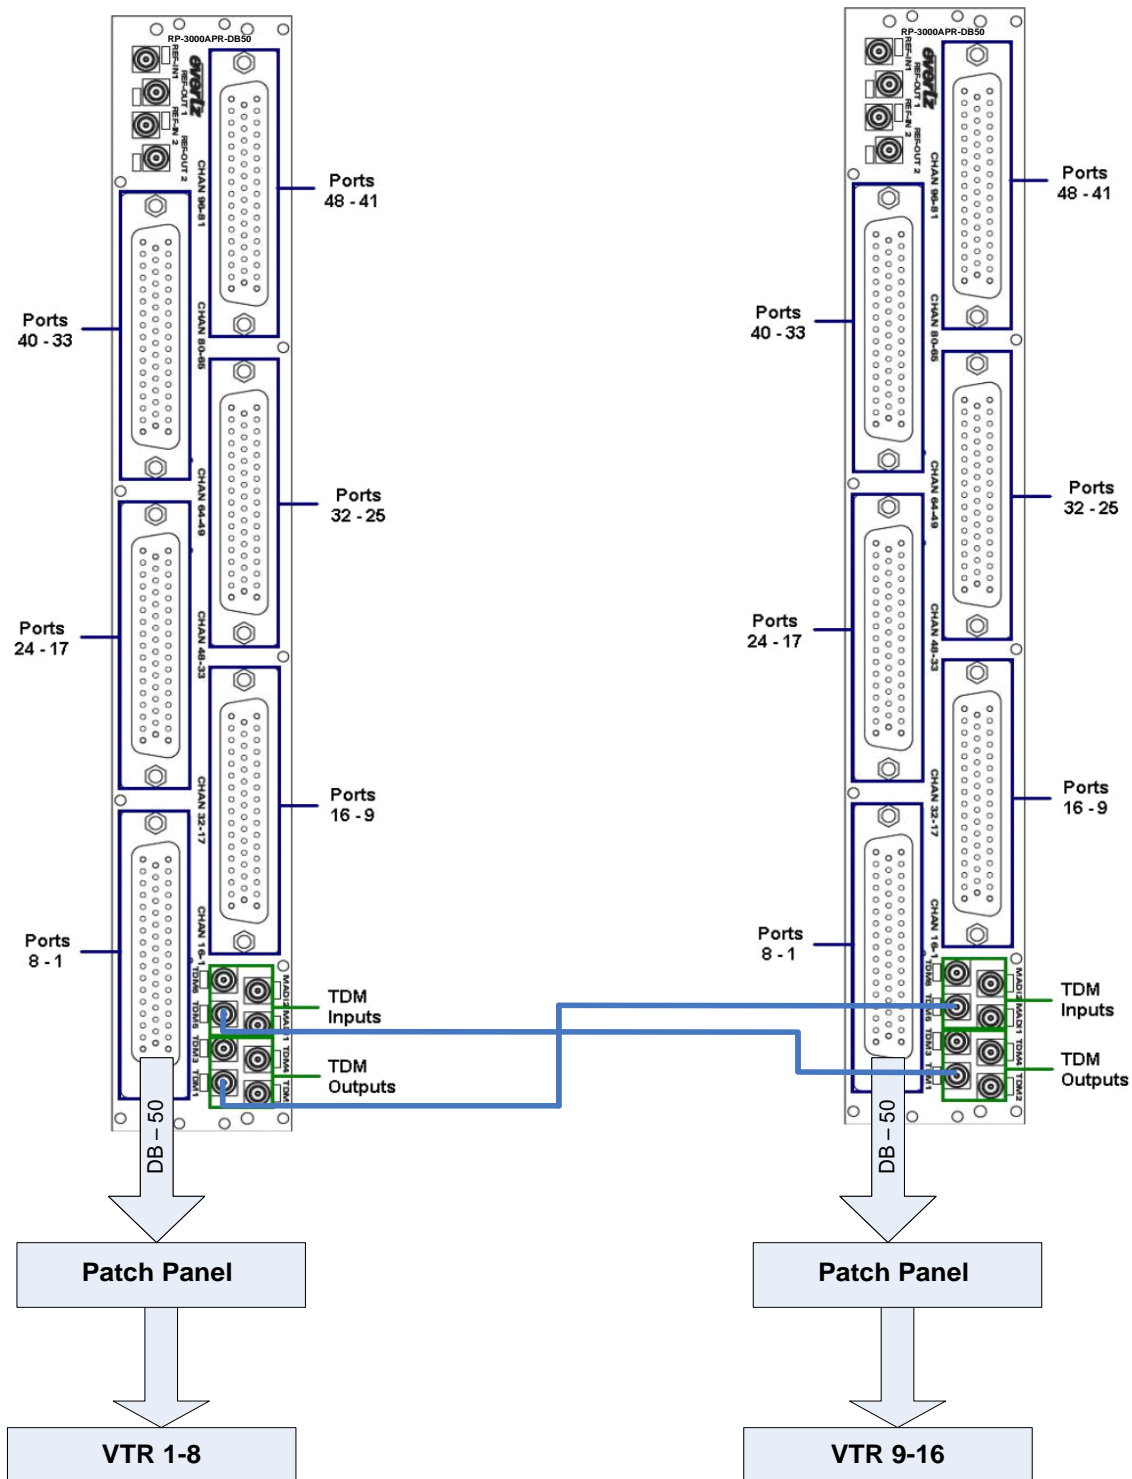


Figure 2-36: Basic 2x EMR Port Router Setup

2.2.11. EMR-PR48-A Data Module

The EMR-PR48-A is a data port router card for the EMR. Each of the 48 data ports available on the module can be configured to support either RS-442 or RS-232 serial protocols.

Each port consists of 2 reconfigurable transceivers allowing the port router to transmit or receive on each of the Tx/Rx (sub port) connections. When the port is set at as Controller, sub port A (pins 34/18 for port 1) is configured as a transmitter and sub port B (pins 2/19 for port 1) as a receiver, setting the port as a Slave reverses the directions.

The EMR-PR48-A rear panel occupies 2 slots in a frame and uses 50-pin D-Sub female connectors as shown in Figure 2-37. Each connector supports 8 serial data ports (RS-232 or RS-422). The pin out for each connector is shown in Table 2-23.

Before installing the EMR-PR48-A, some consideration should be given to the cabling to ensure that different VTR's and RS-422 devices will be supported correctly. Figure 2-37 shows the first 8 ports allocated in a typical application.

In this example, all the EMR-PR48-A ports are wired in exactly the same way. Any Tx/Rx swaps that are required to support controlling (edit controller) or slave (VTR) devices is defined by the VL-Pro configuration.

Notes about serial wiring to the EMR-PR48-A:

1. The use of DB9 patch panels is optional but it is recommended that you use a consistent signal connection scheme to allow any pair of devices to be patched together.
2. RS-422 connections should be made using screened dual twisted pair cabling. Short runs of ribbon cabling (<3m) can be supported, longer runs may affect the advanced features of the card.
3. A GND reference connection must be provided in the cable between the EMR-PR48-A and the remote device.
4. If the external device supports the Sony pin 5 modes then the device's Sony pin must be wired to the EMR-PR48-A.

2.2.11.1. Learn Modes

The EMR-PR48-A has features to aid the user in establishing serial link connectivity quickly.

Learn Activity Mode: This can be used with the port standard set to RS-232 or RS-422. In this mode the EMR-PR48-A listens for activity on both of the sub ports in order to find out which sub port is receiving data. The user will need to cause the connected device to send data in order for this mode to function. Single or Multiple ports may be learned at the same time.

Learn Driver Mode: This mode is only supported with standard set to RS-422. In this mode the EMR-PR48-A interrogates the 2 sub ports to find out which one is connected to the external driver. No data activity is required on the links but the external driver must be active. It is important that the receiver port connections are not reversed so if the ports polarity is incorrect then a warning message is shown. Depending upon the amount of data present on the link, the mode may fail to detect properly. It is usually sufficient to just repeat the learn request.

Using the Learn Modes: The learn modes can be instigated from either VLPro or the serial menu; the following description is when the serial menu is being used. The user has the option to learn a single port or multiple port configurations using either of the two modes described earlier. Upon successful detection of the ports configuration the user can accept the setting as a manual setting i.e. hard code the port as a Controller or Slave; enter 's' to allow the setting to be used in the Sony mode (senses the state of the Sony pin and port configuration together and configures the Sony operational mode based upon the sensed conditions); or enter 'o' to configure the port to use the 'order of takes direction control' mode based upon the sensed conditions.

2.2.11.2. Special Modes

Normally the user will just hard configure the port as a Controller or a Slave depending on how the sub ports are connected to the TX and Rx. However, there are times where the port connections swap in use, e.g. when EMR-PR48-A is in a system that requires machine to machine (VTR) dubbing. EMR-PR48-A provides the following modes:

Sony Mode: This mode is only supported when the standard is set to RS422. In this mode, the status of the external devices Sony pin (pin 5 on a 9 way 'D' type connector) is used to control the ports mode, i.e. in Sony 0 = Controller, if the Sony pin is low EMR-PR48-A port will be configured as a controller, if the pin is high then it will be configured as a slave.

Note that some VTR's such as the Sony DVW-A500P and the Sony DNW-A75 do not support pin 5 fully and therefore cannot be supported using the Sony modes on the EMR-PR48-A. Also note that other VTR's such as the Sony SRW-5500 and SRW-5800 swap the Tx/Rx pairs momentarily when the 'Player' button is pressed and require the Slave VTR to respond to latch the TX/RX swap and allow the controlling VTR to control the slave device.

Default & Non-Default Mode: The EMR-PR48-A can be globally configured for one of two modes. Default mode and Non-Default mode. In default mode: For instance if the user wants to route port 4 to 5, user would just set the route "4" then "5" in the route menu to get a two-way traffic. But in Non-Default mode customer would need to set two routes "4" to "5" and then "5" to "4" to get a two-way traffic. User won't be able to do the normal routing when the router is in "Non-Default mode".



Note: It will affect all the ports on the card when the card config is changed to Non-Default Mode from Default Mode

Auto 3 Detection Mode: This mode is provided to support the problematic devices mentioned above. It continuously monitors the ports status and automatically detects when an external device swaps its Tx and Rx connections and reconfigures the EMR-PR48-A ports accordingly. This mode should be used only if the Sony mode does not function. This mode supports the Sony DVW-A500P, the Sony DNW-A75, the Sony SRW-5500 and the SRW-5800 devices.

Note that this mode causes a small interruption to the transmitted data unless data is flowing on the link, which is true for all VTRs. Therefore caution must be observed when using it on links that do not have continuous data flowing. The Auto 3 timeout is defaulted to correctly support VTR operation.



Note: Ensure that the GND reference connection between the external device and the EMR-PR48-A is made.

Order of Take Controls the Direction Mode (ORDMM): Some devices i.e. VTRs change the pins used for TX and RX depending upon their operational mode. This mode allows the user to control the PR48-A port configuration based upon the order of the route is made.

The user can either manually select the Order of Route Determined Direction mode or work out the controller/slave arrangement required or use the learn mode and enter 'o' when presented with the results to place the port in the correct configuration in the Route Determined Direction mode.

Once configured with, for example, port 1 routed to port 5 and with port 5 set in Route Determined Direction mode, then if port 5 is routed to port 1 then the Tx and Rx signals will swap on port 5. In other words, which ever device is selected first becomes the controller and the device that is selected second will become the slave.

This mode can be used when neither the Auto 3 nor the Sony modes correctly handle the device i.e. VTR.



Note: An EMR-PR48-A module has 48 ports to configure. Once this is completed you should save the settings in VL-Pro for later recall.

2.2.11.3. Configuration and Monitoring Menu

EMR-PR48-A contains configuration and monitoring menu that allows the user to change some internal settings of the device and also to monitor various components on the card.

The configuration and monitoring menu can be accessed using either Telnet session or serial connection. Once gained access to the main menu, use the numbers beside the items to set the value. Follow the on screen instructions to set the value of the parameter, save and exit the configuration.

<i>Network Configuration</i>	Configuration of Network 1 and 2
<i>SNMP Configuration</i>	Configuration of Simple Network Management Protocol.
<i>Port Configuration</i>	
<i>View Port Routing Table</i>	Views Route Table
<i>Set X to Y Route</i>	Sets individual route
<i>View/Conf Port Status - Individual Port</i>	View and mode configuration of individual port
<i>View/Conf Port Status - All Ports</i>	View and mode configuration of all ports
<i>View / Configure Video Reference</i>	View and configuration of Video reference
<i>View / Configure Advanced Global</i>	Accessed by Evertz technical support staff only
<i>View / Configure PLink Status</i>	View and configuration of Plink and ADMX mode
<i>View Board Info</i>	Views board information

Trace - Engineering Only	Accessed by Evertz technical support staff only
Engineering Debug Utility	Accessed by Evertz technical support staff only

2.2.11.4. Status Signal

Polarity: When the standard is set to RS-422 the EMR-PR48-A advises the user of the state of the Rx signals polarity (i.e. swapped +ve/-ve signal lines).

Data Activity: Any activity on the EMR-PR48-A receivers is provided to the user on both the status display and the 24 front LEDs (2 LEDs per port, one for each of the sub ports).

Baud Rate: Provided there is sufficient activity on the receiver port, the EMR-PR48-A will show the links baud rate. This is updated every 8s.

Auto/Sony State: When operating the port in Auto 3 Detection mode or the Sony mode, the state of the port mode/Sony pin status is shown.

Port Routing: Shows the interconnections (routes) between the ports.



Note: Setting the route to 337 will route Null to the port (i.e. the port o/p will be in the idle state). Setting the route to the same number as the port will route the port input to its output.

2.2.11.5. Data Port D50 Connector – Pin Out

The EMR-PR48-A uses female D50 connectors, with each connector carrying 8 data ports. The details of how each of the D50 pins map to each of the 8 ports is shown in Figure 2-37.

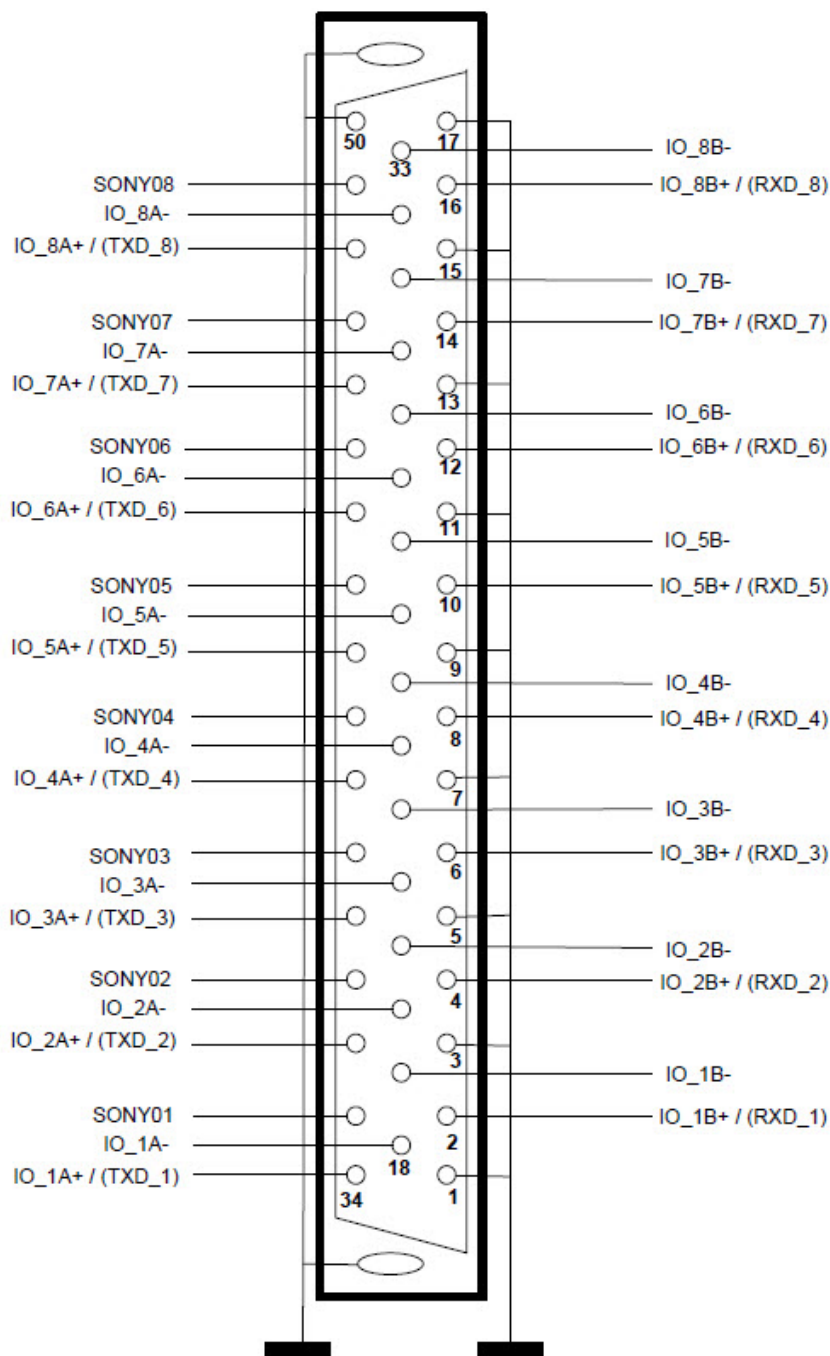


Figure 2-37: Data Port D50 Connector – Pin Out

The pins on each port can vary depending on whether the port is configured for RS-232 or RS-422 and whether the port is configured as a controller or a slave. Depending on these configuration parameters, the pin-outs for each port are different.

Controller			Slave		
RS-422	RS-232	D9 Pin	RS-422	RS-232	D9 Pin
Rx+	RXD	3	Tx+	TXD	7
Rx-		8	Tx-		2
Tx+	TXD	7	Rx+	RXD	3
Tx-		2	Rx-		8
Sony		5	Sony		5
0V (GND)	0V (GND)	4&6	0V (GND)	0V (GND)	4&6

Table 2-23: External Device Standard Controller and Slave D9 Pinouts



Note: Some VTRs use signal names TxA and TxB. On the EMR-PR48-A TX+ is TxB and TX- is TxA.

PR48-A Port Mode				Remote Unit		
	CTRL	SLAVE	D50	RS422	RS232	D9
1	Rx+	Tx+	2	Tx+	TXD	Pin 3
	Rx-	Tx-	19	Tx-		Pin 8
	Tx+	Tx+	34	Rx+	RXD	Pin 7
	Tx-	Tx-	18	Rx-		Pin 2
	Sony	Sony	35	Sony		Pin 5
	0v	0v	1	0v	0v	Pin 4 & 6
2	Rx+	Tx+	4	Tx+	TXD	Pin 3
	Rx-	Tx-	21	Tx-		Pin 8
	Tx+	Tx+	36	Rx+	RXD	Pin 7
	Tx-	Tx-	20	Rx-		Pin 2
	Sony	Sony	37	Sony		Pin 5
	0v	0v	3	0v	0v	Pin 4 & 6
3	Rx+	Tx+	6	Tx+	TXD	Pin 3
	Rx-	Tx-	23	Tx-		Pin 8
	Tx+	Tx+	38	Rx+	RXD	Pin 7
	Tx-	Tx-	22	Rx-		Pin 2
	Sony	Sony	39	Sony		Pin 5
	0v	0v	5	0v	0v	Pin 4 & 6
4	Rx+	Tx+	8	Tx+	TXD	Pin 3
	Rx-	Tx-	25	Tx-		Pin 8
	Tx+	Tx+	40	Rx+	RXD	Pin 7
	Tx-	Tx-	24	Rx-		Pin 2
	Sony	Sony	41	Sony		Pin 5
	0v	0v	7	0v	0v	Pin 4 & 6
5	Rx+	Tx+	10	Tx+	TXD	Pin 3
	Rx-	Tx-	27	Tx-		Pin 8
	Tx+	Tx+	42	Rx+	RXD	Pin 7
	Tx-	Tx-	26	Rx-		Pin 2
	Sony	Sony	43	Sony		Pin 5
	0v	0v	9	0v	0v	Pin 4 & 6

6	Rx+	Tx+	12	Tx+	TXD	Pin 3
	Rx-	Tx-	29	Tx-		Pin 8
	Tx+	Tx+	44	Rx+	RXD	Pin 7
	Tx-	Tx-	28	Rx-		Pin 2
	Sony	Sony	45	Sony		Pin 5
	0v	0v	11	0v	0v	Pin 4 & 6
7	Rx+	Tx+	14	Tx+	TXD	Pin 3
	Rx-	Tx-	31	Tx-		Pin 8
	Tx+	Tx+	46	Rx+	RXD	Pin 7
	Tx-	Tx-	30	Rx-		Pin 2
	Sony	Sony	47	Sony		Pin 5
	0v	0v	13	0v	0v	Pin 4 & 6
8	Rx+	Tx+	16	Tx+	TXD	Pin 3
	Rx-	Tx-	33	Tx-		Pin 8
	Tx+	Tx+	48	Rx+	RXD	Pin 7
	Tx-	Tx-	32	Rx-		Pin 2
	Sony	Sony	49	Sony		Pin 5
	0v	0v	15	0v	0v	Pin 4 & 6

Table 2-24: Recommended Port Wiring

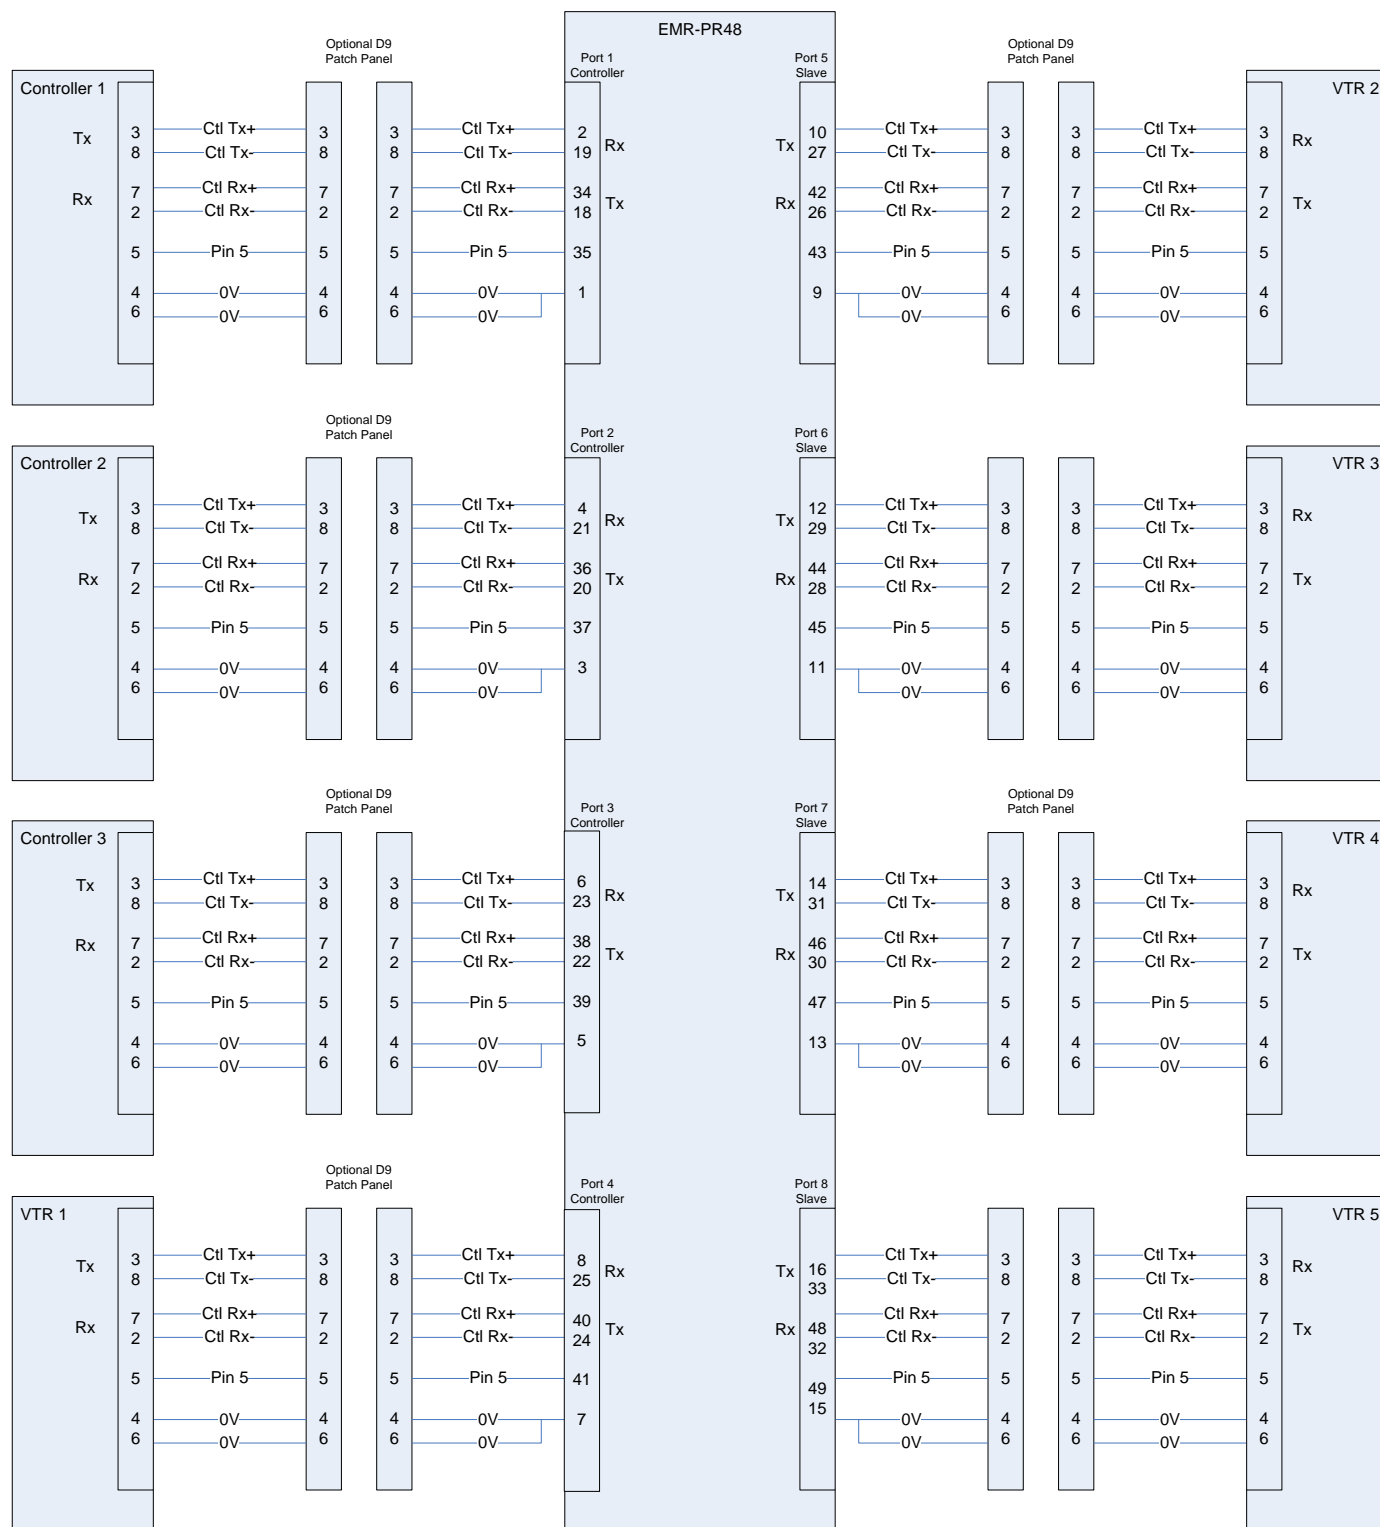


Figure 2-38: Example System Connections

2.2.11.6. Multicard Systems

The EMR-PR48-A rear plate has 6 TDM outputs and 6 TDM inputs via DIN 1.0/2.3 connectors. These connectors allow for further port expansion. The EMR-PR48-A can expand to a system of 336 ports without the need for an ADMX cross point. In a Multicard system, port 1 can be routed to any of the 336 outputs. Details of the expansion are shown in Section 4.2.1.



Note: A video black and burst reference signal must be connected to the frame when expanding a system beyond a single module.

Input Card	Connector	From	Output Card	Connector
Card 1 In 1	TDM 5		Card 2 Out 1	TDM 1
Card 2 In 1	TDM 5		Card 1 Out 1	TDM 1

Table 2-25: Multi-Card TDM Cables (96 Ports, 2 Card Systems)

Input Card	Connector	From	Output Card	Connector
Card 1 In 1	TDM 5		Card 2 Out 1	TDM 1
Card 1 In 2	TDM 6		Card 3 Out 1	TDM 1
Card 2 In 1	TDM 5		Card 1 Out 1	TDM 1
Card 2 In 2	TDM 6		Card 3 Out 2	TDM 3
Card 3 In 1	TDM 5		Card 1 Out 2	TDM 3
Card 3 In 2	TDM 6		Card 2 Out 2	TDM 3

Table 2-26: Multi-Card TDM Cables (144 Ports, 3 Card Systems)

Input Card	Connector	From	Output Card	Connector
Card 1 In 1	TDM 5		Card 2 Out 1	TDM 1
Card 1 In 2	TDM 6		Card 3 Out 1	TDM 1
Card 1 In 3	MADI 1		Card 4 Out 1	TDM 1
Card 2 In 1	TDM 5		Card 1 Out 1	TDM 1
Card 2 In 2	TDM 6		Card 3 Out 2	TDM 3
Card 2 In 3	MADI 1		Card 4 Out 2	TDM 3
Card 3 In 1	TDM 5		Card 1 Out 2	TDM 3
Card 3 In 2	TDM 6		Card 2 Out 2	TDM 3
Card 3 In 3	MADI 1		Card 4 Out 3	TDM 2
Card 4 In 1	TDM 5		Card 1 Out 3	TDM 2
Card 4 In 2	TDM 6		Card 2 Out 3	TDM 2
Card 4 In 3	MADI 1		Card 3 Out 3	TDM 2

Table 2-27: Multi-Card TDM Cables (192 Ports, 4 Card Systems)

Input Card	Connector	From	Output Card	Connector
Card 1 In 1	TDM 5		Card 2 Out 1	TDM 1
Card 1 In 2	TDM 6		Card 3 Out 1	TDM 1
Card 1 In 3	MADI 1		Card 4 Out 1	TDM 1
Card 1 In 4	MADI 2		Card 5 Out 1	TDM 1
Card 2 In 1	TDM 5		Card 1 Out 1	TDM 1
Card 2 In 2	TDM 6		Card 3 Out 2	TDM 3
Card 2 In 3	MADI 1		Card 4 Out 2	TDM 3
Card 2 In 4	MADI 2		Card 5 Out 2	TDM 3
Card 3 In 1	TDM 5		Card 1 Out 2	TDM 3
Card 3 In 2	TDM 6		Card 2 Out 2	TDM 3
Card 3 In 3	MADI 1		Card 4 Out 3	TDM 2
Card 3 In 4	MADI 2		Card 5 Out 3	TDM 2
Card 4 In 1	TDM 5		Card 1 Out 3	TDM 2
Card 4 In 2	TDM 6		Card 2 Out 3	TDM 2
Card 4 In 3	MADI 1		Card 3 Out 3	TDM 2
Card 4 In 4	MADI 2		Card 5 Out 4	TDM 4
Card 5 In 1	TDM 5		Card 1 Out 4	TDM 4
Card 5 In 2	TDM 6		Card 2 Out 4	TDM 4
Card 5 In 3	MADI 1		Card 3 Out 4	TDM 4
Card 5 In 4	MADI 2		Card 4 Out 4	TDM 4

Table 2-28: Multi-Card TDM Cables (240 Ports, 5 Card Systems)

Input Card	Connector	From	Output Card	Connector
Card 1 In 1	TDM 5		Card 2 Out 1	TDM 1
Card 1 In 2	TDM 6		Card 3 Out 1	TDM 1
Card 1 In 3	MADI 1		Card 4 Out 1	TDM 1
Card 1 In 4	MADI 2		Card 5 Out 1	TDM 1
Card 1 In 5	REF_IN 2		Card 6 Out 1	TDM 1
Card 2 In 1	TDM 5		Card 1 Out 1	TDM 1
Card 2 In 2	TDM 6		Card 3 Out 2	TDM 3
Card 2 In 3	MADI 1		Card 4 Out 2	TDM 3
Card 2 In 4	MADI 2		Card 5 Out 2	TDM 3
Card 2 In 5	REF_IN 2		Card 6 Out 2	TDM 3
Card 3 In 1	TDM 5		Card 1 Out 2	TDM 3
Card 3 In 2	TDM 6		Card 2 Out 2	TDM 3
Card 3 In 3	MADI 1		Card 4 Out 3	TDM 2
Card 3 In 4	MADI 2		Card 5 Out 3	TDM 2
Card 3 In 5	REF_IN 2		Card 6 Out 3	TDM 2
Card 4 In 1	TDM 5		Card 1 Out 3	TDM 2
Card 4 In 2	TDM 6		Card 2 Out 3	TDM 2
Card 4 In 3	MADI 1		Card 3 Out 3	TDM 2
Card 4 In 4	MADI 2		Card 5 Out 4	TDM 4
Card 4 In 5	REF_IN 2		Card 6 Out 4	TDM 4
Card 5 In 1	TDM 5		Card 1 Out 4	TDM 4
Card 5 In 2	TDM 6		Card 2 Out 4	TDM 4
Card 5 In 3	MADI 1		Card 3 Out 4	TDM 4
Card 5 In 4	MADI 2		Card 4 Out 4	TDM 4
Card 5 In 5	REF_IN 2		Card 6 Out 5	REF_OUT_2
Card 6 In 1	TDM 5		Card 1 Out 5	REF_OUT_2
Card 6 In 2	TDM 6		Card 2 Out 5	REF_OUT_2
Card 6 In 3	MADI 1		Card 3 Out 5	REF_OUT_2
Card 6 In 4	MADI 2		Card 4 Out 5	REF_OUT_2
Card 6 In 5	REF_IN 2		Card 5 Out 5	REF_OUT_2

Table 2-29: Multi-Card TDM Cables (288 Ports, 6 Card Systems)

Input Card	Connector	From	Output Card	Connector
Card 1 In 1	TDM 5		Card 2 Out 1	TDM 1
Card 1 In 2	TDM 6		Card 3 Out 1	TDM 1
Card 1 In 3	MADI 1		Card 4 Out 1	TDM 1
Card 1 In 4	MADI 2		Card 5 Out 1	TDM 1
Card 1 In 5	REF_IN 2		Card 6 Out 1	TDM 1
Card 1 In 6	REF_IN 1		Card 7 Out 1	TDM 1
Card 2 In 1	TDM 5		Card 1 Out 1	TDM 1
Card 2 In 2	TDM 6		Card 3 Out 2	TDM 3
Card 2 In 3	MADI 1		Card 4 Out 2	TDM 3
Card 2 In 4	MADI 2		Card 5 Out 2	TDM 3
Card 2 In 5	REF_IN 2		Card 6 Out 2	TDM 3
Card 2 In 6	REF_IN 1		Card 7 Out 2	TDM 3
Card 3 In 1	TDM 5		Card 1 Out 2	TDM 3
Card 3 In 2	TDM 6		Card 2 Out 2	TDM 3
Card 3 In 3	MADI 1		Card 4 Out 3	TDM 2
Card 3 In 4	MADI 2		Card 5 Out 3	TDM 2
Card 3 In 5	REF_IN 2		Card 6 Out 3	TDM 2
Card 3 In 6	REF_IN 1		Card 7 Out 2	TDM 2
Card 4 In 1	TDM 5		Card 1 Out 3	TDM 2
Card 4 In 2	TDM 6		Card 2 Out 3	TDM 2
Card 4 In 3	MADI 1		Card 3 Out 3	TDM 2
Card 4 In 4	MADI 2		Card 5 Out 4	TDM 4
Card 4 In 5	REF_IN 2		Card 6 Out 4	TDM 4
Card 4 In 6	REF_IN 1		Card 7 Out 4	TDM 4
Card 5 In 1	TDM 5		Card 1 Out 4	TDM 4
Card 5 In 2	TDM 6		Card 2 Out 4	TDM 4
Card 5 In 3	MADI 1		Card 3 Out 4	TDM 4
Card 5 In 4	MADI 2		Card 4 Out 4	TDM 4
Card 5 In 5	REF_IN 2		Card 6 Out 5	REF_OUT_2
Card 5 In 6	REF_IN 1		Card 7 Out 5	REF_OUT_2
Card 6 In 1	TDM 5		Card 1 Out 5	REF_OUT_2
Card 6 In 2	TDM 6		Card 2 Out 5	REF_OUT_2
Card 6 In 3	MADI 1		Card 3 Out 5	REF_OUT_2
Card 6 In 4	MADI 2		Card 4 Out 5	REF_OUT_2
Card 6 In 5	REF_IN 2		Card 5 Out 5	REF_OUT_2
Card 6 In 6	REF_IN 1		Card 7 Out 6	REF_OUT_1
Card 7 In 1	TDM 5		Card 1 Out 6	REF_OUT_1
Card 7 In 2	TDM 6		Card 2 Out 6	REF_OUT_1
Card 7 In 3	MADI 1		Card 3 Out 6	REF_OUT_1
Card 7 In 4	MADI 2		Card 4 Out 6	REF_OUT_1
Card 7 In 5	REF_IN 2		Card 5 Out 6	REF_OUT_1
Card 7 In 6	REF_IN 1		Card 6 Out 6	REF_OUT_1

Table 2-30: Multi-Card TDM Cables (336 Ports, 7 Card Systems)

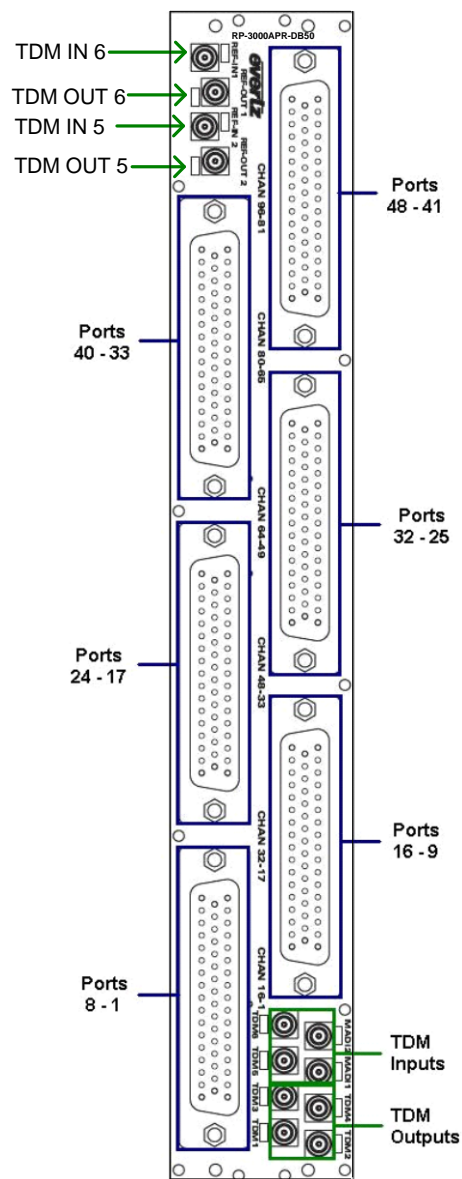


Figure 2-39: EMR-PR48-A Rear Plate

Label	TDM 1	TDM 3	TDM 2	TDM 4	TDM 5	TDM 6	MADI 1	MADI 2
Actual I/O	TDM OUT 1	TDM OUT 2	TDM OUT 3	TDM OUT 4	TDM IN 1	TDM IN 2	TDM IN 3	TDM IN 4

Table 2-31: EMR-PR48-A TDM Connections

2.2.11.7. Front Card Edge Control and LEDs

The EMR-PR48-A front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-40 and Table 2-32 show the card edge and describe the expected behavior of each component. If the status indicators do not behave as described it can be a sign of installation or configuration issues.

Component	Description
Voltage Status LEDs	This set of LEDs are amber in color and should always be ON
Ethernet 1 LED	This LED is amber in color and flashes when there is activity on Ethernet port 1
Ethernet 2 LED	This LED is amber in color and flashes when there is activity on Ethernet port 2
TDM 1 - 6	This LED is green in color when a valid TDM signal is detected on TDM input.
Bank Select Push Button	Selects the bank of inputs that are being monitored by the PR activity LEDs
CH 1-12 LED	This LED is green in color and indicates that inputs 1 to 12 are currently being monitored by the LTC activity LEDs
CH 13-24 LED	This LED is green in color and indicates that inputs 13 to 24 are currently being monitored by the LTC activity LEDs
CH 25-36 LED	This LED is green in color and indicates that inputs 25 to 36 are currently being monitored by the LTC activity LEDs
CH 37-48 LED	This LED is green in color and indicates that inputs 37 to 48 are currently being monitored by the LTC activity LEDs
Activity LEDs	This set of LEDs are green in color and indicate the Activity on each respective sub port (Left = Sub Port B, Right = Sub Port A)
Reference 1 LED	This LED is amber in color and indicates the presence of a valid reference on input 1. It will flash (2Hz for Pal and 1Hz for NTSC) if reference is present and is the used reference, or intermittently if it's a valid backup reference.
Reference 2 LED	This LED is amber in color and indicates the presence of a valid reference on input 1. It will flash (2Hz for Pal and 1Hz for NTSC) if reference is present and is the used reference, or intermittently if it's a valid backup reference.
Run/Upgrade Jumper	This jumper is used to place the module in upgrade mode when upgrading the firmware
Reset Button	This button resets the module

Table 2-32: Description of EMR-PR48-A Card Edge

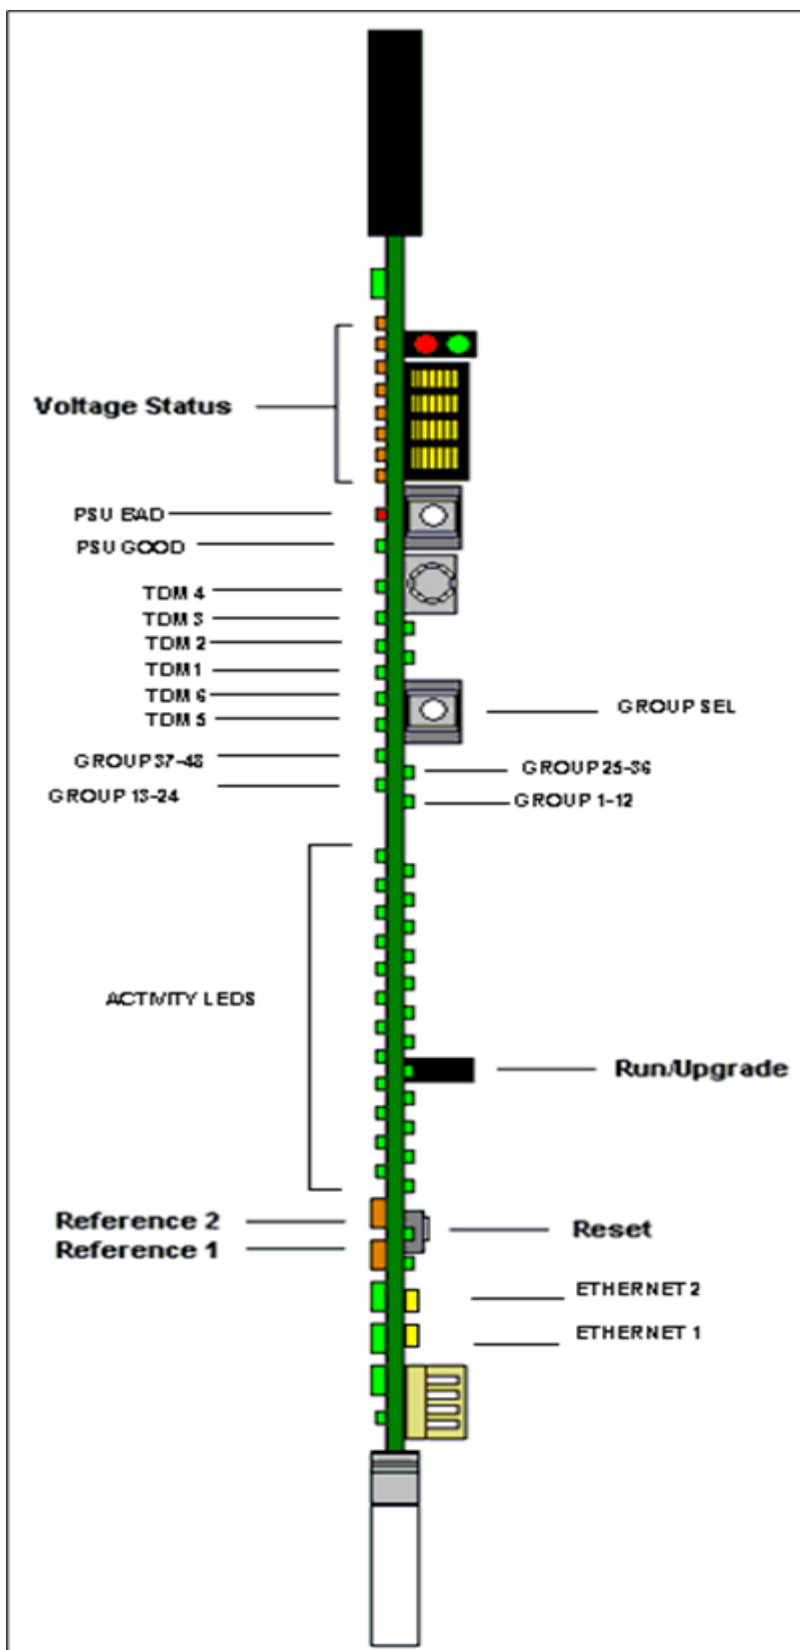


Figure 2-40: EMR-PR48-A Front Card Edge

2.2.12. EMR-IO8-MADI

The EMR-IO8-MADI is an audio card that can support 56 or 64 channels MADI signal. It has 8 MADI inputs marked as “MADI IN” and 8 MADI outputs marked as “MADI OUT” on the rear plate and also has 2 TDM input and 2 TDM output ports. Each TDM input and an output port carries 640 audio channels. TDM input and TDM output ports have Main and Redundancy. The EMR-IO8-MADI rear panel occupies 1 slot in a frame and has DIN 1.0/2.3 connectors as shown in Figure 2-41. The connectors labeled MADI IN and MADI OUT on the rear plate.



Figure 2-41 : EMR-IO8-MADI Rear Plate

Of the two TDM Inputs, the one which marked as “T1M-IP” is for Main and the other one which is marked as “T1R-IP” is for Redundant on the rear plate.

Of the two TDM Outputs, the one which is marked as “T1M-OP” is for Main and the other which is marked as “T1R-OP” is for Redundant.

The EMR-IO8-MADI supports TDM V1 and TDM V2. It also supports two network IP Addresses and VISTALINK[®] Monitoring and SNMP management system.

The impedance is 75 Ω terminating, the power consumption is 27W and the required voltage is +12VDC.

EMR-IO8-MADI can be used in EMX1RU, EMX3RU and EMX6RU Frames with 1 slot occupancy.
Note that the orientation of the rear plate and EMR-IO8-MADI module are different when installing on the EMX6RU verses EMX3RU and EMX1RU frames.

Front Card Edge Controls and LEDs

The EMR-IO8-MADI front card edge has some key controls and indicators that can help in the installation and debugging processes. Figure 2-42 and Table 2-33 shows the card edge and describes the expected behavior of each component.

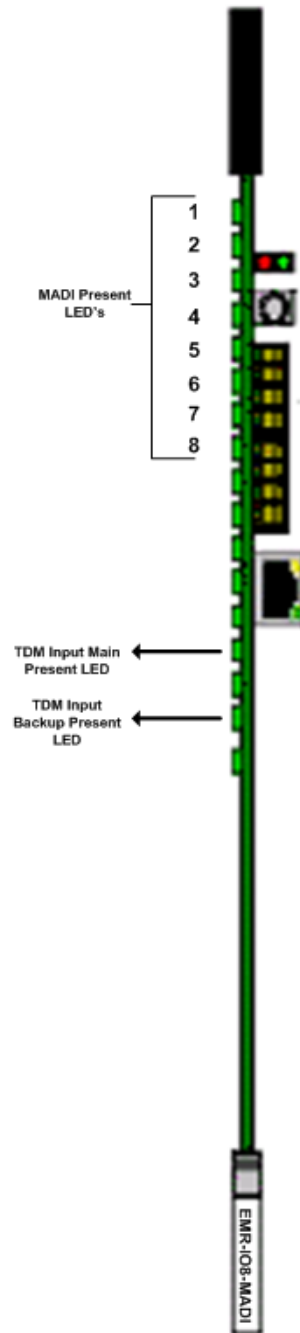


Figure 2-42 : Front Card Edge of EMR-IO8-MADI

Component	Description	
MADI Present LEDs	RED	No MADI Signal
	Green	MADI Signal Present
TDM Present LEDs	OFF	No TDM Signal
	BLUE	Audio Packet without LSID
	GREEN	Audio Packet with LSID
	AMBER	LSID with no Audio Packet
Rotary Switch	Switches the display to view firmware version, IP address A, IP address B	

Table 2-33 : Description of EMR-IO8-MADI Card Edge

2.3. INSTALLING AND REMOVING THE MODULES

2.3.1. Installing the Module Rear Plate

In most cases, the EMR frame will already have the modules and rear plates installed within the frame. However, when modules and rear plates need re-positioning, or when additional modules are purchased, proper module/rear plate installation is required.

Each EMR module is shipped with a matching rear panel plate that houses the appropriate connectors for that module.

To Install the Rear Plate:

1. Locate the specific slot in the frame and remove any filler plates.
2. Install the rear plate over the open slot by first fitting the plate then tightening the two lock-screws.
3. Fasten the third screw in the middle of the rear plate. (Only on 3000FR)
4. Tighten the screws after the main module is installed.



CAUTION: If any of the screws for the rear plate are missing, please contact Evertz immediately for the specification and/or replacement. Using the incorrect screw can cause thread stripping.

2.3.2. Opening and Closing the Front Panel

In order to insert or remove modules you will have to open the front panel using the following procedure:

1. Turn the two captive screws located on the front panel counter clockwise several turns until they release completely from the front extrusions.
2. Carefully lower the front panel door so that the front edge of the door is lower than the rear of the door.

2.3.3. Installing a Module

1. Orient the module vertically such that the smaller white card ejector is on the bottom, while the larger black card ejector is on the top.
2. Align the card with the card guide corresponding to the slot number where you installed the rear panel plate.
3. Carefully slide the module into the frame and press it completely into the rear panel connectors.
4. Use the upper card-ejector to latch the module into the slot.
5. Make sure that the connectors are fully seated in the rear panel.
6. When this is done, close the front panel and then tighten the screws that hold the rear panel in place.

2.3.4. Removing a Module

1. Press the card ejector down to release the module.
2. Grasp the card using the upper card ejector and pull the module out from the frame.
3. Carefully place the module in a safe place, free from static discharge.

2.4. MOUNTING

The EMR frame is equipped with rack mounting rails and fits into a standard rack space. The 3000FR requires a 19" x 10.5" x 14.5" (483 mm x 260 mm x 368 mm) space, the EMX6-FR requires a 19" x 10.5" x 15.75" (483 mm x 260 mm x 400 mm) space, and the EMX3-FR requires a 19" x 5.25" x 15.75" (483 mm x 133 mm x 400 mm) space. To securely fasten the frame to the equipment rack, make sure that all four mounting screws on each mounting rail are tightened securely.



Note: The EMX6-FR and EMX3-FR have front mounted cooling fans and require the area below them to be flush so that there is sufficient room to open the frame door completely and be able to remove the modules.

After the unit has been installed in a rack, all cards in the frame should be checked to ensure they are fully seated within the frame. This is best accomplished by simply pushing (simultaneously, with moderate force) on each card's top and bottom insertion/extraction levers. See section 2.3.3 for further information. This step should be repeated any time the frame is shipped, or relocated within a facility.

2.5. COOLING

The EMR frame is designed to ensure adequate cooling for up to 650 watts (3000FR and EMX6-FR) or 360 watts (EMX3-FR) of processing power per frame. Fans at the front and rear of each power supply module accomplish forced air-cooling. Adjacent equipment may be mounted immediately to the top and bottom of the frame. Additional module cooling is provided by interior cooling channels to ensure that even fully loaded frames mounted adjacent to each other will operate within the normal temperature range.

The EMX6-FR and EMX3-FR frames have additional fans mounted to the front door of the frame to provide additional cooling.



CAUTION: For proper cooling, the frame must contain two 3000PS/EMX6-PS power supplies. The EMX3-FR can have one EMX3-PS power supply and one EMX3PS-FM power supply blank panel with cooling fan.

2.5.1. Fan Exhaust

The cooling fans for the power supplies, located at the front of the frame, draw air in the front and exhaust out the sides of the frame. The cooling fans for the modules, located at the rear of the frame, draw air in the front and the exhaust out the rear of the frame.



CAUTION: To ensure adequate cooling, care should be taken to ensure that the fan inlets and exhaust openings are free of obstructions.

2.6. SERVICING INSTRUCTIONS



CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing instructions in this section of the manual unless you are qualified to do so.

2.6.1. Changing the Fuses



CAUTION: For continued protection against the risk of fire, replace only with the same type and rating of fuse.

ATTENTION: Pour éviter les risques d'incendie, remplacer le fusible avec un fusible de même calibre.

The fuse holder is located inside the power entry module. To change the fuses, disconnect the line cord from the power entry module and pull the fuse holder out from the power entry module using a small screwdriver. The fuse holder contains two fuses, one for the line and one for the neutral side of the mains connection. Pull out the blown fuse and place a fuse of the correct value in its place.

For 100-120 VAC operation, use ceramic time delay 5 x 20 mm fuses rated for 250 Volts with a 10 amps current rating. For 220-240 VAC operation use ceramic time delay 5 x 20 mm fuses rated for 250 Volts with a 6.3 amps current rating.

For your convenience there are spare fuses located in the vinyl pouch in the front of this manual. Carefully reinsert the fuse holder into the power entry module.

2.6.2. Replacing the Power Supply

Each power supply is a complete assembly, and includes the power supply cooling fan and one frame-cooling fan. In the event that the power supply or one of the fans malfunctions, you will need to replace the power supply assembly with a spare one while the failed assembly is being repaired.



CAUTION: Do not run the frame for extended periods of time with one of the power supplies removed. Proper cooling of the frame requires both power supplies to be inserted into the frame, or one power supply and a power supply blank panel.

The 3000PS, EMX6-PS and EMX3-PS power supplies are hot swappable and can be easily replaced from the front without interrupting the signal integrity of the frame. Each power supply is capable of supplying full power to the frame by itself, however we recommend running with both supplies powered for power redundancy. On frames with only one power supply, a 7800PS-QT-FM blank power supply module with cooling fan **must** be inserted into the second power supply space. The 7800PS-QT-FM contains a module-cooling fan and baffles to maintain proper airflow within the frame.

The power supply is secured into the frame by two machine screws through the rear panel (as shown in Figure 2-41). These screws must be removed before the power supply can be extracted from the front.

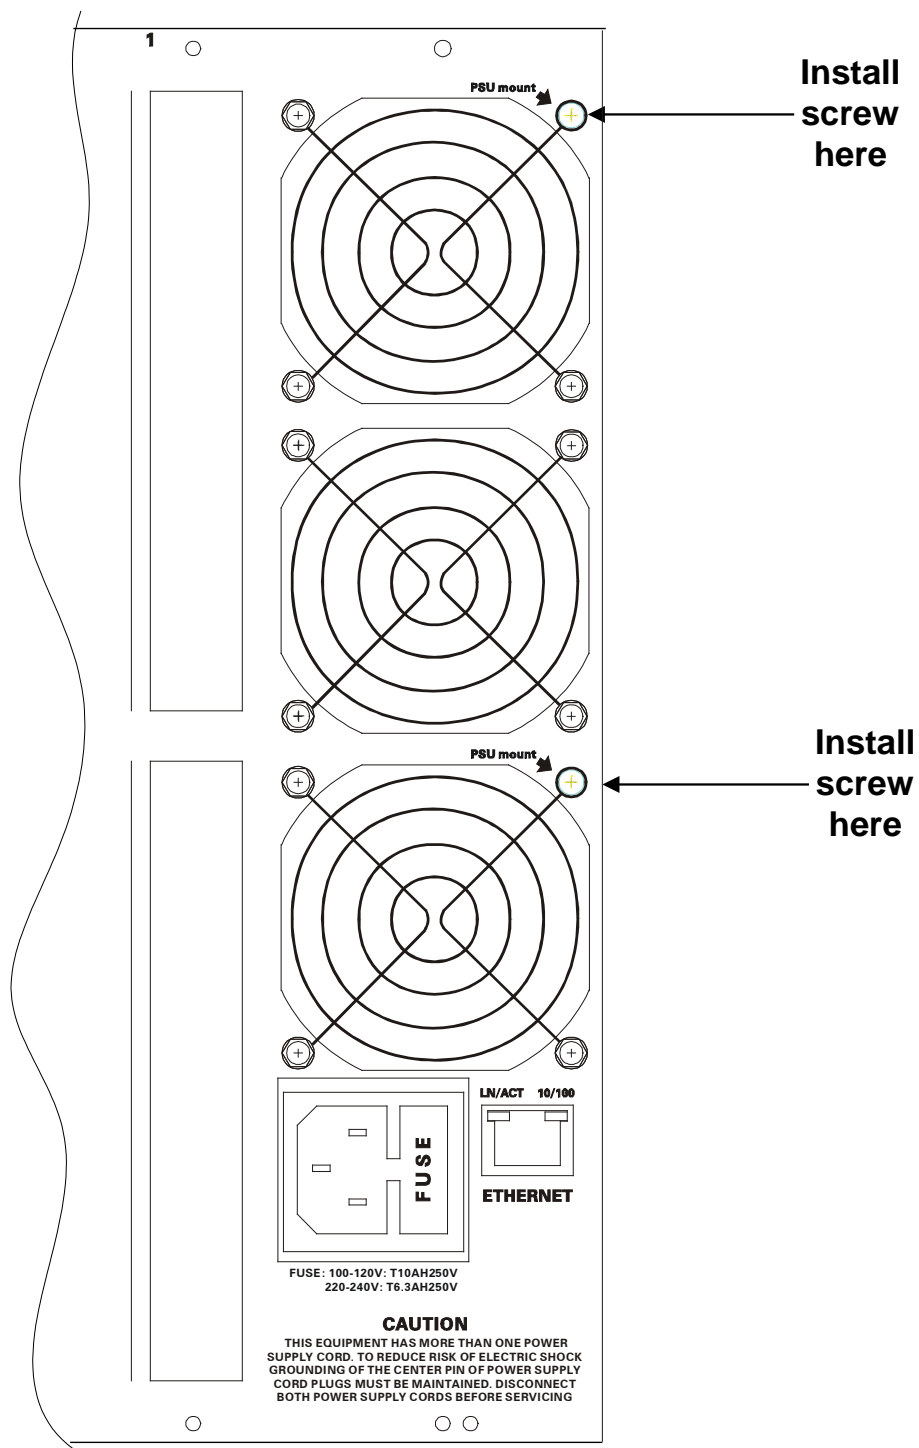


Figure 2-43: Locating the Power Supply Mounting Screw



CAUTION: To reduce the risk of electric shock, you must replace the mounting screw *after* replacing the power supply.

2.7. POWER

The power entry modules contain a standard IEC power inlet connector, two 5 x 20 mm fuse holders, and an EMI line filter.



CAUTION: The EMR frame is shipped with 10 Amp fuses rated for 100-120 VAC operation. If you are operating the EMR System in a country with nominal 220-240 VAC operation, replace the fuses with 6.3 Amp fuses rated for 220-240 VAC operation. See section 2.6.1 for information on changing fuses.

2.7.1. Connecting the Power

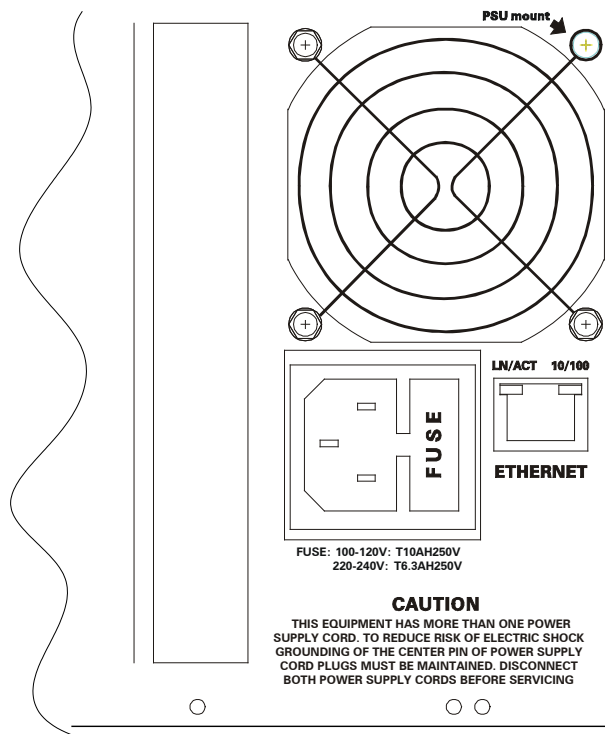


Figure 2-44: Connecting the Power to the Frame

The EMR frame comes standard with one auto-ranging power supply that automatically senses the input voltage over the range of 100 to 240 VAC. An additional power supply can be ordered to provide fully redundant powering of the frame. When only one power supply is fitted, the frame will be fitted with a fan module to ensure the thermal integrity of the frame cooling. In a frame that contains a redundant power supply module, each power supply may be powered from a different AC mains source, allowing complete AC supply redundancy.

Power should be applied by connecting a three-wire, grounding-type power supply cord to the power entry module on the rear panel of each power supply. For use in North America, the power cord should be a minimum 18 AWG wire size; type SVT marked VW-1, maximum 2.5 m in length. For use outside North America, use a power cord approved for the country of use with a minimum 1.00 mm² wire size.



CAUTION: To reduce the risk of electric shock, grounding of the ground pin of the main plug must be maintained.

2.7.2. Turning the Power On and Off

Each power supply is fitted with its own power switch. When the switch is turned off, the remaining power supply will power the frame. To completely remove power from the frame, both power supplies must be turned off.

2.7.3. Power Supply Status Indicators

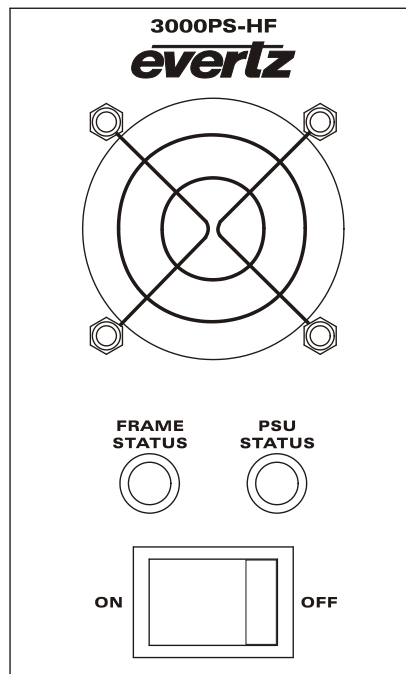


Figure 2-45: Power Supply Status Indicators

Each power supply has two status indicator LEDs. The green PSU STATUS LED indicates the health of the local power supply. The red FRAME STATUS LED indicates the health of the entire frame and is operated by the frame status buss of the frame. The FRAME STATUS LED will be Off under normal conditions and On when there are Frame Status Fault conditions. See section 2.8 for more information about the frame status buss fault conditions.

If one of the power supplies malfunctions, (power cord disconnected, power switch is off, fuse is blown, rear fan is stopped, etc.) then its PSU STATUS LED will go Off, and the red FRAME STATUS LED on both power supplies will turn On. (If the power supplies are fitted with green FRAME STATUS LEDs they will turn Off) The PSU STATUS LED on the power supply that is functioning will remain On. If the frame is connected to VistaLINK[®] then the power supply fault will send a trap message from the frame.



If there is a fuse failure, contact Evertz customer service regarding the power supply immediately. The power supplies are short circuit protected and should not blow the fuse under a short circuit condition.

2.8. FRAME STATUS FAULT CONDITIONS

The Frame is fitted with a global Frame Status monitoring buss that is connected to each of the power supplies and to each of the modules. When a fault condition occurs on one of the power supplies, or one of the modules, a Frame Status Fault condition is active on the frame status buss. When this occurs, the red FRAME STATUS LED on the power supply will come on and the relay on the Frame Status Tally terminal block will activate.

Power supplies, will assert a frame status fault when their PSU STATUS LED is off.

Each module has a large red LOCAL FAULT LED and a large green MODULE OK LED at the top of the card edge. This green LED indicates good module health while the red LED indicates that there is a fault condition on the module. Each module has its own criteria that determine when the red fault LED comes on. When the red LOCAL FAULT LED is On the module can also assert a fault condition on the Frame Status buss. On each module there is a jumper that disables sending local card fault information to the Frame Status Buss. For more information about fault conditions on individual modules, and for the location of the Frame Status Jumper on the module consult the individual chapter for the module. For example, if a module requires video or audio for its functionality and the video or audio is not present, the red LOCAL FAULT LED on the module will be On and the fault will be reported on the frame status buss if the FRAME STATUS jumper on the module is set to the On position (default).

2.9. CARE AND HANDLING OF OPTICAL FIBER

2.9.1. Safety

The **CLASS 1 LASER PRODUCT** sign will appear as the following image:



Background color: Yellow
Triangular band: Black
Symbol: Black

2.9.2. Assembly

Assembly or repair of the laser sub-module is done solely at the Evertz facility, and is performed only by qualified Evertz technical personnel.

2.9.3. Labeling

Certification and Identification labels are combined into one label. As there is not enough room on the product to place the label, it is reproduced here in the manual. See Figure 2-44 below.



Please note: There is not a date of manufacture on this label as it can be traced by the bar code label placed on the printed circuit board of each Evertz plug-in module.



Figure 2-46: Reproduction of Laser Certification and Identification Label

2.9.4. Handling and Connecting Fibers



CAUTION: Never touch the end face of an optical fiber. Always keep dust caps on optical fiber connectors when not connected and always remember to properly clean the optical end face of a connector before making a connection.

Since the transmission characteristics of the fiber depend on the shape of the optical core, care must be taken to prevent fiber damage caused by heavy objects or abrupt fiber bending. Evertz recommends that you maintain a minimum bending radius of 5 cm to avoid fiber-bending loss that will decrease the maximum attainable distance of the fiber cable.

Dust particles on the ends of the optical fiber greatly increase the signal loss at interconnections, and large dust particles can even obscure light transmission altogether. To minimize the effects of dust contamination at the interconnections, the fiber should be cleaned each time it is mated or unmated. When using interconnection housings to mate two optical fibers, it is good practice to remove dust particles from the housing assembly with a blast of dry air. Alternatively, you can use the pre-moistened tissue that you should have received with the optical module. Remove this tissue from its package and wipe the end of the fiber connector before mating it to the module.

Whenever a fiber is unmated, it must be covered immediately. Most fiber manufacturers provide a plastic boot that fits over the ferrule body for this purpose.

Fiber interconnections must be made securely. The Evertz fiber optical transmitters and receivers come with SC interconnection housings built into the module. With this style of connector, the fiber assembly and the housing assembly can only be connected in one way and with very good repeatability. The rear fiber interconnect panel that is provided with each module can be ordered with optional SC/PC, ST/PC, or FC/PC connectors. The customer is required to provide the optical fiber with the correct connectors to connect the modules together. SC/PC, ST/PC, and FC/PC interconnection housing and connectors (as well as adapters) are industry standards with many available sources.

This page left intentionally blank

3. SPECIFICATIONS

3.1. EMR SPECIFICATIONS

3.1.1. Configuration

AES Inputs:	Selectable in blocks of 96 or 48
AES Outputs:	Selectable in blocks of 96 or 48
Analog Inputs:	Selectable in blocks of 48 (stereo)
Analog Outputs:	Selectable in blocks of 48 (stereo)
MADI Inputs:	Selectable in blocks of 16
MADI Outputs:	Selectable in blocks of 16
LTC Inputs:	Selectable in blocks of 96 or 48
LTC Outputs:	Selectable in blocks of 96 or 48
RS-232/RS-422 Ports:	Selectable in blocks of 48 (RS-232 and RS-422 selectable)

3.1.2. Audio Inputs - AES

Sample Rates: 32kHz, 44.1kHz, 48kHz

3.1.2.1. Balanced Version

Standard:	AES3-1992
Signal Level:	0.2 – 7.0V p-p
Impedance:	110Ω ±20%, transformer coupled
DC on Input:	±50V
Connectors:	D50 female

3.1.2.2. Unbalanced Version

Standard:	SMPTE 276M
Impedance:	75Ω
Return Loss:	25dB, 0.1 - 6.0kHz
Connectors:	DIN 1.0/2.3

3.1.3. Audio Outputs - AES

Sample Rates: 32kHz, 44.1kHz, 48kHz

3.1.3.1. Balanced Version

Signal Level:	2.0 – 7.0V p-p
Impedance:	110Ω, transformer coupled
DC Isolation:	±50V
Rise/Fall Time:	3.5 – 10ns
Connectors:	D50 female

3.1.3.2. Unbalanced Version

Signal Level: 1.0 V p-p $\pm 50\%$,
Impedance: 75 Ω
Return Loss: 25dB, 0.1 - 6.0kHz
Jitter: Conforms to ANSI S4.40-1992
Connectors: DIN 1.0/2.3

3.1.4. Analog Audio

Sampling Freq: 48kHz
Freq Response: ± 0.08 dB
Output Impedance: 400 Ω
Input Impedance: 12k Ω minimum
Signal Level: 0dBfs = 18dBu or 24dBu
Noise: -110dB A-weighted
THD+N: >95dB (typically > 98dB)
DC Offset: $> \pm 30$ mV
Crosstalk: <-95dB
I/O Delay: 1.3ms @ 48kHz
Dynamic Range: 24 bits
Connectors: D50 female

3.1.5. Analog to Digital Conversion

Sampling Freq: 48kHz
Freq Response: ± 0.05 dB
Input Impedance: 12k Ω minimum
Signal Level: 0dBu to 18dBu or 24dBu
Noise: -113dB A-weighted
THD+N: >95dB (typically > 98dB)
CMRR: >85dB @ 1kHz
Crosstalk: <-95dB
I/O Delay: 0.85ms @ 48kHz
Connectors: D50 female

3.1.6. Digital to Analog Conversion

Sampling Freq: 48kHz
Freq Response: ± 0.06 dB
Output Impedance: 400 Ω
Signal Level: 0dBfs to 18dBu or 24dBu
Noise: -115dB A-weighted
THD+N: >95dB (typically > 98dB)
DC Offset: $> \pm 30$ mV
Crosstalk: <-95dB
I/O Delay: 1.3ms @ 48kHz
Dynamic Range: 24 bits
Connectors: D50 female

3.1.7. Data Input Port

Type: RS-232 and RS-422, selectable
Signal Level: 0.2 – 7V p-p
Connectors: D50 female

3.1.8. Data Output Port

Type: RS-232 and RS-422, selectable
Signal Level: 2 – 7V p-p
Impedance: 110Ω
Connectors: D50 female

3.1.9. LTC Reader

Standard: SMPTE 12M-1
Level: 2 – 4V p-p, unbalanced or balanced
Speed: 1/30th to 70x play speed, fwd and rev, machine dependent
Connectors: DIN 1.0/2.3 (unbalanced), D50 female (balanced)

3.1.10. LTC Generator

Standard: SMPTE 12M-1
Level: Adjustable, 0.5 – 4.5V p-p
Rise Time: 40±10ms
Jitter: <2ms
Connectors: DIN 1.0/2.3 (unbalanced), D50 female (balanced)

3.1.11. Switching Reference

Reference Inputs: 2x BNC, analog 525/625 or DARS
Impedance: 75Ω terminating
Connectors: BNC per IEC 61169-8 Annex A

3.1.12. Control

Ethernet: 2x RJ45
Serial
 RS-232/RS-422: 2x D9 female

3.1.13. Electrical**EMX6-FR:**

AC Mains Input: Auto ranging, 100 ⇔ 240 VAC, 50/60 Hz
Max Operating Current: 9.5 A (@ 115 VAC nominal), 4.0 A (@ 220 VAC nominal)
Max Power Consumption: 850 W
Max Module Load: 650 W (40 W per slot)
Power Supply Configuration: 1 supply standard, optional redundant supply requires separate inlet
Connector: IEC 60320 - 1 per power supply

EMX3-FR:

AC Mains Input: Auto ranging, 100 ⇔ 240 VAC, 50/60 Hz
Max Operating Current: 4.6 A (@ 100 V/60Hz), 1.85A (@ 240 V/50Hz)
Max Power Consumption: 450 W
Max Module Load: 360 W (24 W per slot)
Power Supply Configuration: 1 supply standard, optional redundant supply requires separate inlet
Connector: IEC 60320 - 1 per power supply

3.1.14. Physical

3000FR:

Height: 10.5" (266mm)
Width: 19.0" (483mm)
Depth: 14.5" (368mm)
Module Capacity: 15 single slot EMR series modules
Weight Approx.: 34.8lbs (15.8kg) with 2 power supplies, no slots occupied
Approximately: 64.0lbs (29kg) with 2 power supplies, all slots occupied

EMX6-FR:

Height: 10.5" (266mm)
Width: 19.0" (483mm)
Depth: 15.75" (400mm)
Module Capacity: 15 single slot EMR series modules
Weight Approx.: 34.8lbs (15.8kg) with 2 power supplies, no slots occupied
Approximately: 64.0lbs (29kg) with 2 power supplies, all slots occupied

EMX3-FR:

Height: 5.25" (133mm)
Width: 19.0" (483mm)
Depth: 15.75" (400mm)
Module Capacity: 5 single slot EMR series modules
Weight Approx.: 17.4lbs (7.9kg) with 2 power supplies, no slots occupied
Approximately: 32.0lbs (14.5kg) with 2 power supplies, all slots occupied

3.2. 3000FC FRAME CONTROLLER MODULE

The 3000FC Frame Controller module provides a single point of access to communicate with the EMR cards. The 3000FC provides a 10Base-T/100Base-TX Ethernet port and handles all communications between the frame and the control system, and serves as a gateway to individual cards in the frame. The 3000FC also provides an RS-232 serial port at the card edge to set up the network addresses.

The 3000FC is housed in a narrow slot underneath the left side power supply in the 3000FR Frame.

3.2.1. Specifications

3.2.1.1. Ethernet

Network Type: Fast Ethernet 100 Base-TX IEEE 802.3u standard for 100 Mbps baseband CSMA/CD local area network
Ethernet 10 Base-T IEEE 802.3 standard for 10 Mbps baseband CSMA/CD local area network

Connector: RJ-45 (on rear panel of 3000FR Frame)

3.2.1.2. Serial Communications

Standard: RS-232

Connector: 9-Pin Female D

Baud Rate: 57600

Format: 8 bits, no parity, 2 stop bits, no flow control

3.2.1.3. Electrical

Voltage: + 12VDC

Power: 7 Watts

EMI/RFI: Complies with FCC Part 15
Class A and EU EMC directive

3.3. EMX-FC FRAME CONTROLLER MODULE

The EMX-FC Frame Controller module provides a single point of access to communicate with the EMR cards. The EMX-FC provides a 10Base-T/100Base-TX Ethernet port and handles all communications between the frame and the control system, and serves as a gateway to individual cards in the frame. The 3000FC also provides an RS-232 serial port at the card edge to set up the network addresses.

The EMX-FC is housed in a narrow slot underneath the left side or right side power supply in the EMX6-FR frame, and to the left of the right side power supply in the EMX3-FR frame.

3.3.1. Specifications

3.3.1.1. Ethernet

Network Type: Fast Ethernet 100 Base-TX IEEE 802.3u standard for 100 Mbps baseband CSMA/CD local area network
Ethernet 10 Base-T IEEE 802.3 standard for 10 Mbps baseband CSMA/CD local area network

Connector: RJ-45 (on rear panel of frame)

3.3.1.2. Serial Communications

Standard: RS-232

Connector: 15-Pin Female D

Baud Rate: 115200

Format: 8 bits, no parity, 2 stop bits, no flow control

3.3.1.3. Electrical

Voltage: + 12VDC

Power: 7 Watts

EMI/RFI: Complies with FCC Part 15
Class A and EU EMC directive

4. SYSTEM OVERVIEW

4.1. INTEGRATED AUDIO ROUTING

The EMR audio routing system is a flexible, scalable system that provides the capability to route various audio formats without discretion. Depending on which input and output components are in the system, analog, AES and MADI audio can be routed from any source to any destination. The EMR uses a high bandwidth interface to connect the various components together. This interface is either MADI or TDM depending on which firmware is installed.

4.1.1. Audio Components Connected

In early versions of the EMR audio routing solution, MADI audio was used as the interface between the various components in the system. In this system, each AES or analog audio input card, converts the incoming audio into a defined number of MADI outputs. The MADI outputs are then interfaced to the crosspoint using a 3000MADI16-TDM4 module. This module converts all of the incoming MADI inputs into TDM outputs. For applications that require MADI inputs, these can be fed directly to the 3000MADI16-TDM4 module.

Once the audio is in the form of TDM, the 3000ADMX-16X16 crosspoint allows any source to be routed to any destination. This is the module which is under the control of the control system and allows routes to be made. All other components surrounding this module map inputs to outputs statically.

At the output of the crosspoint module, TDM is converted back into MADI outputs using a 3000TDM4-MADI16 module. Using one of the various audio output cards, the MADI can be converted back to AES or analog audio. In applications that require MADI outputs, the audio can be directly sourced from the 3000TDM4-MADI16.

Figure 4-1 shows how the various devices are connected together using MADI as the common interface.

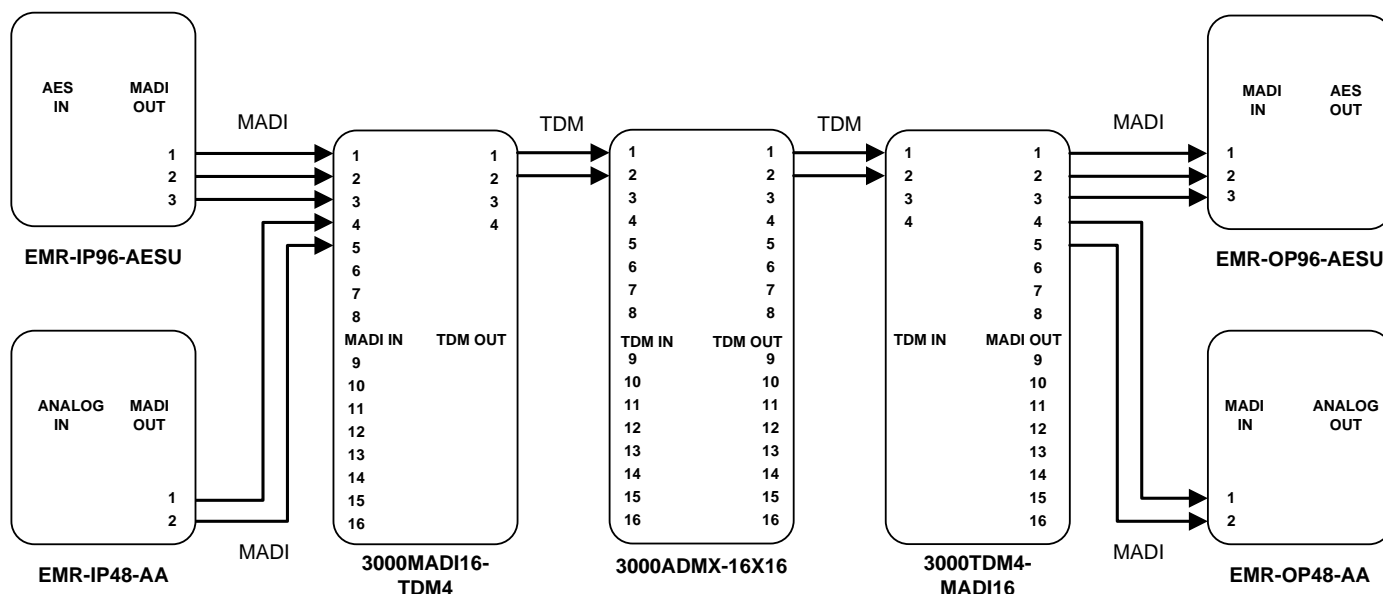


Figure 4-1: EMR Audio Connected with MADI Interface

In the latest versions various EMR components are entirely using TDM. This system is very similar to the system described previously except the audio input card and audio output cards connect directly to the ADMX crosspoint module.

AES, analog and MADI audio input cards all convert their respective formats to TDM. This TDM is connected to the inputs of the ADMX. As with the previous system, routes from the control system are only made on the crosspoint.

At the output of the crosspoint, the TDM is connected directly to any one of the AES, analog or MADI audio output cards to be converted back to the respective format.

Figure 4-2 shows how the various devices are connected together using TDM as the common interface.

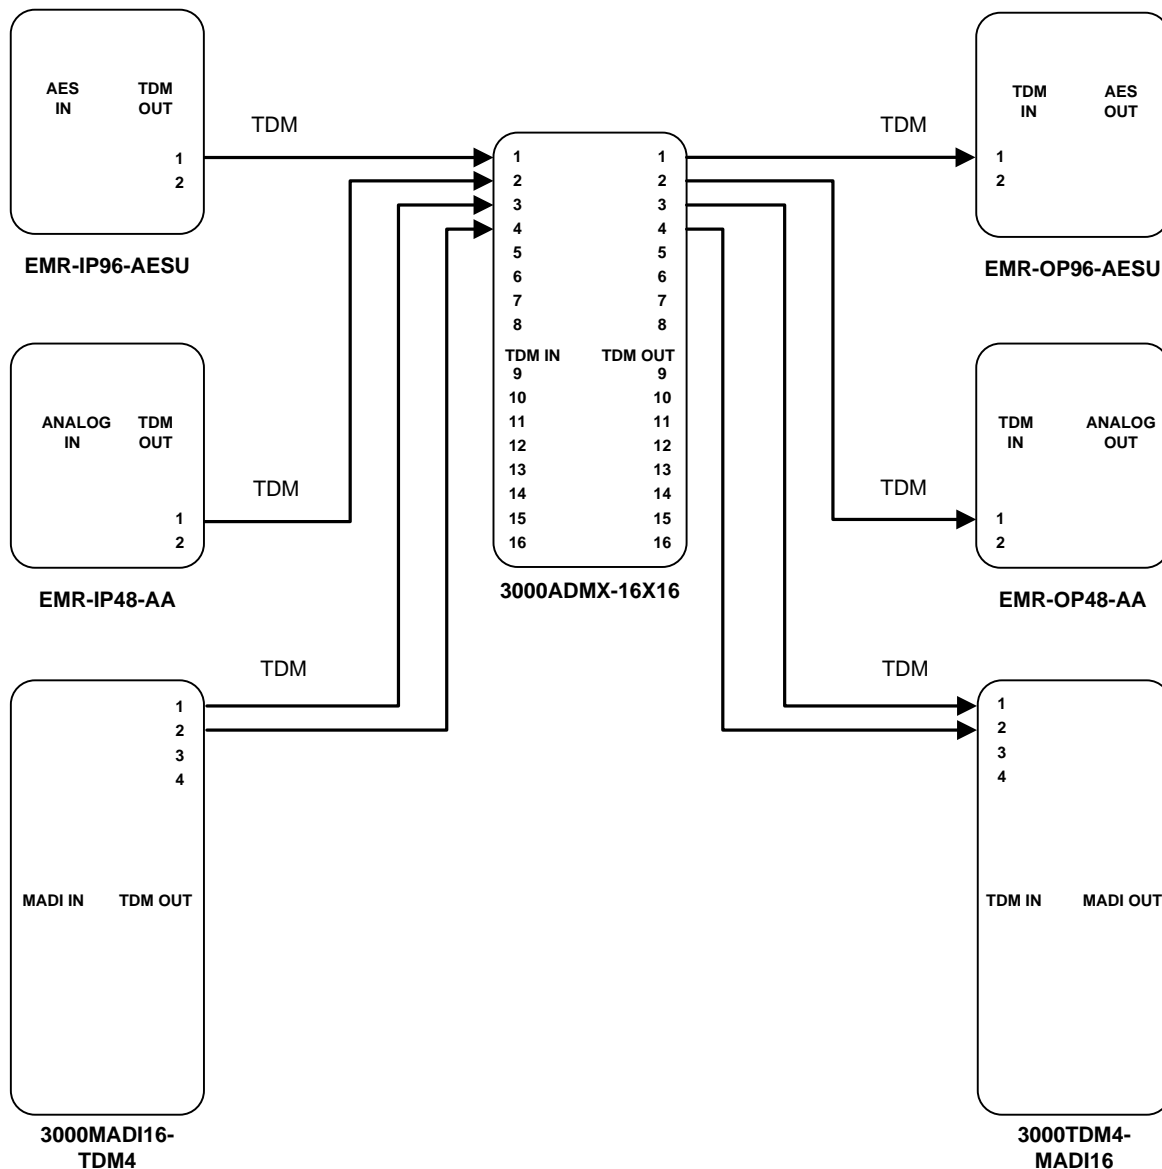


Figure 4-2: EMR Audio Connected with TDM Interface

4.1.2. Connecting to EQX for Embedded Audio Embedding/De-embedding

In addition to standard AES, analog, and MADI audio routing, the EMR also provides an interface to route embedded audio using the EQX video router, providing a completely integrated audio routing solution. Using the EQX router with the EQX-IP16AD-H (3G)-2TDM audio de-embedder module and EQX-OP16AE-H (3G)-2TDM embedder module, embedded audio can be routed between the EQX and EMR platforms.

The EQX-IP16AD-H (3G)-2TDM audio de-embedder module and EQX-OP16AE-H (3G)-2TDM embedder module both provide TDM interfaces that connect directly to the ADMX crosspoint module.

The de-embedder module de-embeds all 16 channels of audio from each of its 16 video inputs and transfers the audio over TDM to the crosspoint. Once provided to the crosspoint, the audio is available to be routed to any of the AES, analog or MADI output modules.

The embedder module embeds all 16 channels of audio to each of its 16 video outputs. The audio provided to the embedder module is sourced from the crosspoint over a TDM connection. This allows the embedded audio to be sourced from any of the AES, analog or MADI audio input modules.

Figure 4-3 shows how the various components between the EQX and EMR are connected. For more information regarding the EQX de-embedder and embedder modules, consult the EQX user manual.

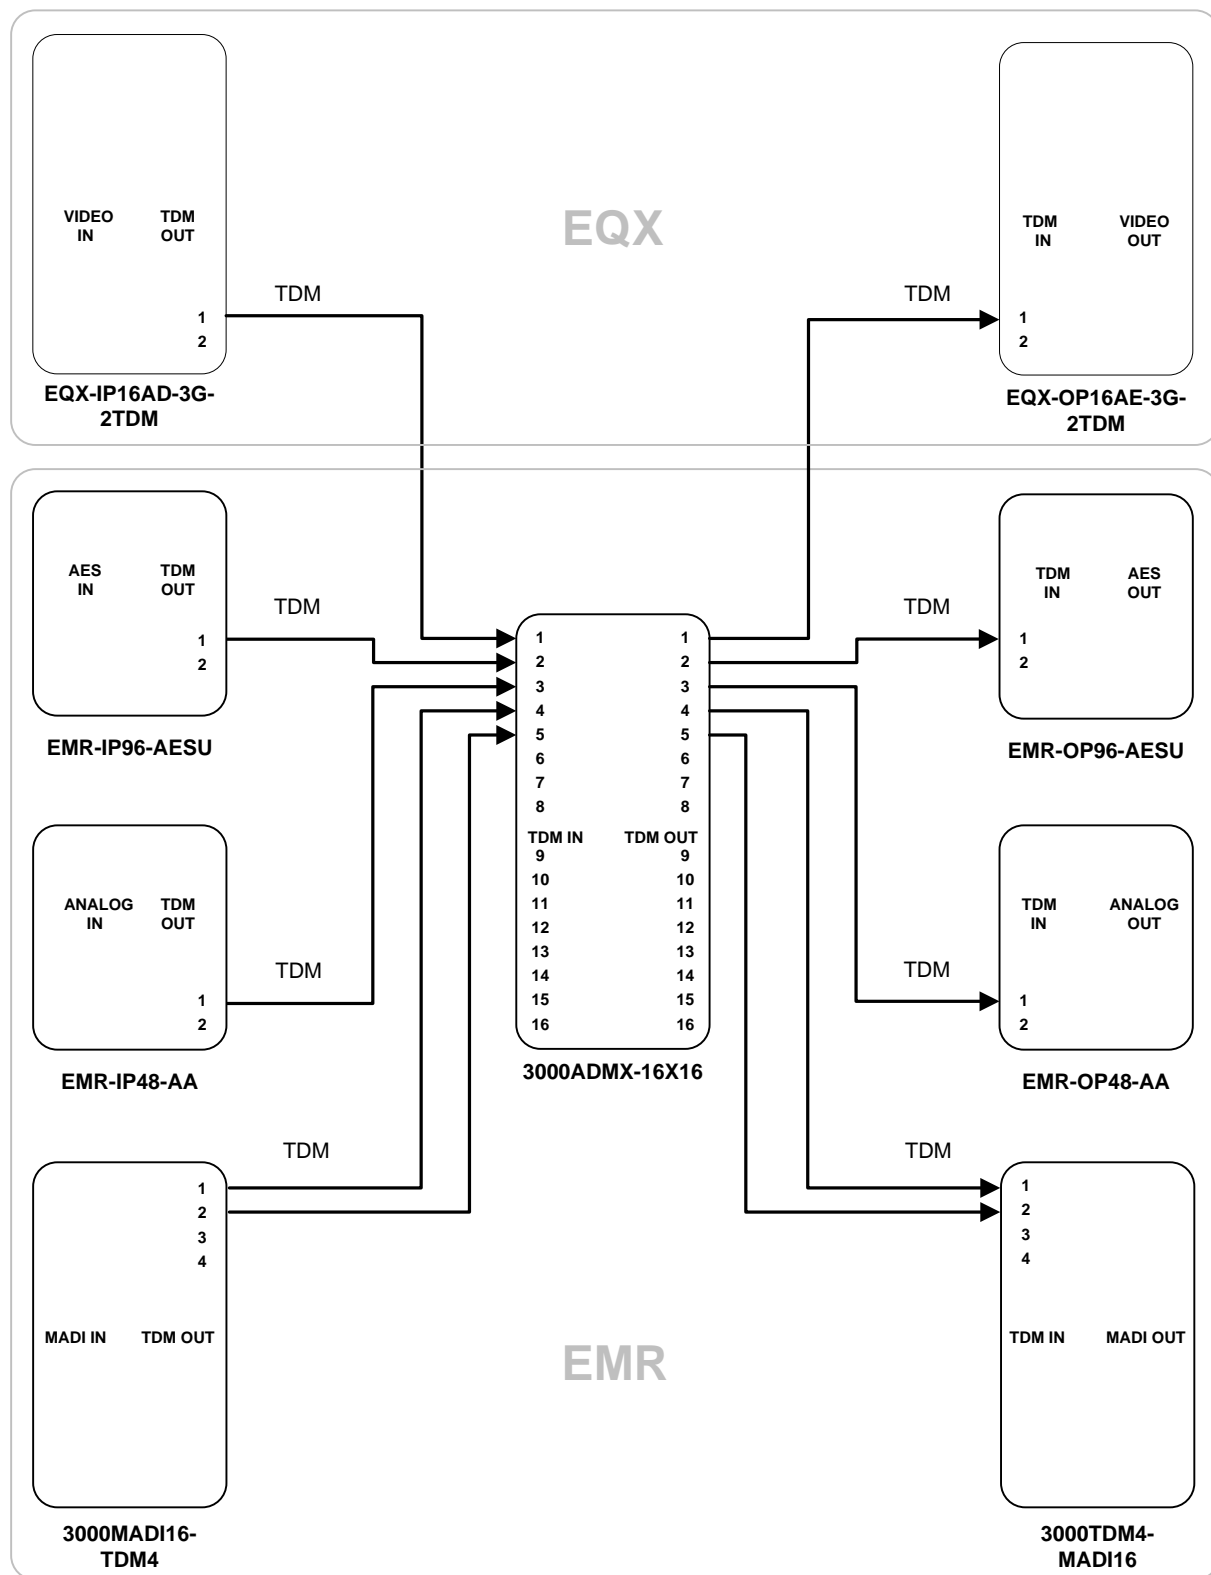


Figure 4-3: EQX and EMR Interconnection

4.1.3. Referencing the Audio Routing System

The integrated audio routing solution which combines the EMR and EQX routers requires that all video and audio sources be synchronous to each other and a common reference. A common video reference must be applied to the EMR and EQX frames. The EMR reference must be a bi-level analog video signal, and the EQX reference can be one of many options. For details regarding the EQX reference structure, consult the EQX user manual.



Note: When using the EMR and EQX as an integrated routing solution, all audio and video sources as well as the EMR and EQX frames must be locked to a common reference.

4.1.4. Cable Length Limitations

The TDM signal used to interface the various components in the EMR system transfers data at very high speeds. As a result, there are certain limitations in the cable length between connections. Using Belden 1694A or equivalent cable, all TDM cable lengths between two devices must be 20m (65ft) or less as shown in Figure 4-4.

For connections between EMR components that will exceed 20m, Evertz has a full lineup of fiber conversion gear that can be used to transport the TDM signal. Please contact the factory for more details.

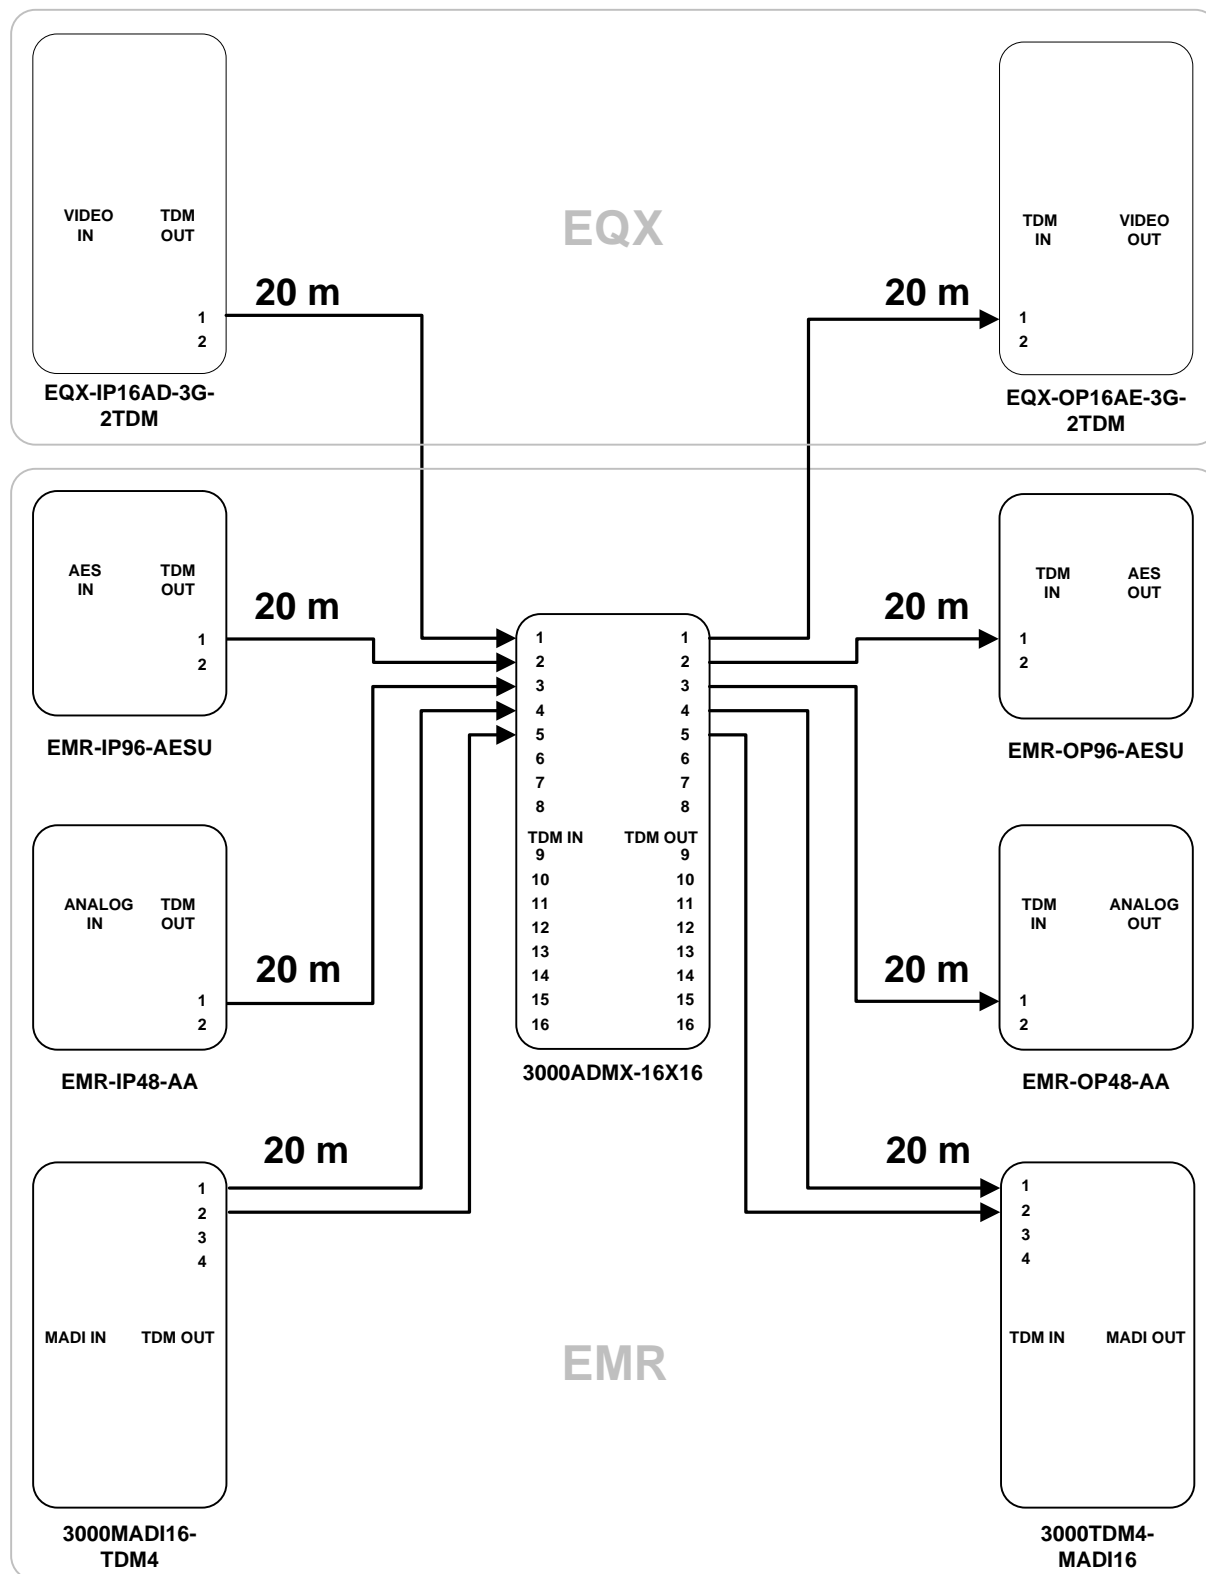


Figure 4-4: TDM Cable Length Limitations

4.1.5. Optional Audio Features

The EMR audio components have several optional features that make the EMR a very powerful audio solution. Each of the components is described in the following sub sections.

4.1.5.1. Sample Rate Conversion (+SRC)

The sample rate conversion option is available on the EMR AES input and output cards. The sample rate conversion option provides the capability to modify the same rate of any incoming audio signal and change it to a user specified sample rate that is locked to the frame reference. The sample rate converters can be bypassed to allow Dolby E/D signals to pass or they can be set in auto mode so that they are enabled only when PCM audio is detected.

Each module has two sample rate conversion blocks, allowing half the signals in the module to convert to one sample rate and the other half to convert to another sample rate. The sample rate conversion also applies to MADI inputs and outputs when supported. Individual channels within the MADI signal pass through independent sample rate converters. Control of the sample rate converters is done using VistaLINK[®] Pro which is detailed in section 5.1.2.

4.1.5.2. Signal Processing (+DSP)

The signal processing option or audio processing option is available on the EMR AES and analog input and output cards. The signal processing option provides the capability to adjust the gain between -24dBu and +24dBu, invert the phase, and mute each mono audio channel. Each mono channel also contains a quad-input mixer in the processing path. Figure 4-5 provides a conceptual view of the audio signal flow through the various processing stages for one mono audio channel. Control of the processing stages is done using VistaLINK[®] Pro which is detailed in section 5.1.3.

4.1.5.3. Delay (+DLY)

The delay option is available on the EMR AES and analog input and output cards. The delay option provides the ability to add delay to each mono audio signal on the module. Delay of up to 1.3 seconds can be added to each path in sample increments. If the option is applied to both the input and output modules then a total delay of 2.6 seconds can be applied to the entire audio path. Figure 4-5 shows where the audio delay is applied with respect to the processing path. Control of the audio delay is done using VistaLINK[®] Pro which is detailed in section 5.1.2.

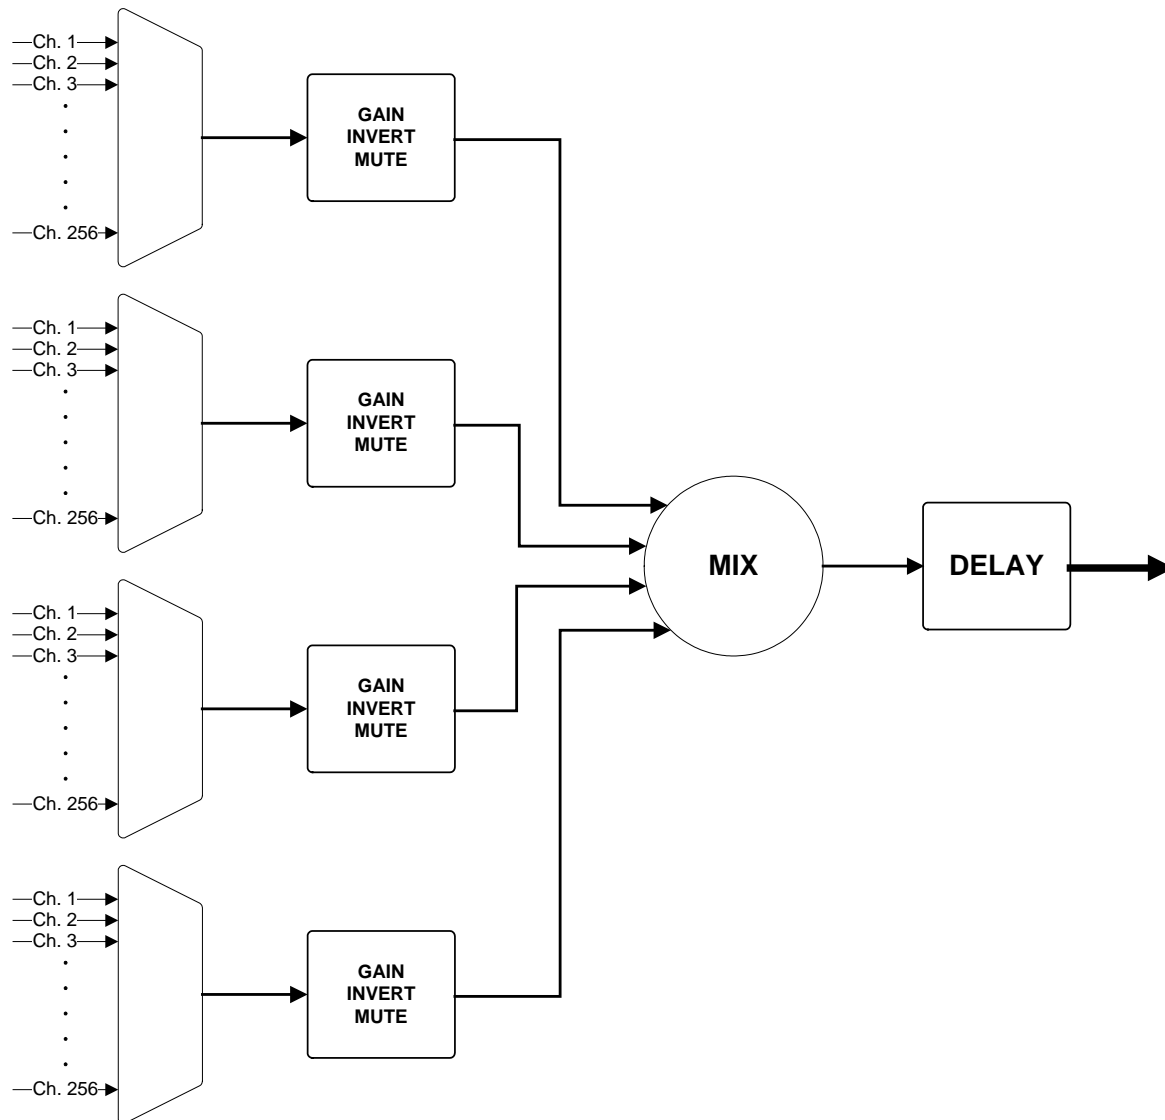


Figure 4-5: Audio Processing Signal Flow

4.1.5.4. Advanced Monitoring (+AM)

The advanced monitoring option is available on the EMR AES and analog input cards. The advanced monitoring option provides two main features. The first is in depth monitoring and alarm presentation of audio loss, over, silence, phase reversal and mono. Each monitoring parameter has a set of controls to define appropriate thresholds and reset values. These values are used to determine when alarms are triggered. The audio loss, over and silence operate on a per channel basis, while the phase reversal and mono operate on a per pair basis. Control of the advanced monitoring is done using VistaLINK[®] Pro which is detailed in sections 5.1.5 and 5.1.6.

The second feature is the ability to broadcast audio bar level and peak information over Ethernet to supported devices such as VistaLINK[®] Pro and VIP multi-viewers. This allows the subscribing device to re-create audio bar graphs on a selective basis to monitor AES and analog audio inputs, without using up valuable AES and analog outputs. Refer to section 5.1.6.3 for details.

4.2. TIME CODE ROUTING

The EMR time code routing system utilizes the same TDM technology as the audio router to provide a flexible, high density time code routing solution. Unlike traditional time code routers that perform analog-to-digital and digital-to-analog conversions with a digital crosspoint, the EMR time code router uses time code decoding and encoding techniques. This allows the EMR time code router to handle much higher spooling rates than traditional time code routers. The ability to decode and encode time code also provides the advantage of being able to perform advanced functions such as displaying the time code or delaying and advancing the time code.

Each time code input card has multiple TDM outputs, all with the same information. This allows a single input card to be connected to multiple output cards. On the output side, each output card has multiple TDM inputs in which it can source a time code output. This allows multiple input cards to be connected to a single output card. This straightforward architecture makes the EMR time code router easy to setup and easy to expand.

With the multiple TDM inputs and outputs available, a 768x768 time code router can be constructed simply by inter-connecting TDM connections. A system with only one input card and one output card is shown in Figure 4-6. A larger system consisting of multiple input and output cards for a 288x288 configuration is shown in Figure 4-7. For systems beyond 768x768, an ADMX crosspoint must be utilized.

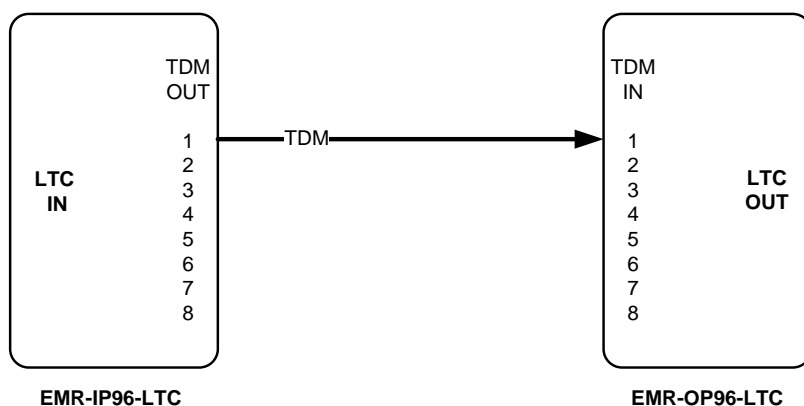


Figure 4-6: 96x96 LTC Configuration

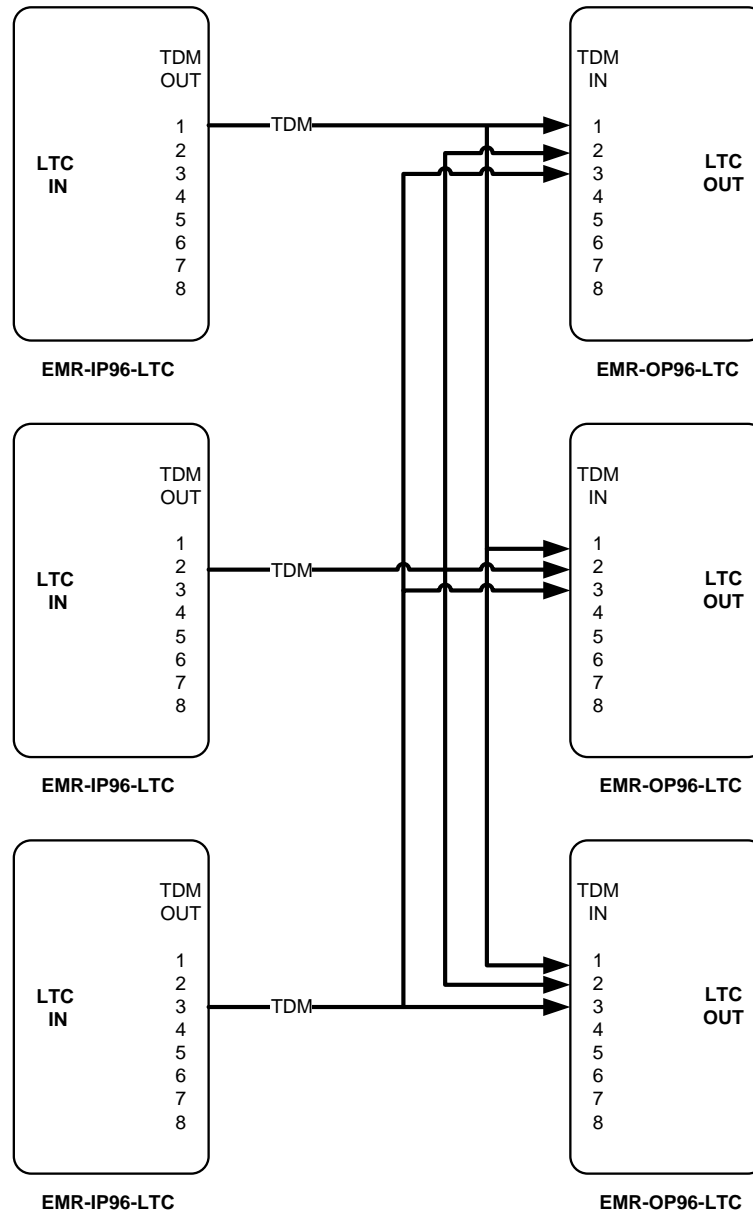


Figure 4-7: 288x288 LTC Configuration

4.2.1. Configuring the LTC Router

To configure the LTC router in a system that does not have an ADMX crosspoint, each of the output cards must be given a specific *Card ID* to identify the sequence of destinations. The *Card ID* is set by accessing the configuration menu through the front serial port or through a telnet session.

Once the menu is accessed, the *Card ID* is set by going to menu item 3, then menu item 5.



Note: Each output module in an EMR LTC routing system must be configured with a unique *Card ID* to define the sequence of destinations in the system.

4.2.2. Referencing the LTC Router

A common video reference must be applied to all frames in which the LTC cards within a system are installed. This ensures that the TDM signal that is used to distribute the LTC signals is synchronized amongst all of the cards. The reference must be a bi-level analog video signal.



Note: When using the EMR for LTC routing solutions, the EMR frames must be locked to a common bi-level video reference.

4.3. DATA PORT ROUTING

The EMR data port routing system also takes advantage of TDM technology to provide a flexible, high density data port routing solution. The EMR data port router supports both RS-232 and RS-422 standards simultaneously, with each port being software configurable.

Each EMR data port module contains bi-directional data ports that can either be transmitters or receivers. The function of each port can be manually configurable or it can be set to automatically detect the direction for devices that support the Sony pin.



Note: The Sony pin is not always supported by a Sony VTR. Refer to the manual for the VTR to ensure that it is supported.

A data port module is equipped with TDM inputs and outputs. To inter-connect multiple modules, each module must have one output connected to every other module, and it must also have one input connected from every other module. This provides a bi-directional interface between every module in the system. This system of connecting data port modules allows the EMR data port routing system to grow to 336 data ports without requiring any additional modules. Figure 4-8 shows a 96 data port system consisting of two data port modules. For systems beyond 336 ports, an ADMX crosspoint must be utilized.

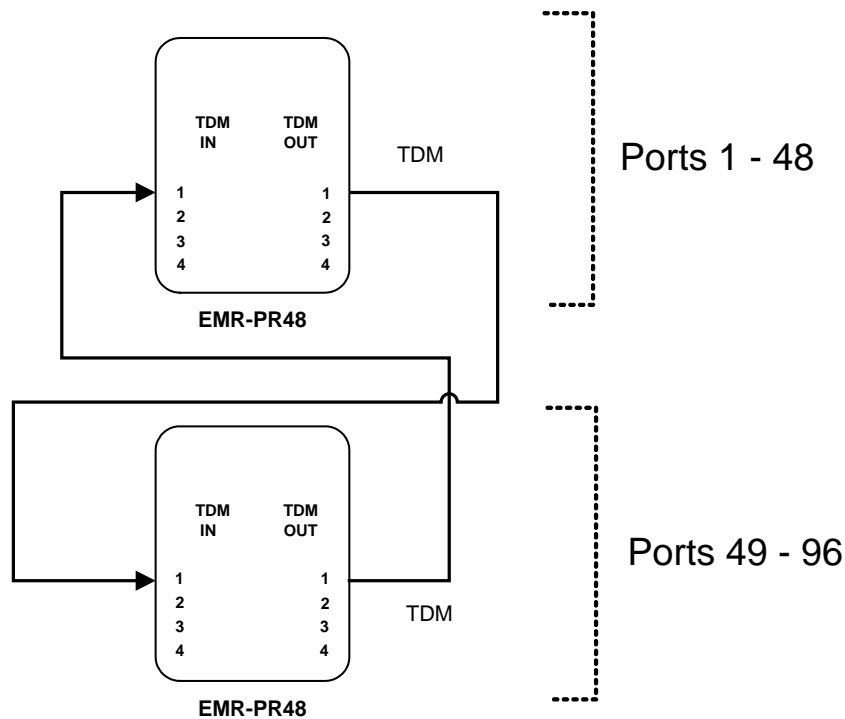


Figure 4-8: 96 Port Configuration

4.3.1. Configuring the Data Port Router

To configure the EMR data port router in a system that does not have an ADMX crosspoint, each of the output cards must be given a specific *Card ID* to identify the sequence of ports. The *Card ID* is set by accessing the configuration menu through the front serial port or through a telnet session.

Once the menu is accessed, the *Card ID* is set by going to menu item 3, then menu item 5.



Note: Each module in an EMR data port routing system must be configured with a unique *Card ID* to define the sequence of ports in the system.

4.3.2. Referencing

A common video reference must be applied to all frames in which the data port cards within a system are installed. This ensures that the TDM signal that is used to distribute the data signals is synchronized amongst all of the cards. The reference must be a bi-level analog video signal.



Note: When using the EMR for data port routing solutions, the EMR frames must be locked to a common bi-level video reference.

5. WHAT IS VISTALINK[®]?

VistaLINK[®] is Evertz's remote monitoring and configuration platform which operates over an Ethernet network using Simple Network Management Protocol (SNMP). SNMP is a standard computer network protocol that enables different devices sharing the same network to communicate with each other. *VistaLINK[®]* provides centralized alarm management, which monitors, reports, and logs all incoming alarm events and dispatches alerts to all the VLPro Clients connected to the server. Card configuration through *VistaLINK[®]* PRO can be performed on an individual or multi-card basis using simple copy and paste routines, which reduces the time to configure each module separately. Finally, *VistaLINK[®]* enables the user to configure devices in the network from a central station and receive feedback that the configuration has been carried out.

There are 3 components of SNMP:

1. A SNMP manager, also known as a Network Management System (NMS), is a computer running special software that communicates with the devices in the network. Evertz *VistaLINK[®]* Pro Manager graphical user interface (GUI), third party or custom manager software may be used to monitor and control Evertz *VistaLINK[®]* enabled fiber optic products.
2. Managed devices (such as EMR modules), each with a unique address (OID), communicate with the NMS through an SNMP Agent.
3. A virtual database, known as the Management Information Base (MIB) lists all the variables being monitored and which both the Manager and Agent understand. Please contact Evertz for further information about obtaining a copy of the MIB for interfacing to a third party Manager/NMS.

5.1. EMR AUDIO VISTALINK® PARAMETERS

5.1.1. General VistaLINK® Parameters for EMR Audio

The EMR audio modules have general parameters that refer to global functions of the device. These parameters reflect the function of the entire module and are required for general setup. Figure 5-1 shows the VistaLINK® view for the EMR AES output module. The EMR AES input module and the analog audio modules will have similar views.

192.168.100.55, EMR-OP96-AESU+DSP+DL: Configuration

Refresh 1.0 Apply Status Completed 192.168.100.55 (10:26:57 2011-10-14) Logger

General Audio Control Audio Processing

Card Type
Card Type EMR-OP96-AESU+DSP+DLY

Reference

Port 1 Format	Video Reference	Port 2 Format	Video Reference
Port 1 Source	Reference 1	Port 2 Source	Reference 2
Port 1 Auto Detect	Disabled	Port 2 Auto Detect	Enabled
Port 1 Video Standard	NTSC	Port 2 Video Standard	PAL
Port 1 Present	Present	Port 2 Present	Absent
Port 1 Video Standard	NTSC	Port 2 Video Standard	Unknown
Port 1 Audio Standard	Unknown	Port 2 Audio Standard	Unknown
Primary Reference Source	Reference Port 1	Fail Safe Mode	Auto Swap Mode
Frame Ref Port In Use	Reference Port 1	Frame Ref Error Count	1

Reset Error Count

Global Audio Control

Audio Mixer Enabled

Faults

Trap Enable

- ☐ Frame Reference Status Port 1
- ☐ Frame Reference Status Port 2

Trap Status

- ☒ Frame Reference Status Port 1
- ☐ Frame Reference Status Port 2

Figure 5-1: VistaLINK® General Tab for EMR Audio

5.1.1.1. General VistaLINK[®] Control Parameters

The following general audio parameters can be remotely controlled through the VistaLINK[®] interface. The control parameters for Port 2 have been left out as they are identical in behavior to the Port 1 parameters.

Port 1 Format: This control allows the user to set the format of the reference to Input 1. Possible options are Video reference, Unbalanced Audio, Balanced Audio and Auto.

Port 1 source: This control allows the user to set the source of the reference to input 1. Possible options are reference 1, Reference2, DARS1, DARS2 and Frame Global.

Port 1 Auto Detect: This control allows the user to set the port in order to auto detect the format and standard of the reference.

Port 1 Video Standard: This control allows the user to set the video standard of video signal. (Note that if Auto Detect is enabled then this control will not have any affect.) Possible options are NTSC and PAL.

Primary Reference Source: This control allows the user to set the primary reference source. Possible options are Reference Port 1 and Reference Port 2.

Fail Safe Mode: This control allows the user to set the behavior of the reference detection mechanism when there is a failure. Possible options are No Swap mode, Single Swap Mode and Auto Swap Mode.

Reset Error Count: This control allows the user to reset the frame Ref Error Count monitoring parameter.

Audio Mixer: This control allows the user to set whether the audio mixer controls are used or not. (This control is available only for +DSP option.)

5.1.1.2. General VistaLINK[®] Monitor Parameters

The following general audio parameters can be remotely monitored through the VistaLINK[®] interface. The monitor parameters for Port 2 have been left out as they are identical in behavior to the Port 1 parameters.

Card Type: This parameter indicates the model of the device including options.

Port 1 Present: This parameter indicates the presence of a reference to reference input 1.

Port 1 Video Standard: This parameter indicates the video standard of reference input 1 if present.

Port 1 Audio standard: This parameter indicates the sample rate of reference input 1 if present.

Frame ref Port in Use: This parameter indicates which reference port is currently in use.

Frame Ref Error Count: This parameter indicates the number of errors accumulated on the reference signal.



Note: The Frame Ref Error Count should always be zero once a system has been setup and is in steady state, and after the count has been reset.

5.1.1.3. General VistaLINK® Audio Traps

The following general audio parameters generate traps through the VistaLINK® interface. The trap parameters for Port 2 have been left out as they are identical in behavior to the Port 1 parameters.

Frame Reference status: This parameter raises a trap when a reference signal is removed from reference input 1.

5.1.2. Audio Channel Control VistaLINK® Parameters for Audio EMR

The EMR audio modules have standard control parameters that affect the behavior of each channel independently. These parameters only affect the channel to which they are applied. The affected channel can be selected using the drop down box at the top. Channels are controlled independently but are shown in pairs in the case where users want to control a pair at a time. Figure 5-2 shows the VistaLINK® view for the EMR AES input module. The EMR AES output module and the analog audio modules will have similar views. At the bottom of the tab will be a button that allows the user to apply the settings of channel 1 to all of the channels. Use caution with this function as it will change the state of all signals and cannot be reversed.

The screenshot displays the VistaLINK® Audio Channel Control Tab for EMR Audio. The interface is divided into two main sections for Channel 1 and Channel 2. At the top, there is a 'Show Channel' dropdown menu set to 'Channel 1 and Channel 2'. Below this, each channel has a 'Delay' slider set to 0 ms. The 'Monitoring' section for each channel includes 'Signal Present' (set to Present), 'Standard Type' (set to PCM), and 'Sample Rate' (set to 48 kHz). The 'Audio Tone Generator' section for each channel includes 'Audio Tone Gen Enable' (set to Disable), 'Audio Tone Gen Freq' (set to 1000Hz), and 'Audio Tone Gen Gain' (set to -6 dBFS). At the bottom, there is a 'Configuration from Channel 1' button and a note: 'Clicking on this button will apply all channels the settings of channel 1'.

Figure 5-2: VistaLINK® Audio Channel Control Tab for EMR Audio

5.1.2.1. Audio Channel Control VistaLINK[®] Control Parameters

The following audio channel control parameters can be remotely controlled through the VistaLINK[®] interface.

Delay: This control allows the user to set the audio delay. (This control is available for +DLY option only.) The value can be between 0 to 1364ms in one sample increments.

Audio Tone Gen Enable: This control allows the user to set the internal tone generator.

Audio Tone Gen Freq: This control allows the user to set the frequency of the tone generator. Possible options are 10Hz, 100Hz and 1000Hz.

Audio Tone Gen Gain: This control allows the user to set the gain of the tone generator. The value can be between -80 to 0 dBFS in 1 dBFS increments.

5.1.2.2. Audio Channel Control VistaLINK® Monitor Parameters

The following audio channel control parameters can be remotely monitored through the VistaLINK® interface.

Signal Present: This parameter indicates the presence of an audio signal.

Standard Type: This parameter indicates the type of audio signal.

Sample Rate: This parameter indicates the sample rate of the audio signal.

5.1.3. Audio Channel Processing VistaLINK® Parameters for Audio EMR

The EMR audio modules have optional (*+DSP option*) processing parameters that affect the behavior of each channel independently. These parameters only affect the channel to which they are applied. The affected channel can be selected using the drop down box at the top. Channels are controlled independently but are shown in pairs in the case where users want to control a pair at a time. Figure 5-3 shows the VistaLINK® view for the EMR AES output module. The EMR AES input module and the analog audio modules will have similar views. At the bottom of the tab will be a button that allows the user to apply the settings of channel 1 to all of the channels. Use caution with this function as it will change the state of all signals and cannot be reversed.

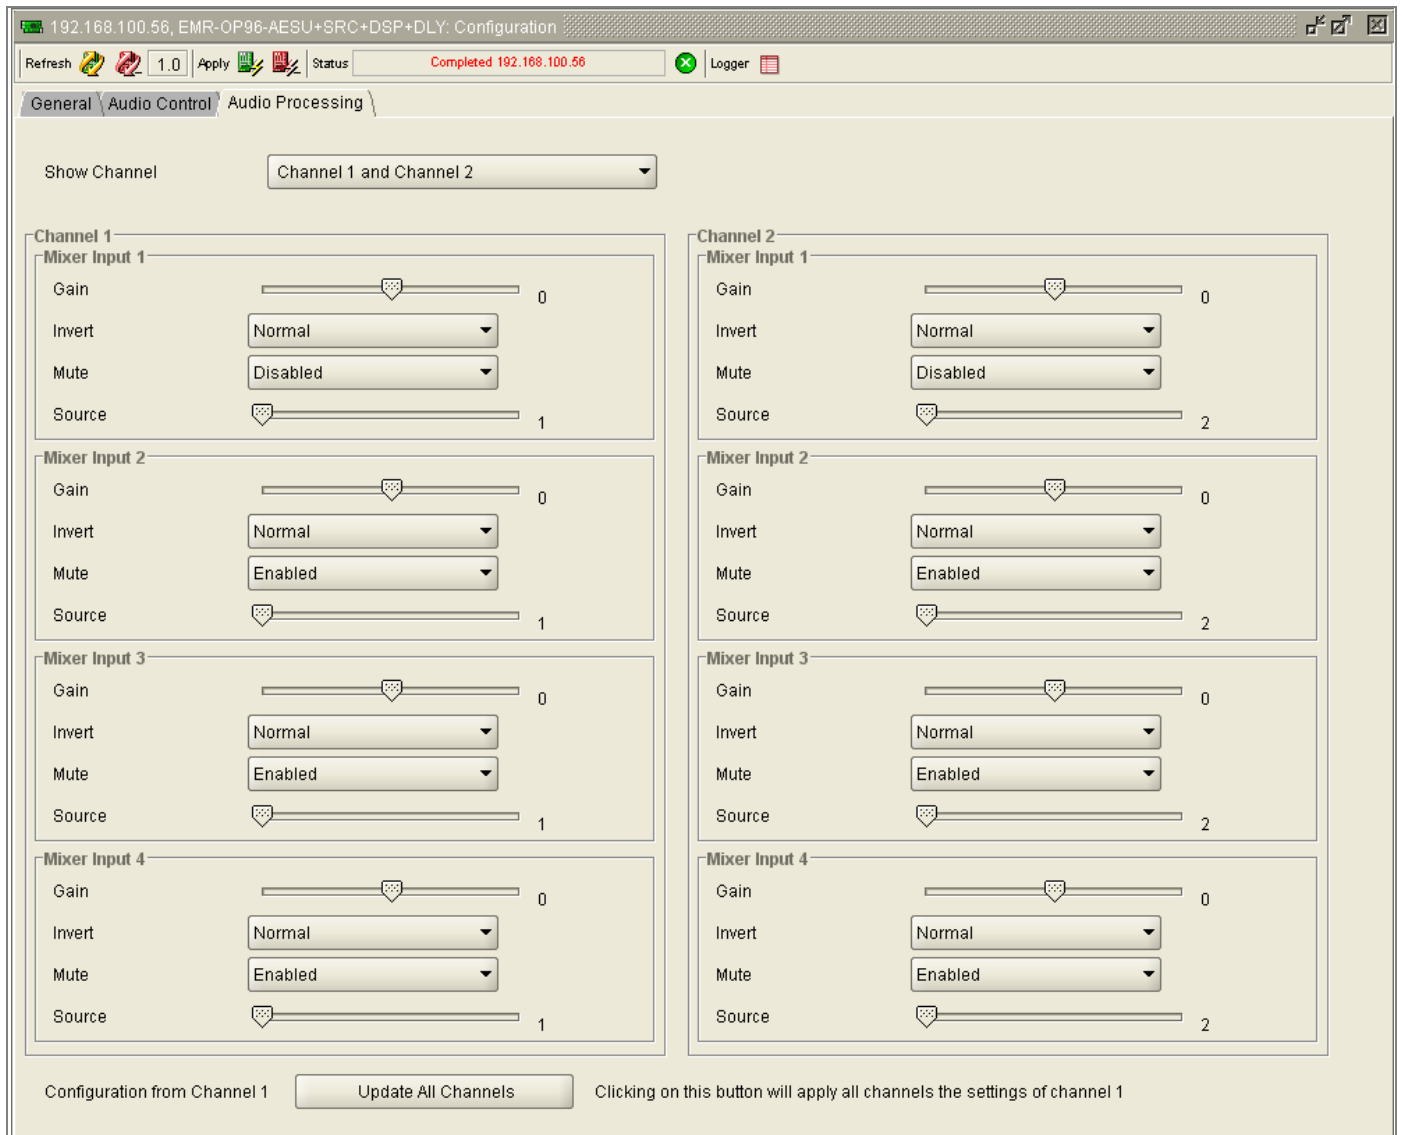


Figure 5-3: VistaLINK® Audio Channel Processing Tab for EMR Audio

5.1.3.1. Audio Channel Processing VistaLINK® Control Parameters

The following audio processing parameters can be remotely controlled through the VistaLINK® interface. Only the parameters for Mixer Input 1 are described but the same logic is applied to Mixer Inputs 2-4.

Gain: This control allows the user to set the gain which is applied to the signal. The value is between -24 to +24 dB in 1 dB increments.

Invert: This parameter allows the user to invert the phase of the signal by 90 degrees. Possible options are Normal and Invert.

Mute: This parameter allows the user to mutes the audio signal.

Source: This parameter allows the user to set the source of the mixer. The value is between 1 to 256.

5.1.4. Audio Pair Control VistaLINK® Parameters for Audio EMR

The EMR AES input module has optional (*+SRC option*) control parameters that affect the behavior of each pair independently. These parameters only affect the pair to which they are applied. The affected pair can be selected using the drop down box at the top. Figure 5-4 shows the VistaLINK® view for the EMR AES input module. At the bottom of the tab will be a button that allows the user to apply the settings of pair 1/2 to all of the pairs. Use caution with this function as it will change the state of all signals and cannot be reversed.

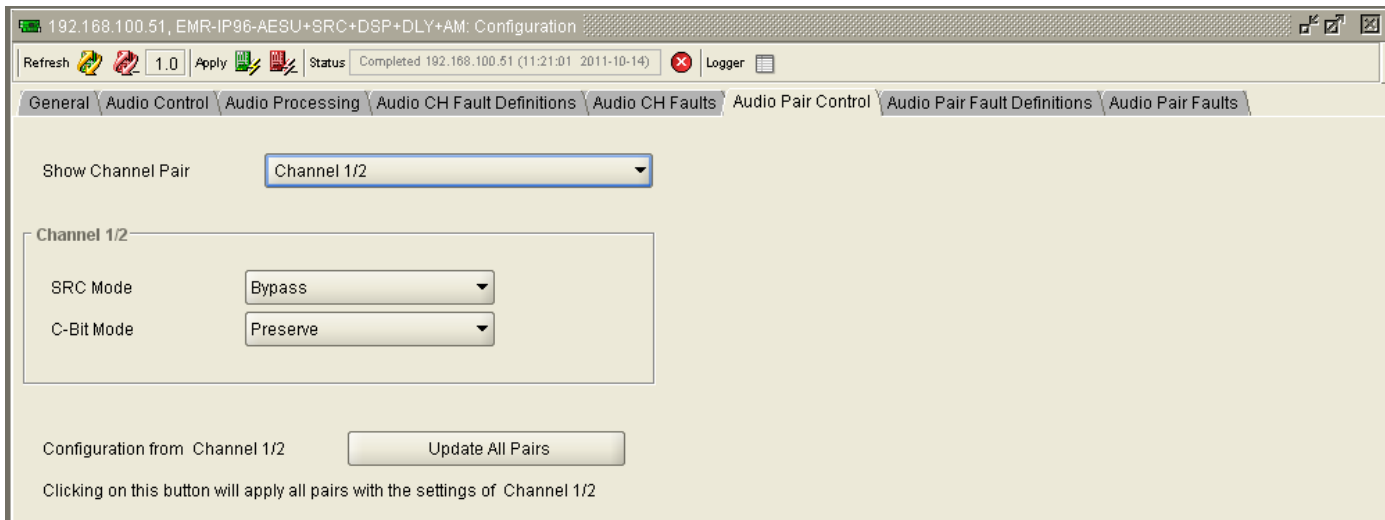


Figure 5-4: VistaLINK® Audio Pair Control Tab for EMR Audio

5.1.4.1. Audio Pair Control VistaLINK® Control Parameters

The following audio pair control parameters can be remotely controlled through the VistaLINK® interface.

SRC Mode: This control allows the user to set the mode of the sample rate converter. (This mode is available only for +SRC option.) Possible options are Bypass, enable and Auto.

C-Bit Mode: This control allows the user to set the behavior of the channel status bits. Possible options are Preserve and Replace.

5.1.5. Audio Channel Fault Definitions VistaLINK® Parameters for Audio EMR

The EMR audio modules have optional (+AM option) advanced monitoring parameters that affect the behavior of each channel independently. These parameters only affect the channel to which they are applied. The affected channel can be selected using the drop down box at the top. Channels are controlled independently but are shown in pairs in the case where users want to control a pair at a time. Figure 5-5 shows the VistaLINK® view for the EMR AES input module. The EMR analog audio input module will have a similar view. At the bottom of the tab will be a button that allows the user to apply the settings of channel 1 to all of the channels. Use caution with this function as it will change the state of all signals and cannot be reversed.

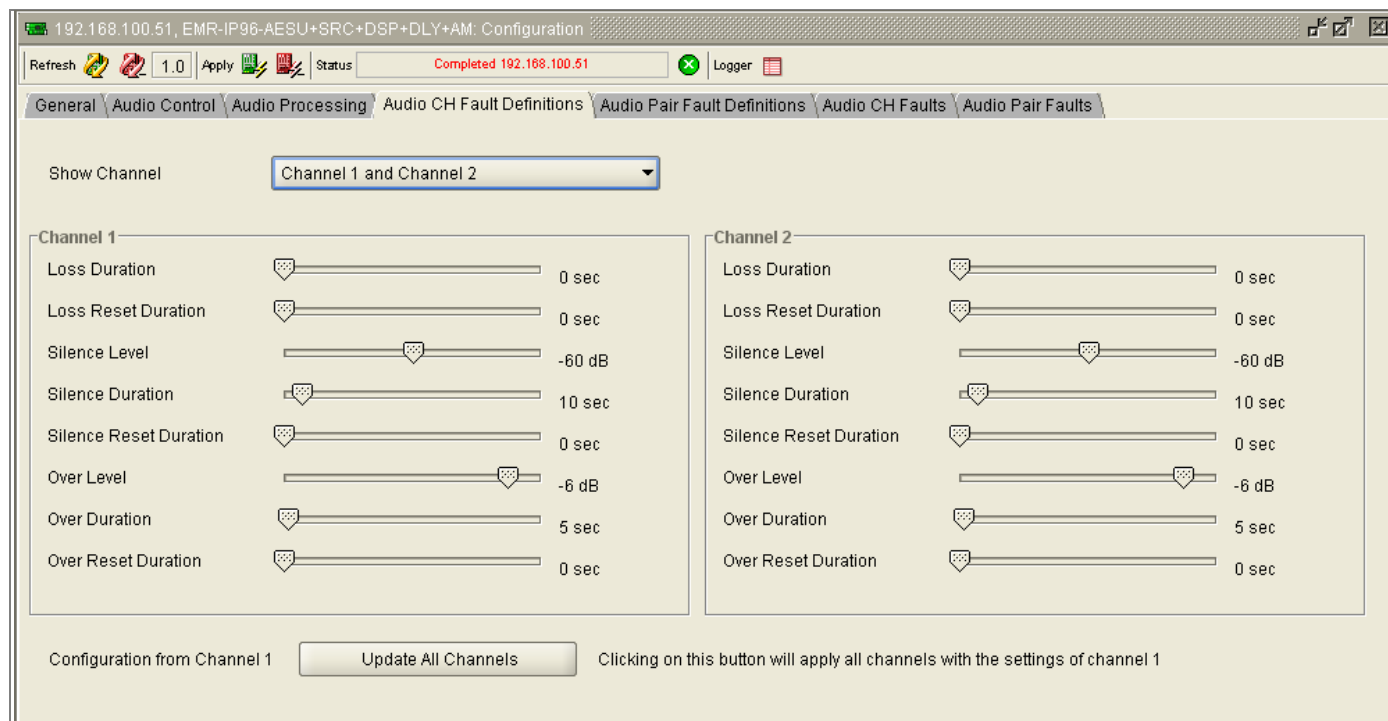


Figure 5-5: VistaLINK® Audio Channel Fault Definitions Tab for EMR Audio

5.1.5.1. Audio Channel Fault Definitions VistaLINK[®] Control Parameters

The following audio channel fault definitions parameters can be remotely controlled through the VistaLINK[®] interface.

Loss Duration: This control allows the user to set the duration before the signal is declared lost. The value is between 0 to 300 seconds.

Loss Reset Duration: This control allows the user to set the duration before the loss detection begins monitoring again. The value is between 0 to 60 seconds.

Silence Level: This control allows the user to set the level of the signal at which it is declared silence. The value is between -80 to -40 dB.

Silence Duration: This control allows the user to set the duration before the signal is declared silent. The value is between 1 to 128 seconds.

Silence Reset Duration: This control allows the user to set the duration before the silence detection begins monitoring again.

Over Level: This control allows the user to set the level of the signal at which it is declared over.

Over Duration: This control allows the user to set the duration before the signal is declared over.

Over Reset Duration: This control allows the user to set the duration before the over detection begins monitoring again.

5.1.5.2. Audio Channel Fault Definitions VistaLINK[®] Traps

The following audio channel fault definitions parameters generate traps through the VistaLINK[®] interface.

Audio loss: This control allows the user to raise a trap when audio is lost given the thresholds described.

Audio Silent: This control allows the user to raise a trap when audio is silent given the thresholds described.

Audio Over: This control allows the user to raise a trap when audio is over given the thresholds described.

5.1.6. Audio Pair Fault Definitions VistaLINK[®] Parameters for Audio EMR

The EMR audio modules have optional (*+AM option*) advanced monitoring parameters that affect the behavior of each set of audio pairs. These parameters only affect the pairs to which they are applied. The affected pair can be selected using the drop down box at the top. Figure 5-6 shows the VistaLINK[®] view for the EMR AES input module. The EMR analog audio input module will have a similar view. At the bottom of the tab will be a button that allows the user to apply the settings of pair 1/2 to all of the pairs. Use caution with this function as it will change the state of all signals and cannot be reversed.

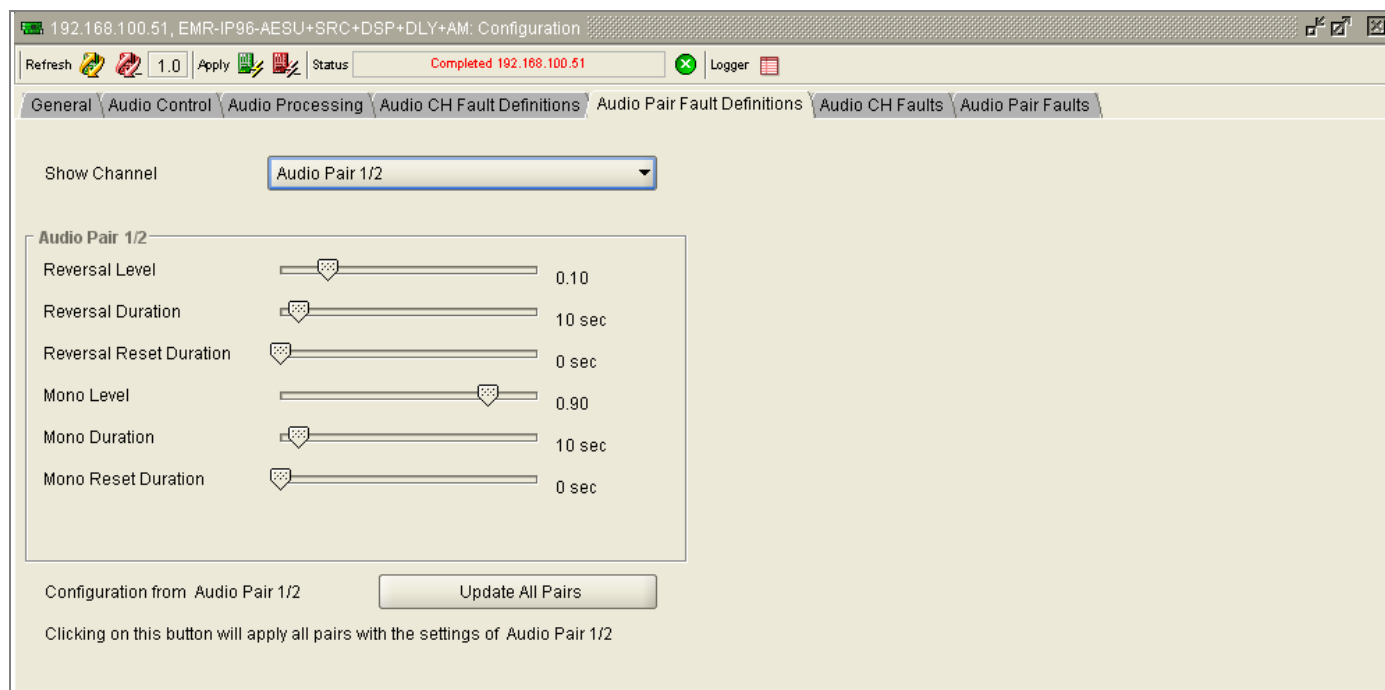


Figure 5-6: VistaLINK® Audio Pair Fault Definitions Tab for EMR Audio

5.1.6.1. Audio Pair Fault Definitions VistaLINK® Control Parameters

The following audio pair fault definitions parameters can be remotely controlled through the VistaLINK® interface.

Reversal level: This control allows the user to set the ratio of the pair at which it is declared out of phase. The value can be set between 0.01 to 0.50.

Reversal Duration: this control allows the user to set the duration before the signal is declared out of phase. The values can be set between 1 to 128 seconds.

Reversal Reset Duration: This control allows the user to set the duration before the phase detection begins monitoring again. The value can be set between 0 to 60 seconds.

Mono Level: This control allows the user to set the ratio of the pair at which it is declared mono. The value can be set from 0.50 to 1.00.

Mono Duration: This control allows the user to set the duration before the signal is declared mono. The value can be set between 1 to 128 seconds.

Mono Reset Duration: This control allows the user to set the duration before the mono detection begins monitoring again. The value can be set between 0 to 60 seconds.

5.1.6.2. Audio Pair Fault Definitions VistaLINK® Traps

The following audio pair fault definitions parameters generate traps through the VistaLINK® interface.

Phase Reversal: This control allows the user to raise a trap when audio pair is out of phase given thresholds described.

Mono: This control allows the user to raise a trap when audio pair is considered the same given the thresholds described.

5.1.6.3. Audio Bar Graphs in VistaLINK®

The EMR AES and analog input modules have an optional (*+AM option*) feature that allows them to send audio level and peak information over Ethernet to a device such as VistaLINK®. The bar graph display can be accessed by right clicking on the device in the navigation tree and selecting the *Audio Bar Graph* option. This will bring up a display that looks like the image shown in Figure 5-7.

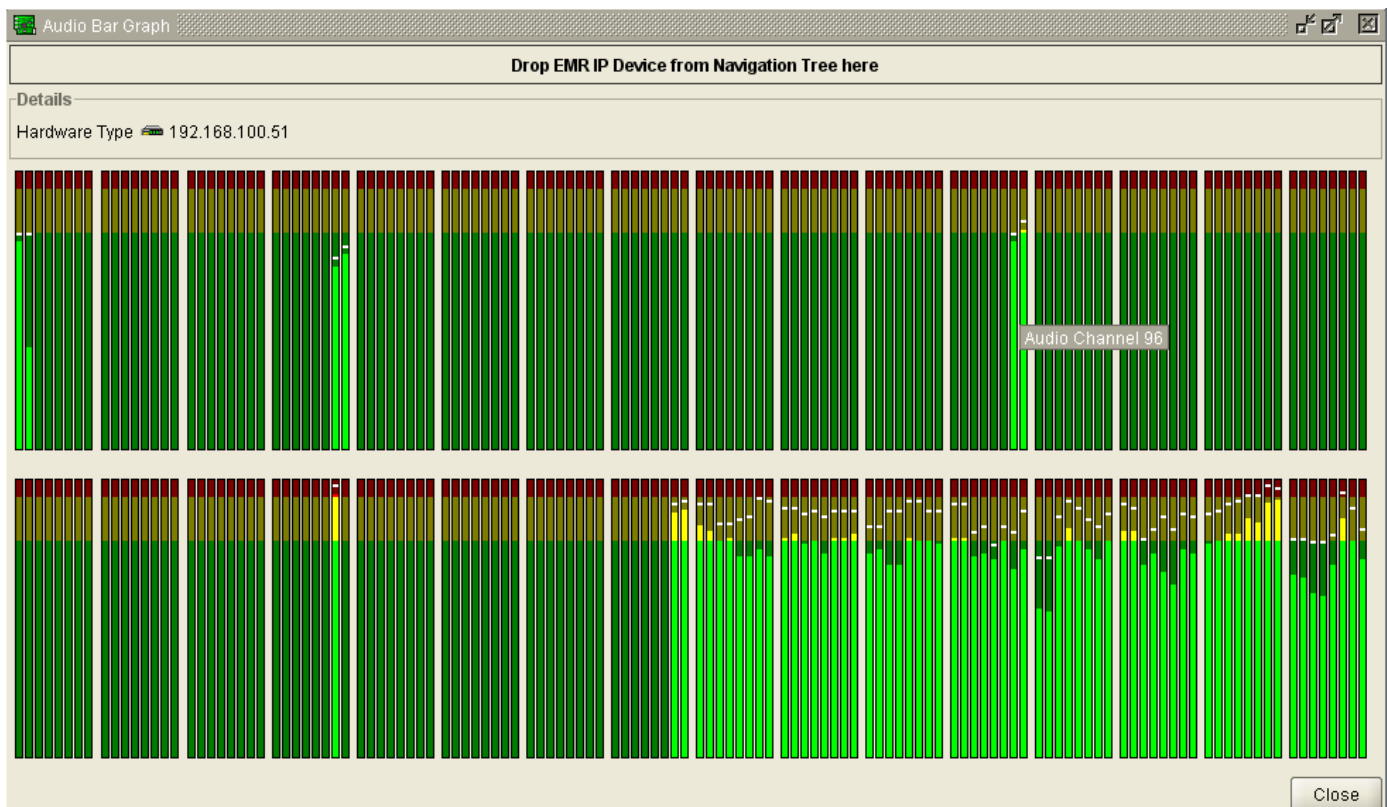


Figure 5-7: VistaLINK® Audio Bar Graph

5.2. EMR DATA PORT VISTALINK® PARAMETERS

5.2.1. Port Configuration VistaLINK® Parameters for EMR Data Port

The EMR data port modules have standard control parameters that affect the behavior of each port independently. These parameters only affect the port to which they are applied. The affected port can be selected using the drop down box at the top. Figure 5-8 shows the VistaLINK® view for the EMR data port module.

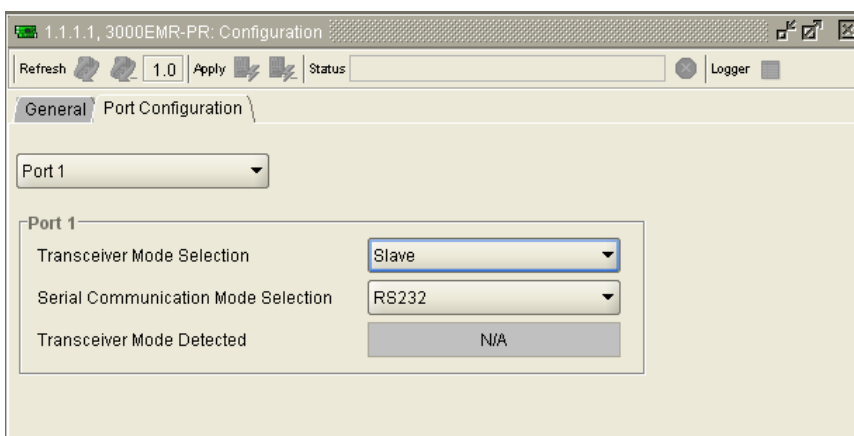


Figure 5-8: VistaLINK® Port Control Tab for EMR Data Port



Note: Refer to Table 2-21 for the pin-out associated with each change to the configuration of the port. In some cases, if the wiring is incorrect, the Transceiver Mode Selection can be used to rectify the problem.

5.2.1.1. Port Configuration VistaLINK® Control Parameters

The following port configuration parameters can be remotely controlled through the VistaLINK® interface.

Transceiver Mode Selection: This control allows the user to set the mode of the transceiver port. Possible options are Transceiver Off, Sony Auto Detect, Slave and Controller.

Serial Communication Mode Selection: This control allows the user to set the serial communication mode of the port. Possible options are RS-232 and RS-422.

5.2.1.2. Port Configuration VistaLINK® Monitor Parameters

The following data port monitor parameters can be remotely monitored through the VistaLINK® interface.

Transceiver Mode Detected: Indicates the state of the transceiver when Sony Auto Detect mode is used.

This page left intentionally blank

6. EMR CONFIGURATION WITH MAGNUM

6.1. EMR INTEGRATED AUDIO ROUTING

The EMR integrated audio routing solution is a sophisticated system that requires a control system to regulate all of the interconnections and to monitor the thousands of possible routes. The EMR audio solution requires the use of Magnum to perform these functions. Magnum is the control system used to configure and control all Evertz routers. The next few sections provide some details on how to get the integrated audio solution up and running. For more detailed instructions, please consult the user manual for Magnum.

6.1.1. Configuration Using Magnum

Before configuring the EMR integrated audio routing solution a decision must be made on whether the system will be configured for mono or stereo operation. This will determine how the size of each device will be defined. For example, in stereo operation, the EMR-IP96-AESU is defined as a 128X2 device. That means there are 128 AES inputs (96 AES + 1 MADI) and 2 TDM outputs. If the same device is defined in a mono configuration, the size would be 256X2.



Note: The default setup in Magnum is for stereo operation. For mono applications, please contact Evertz service for more details.

6.1.2. Adding EMR Audio Modules to Magnum

Each device in the EMR audio routing system must be added to the server. This is done by using the add button located under the *Devices* section, under *SYSTEM*. Once this button is clicked it will bring up a dialog for adding devices. Add an EMX frame and leave the IP address and port number as is. Edit the frame and add EMR audio devices and in the dialog add the name and leave the default IP address and Port number. Figure 6-1 shows the *Add Device* dialog for the EMX frame and Figure 6-2 shows the *Add Device* dialog for EMR-IP96-AESU.

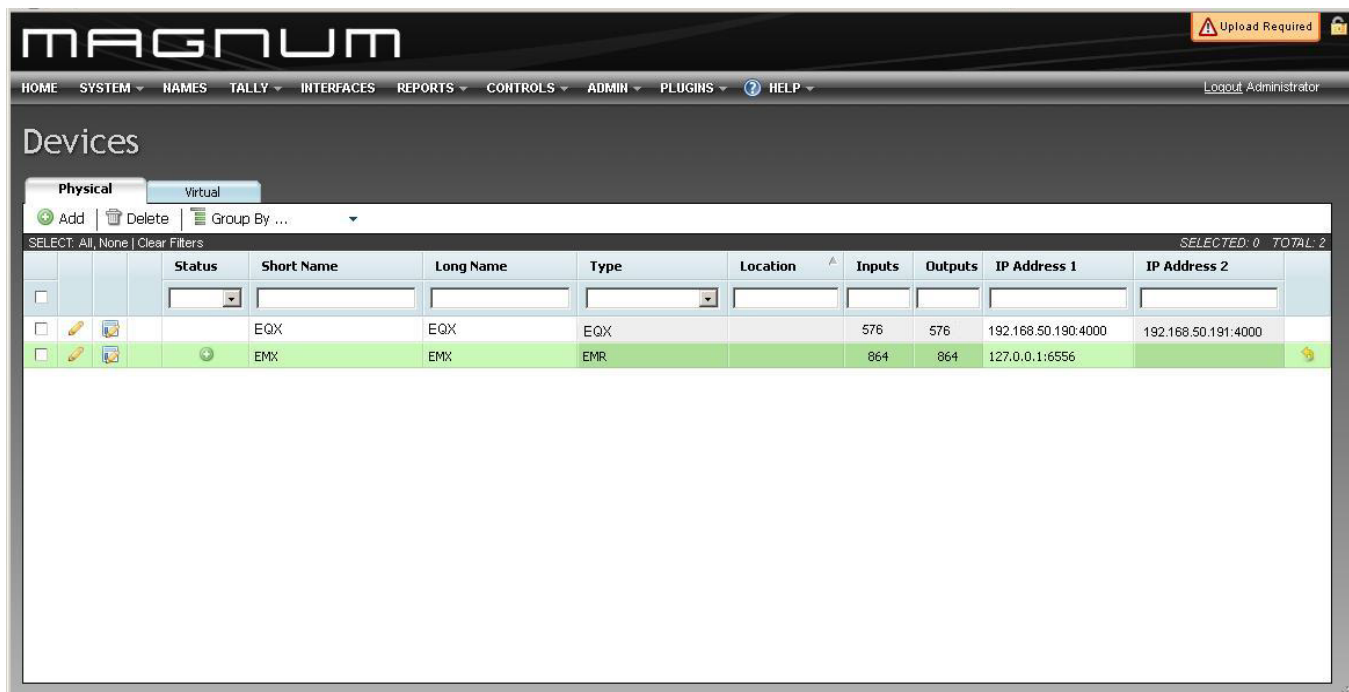


Figure 6-1: Magnum Add Device Dialog

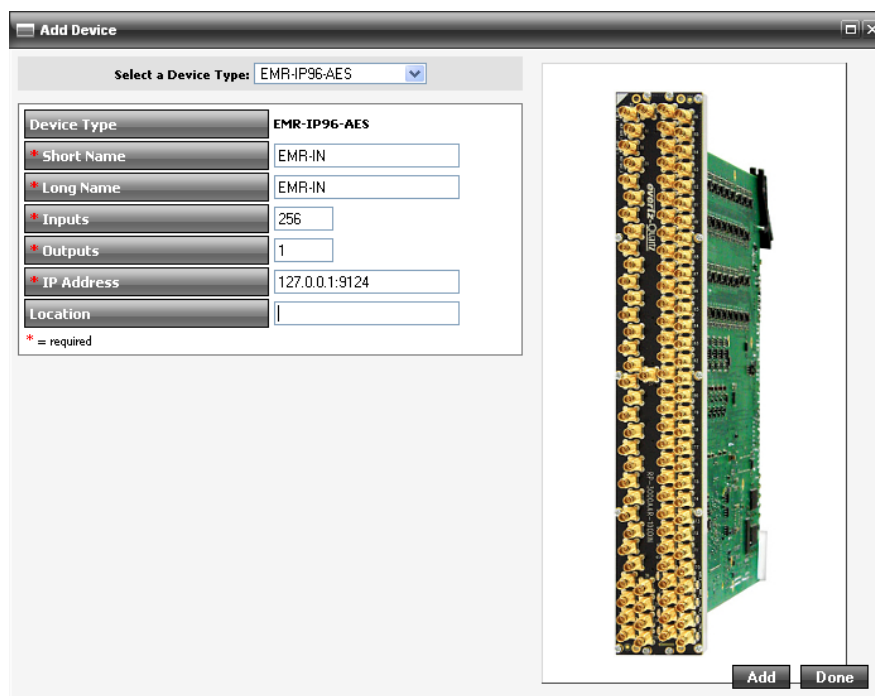


Figure 6-2: Magnum Add Device Dialog

Each EMR input and output module must be added to the server along with the ADMX-16X16 crosspoint module. For ADMX modules you have to add the actual IP addresses of the device and leave the default port number

Once each module is added to the server, they will all appear in the devices list as shown in Figure 6-3.

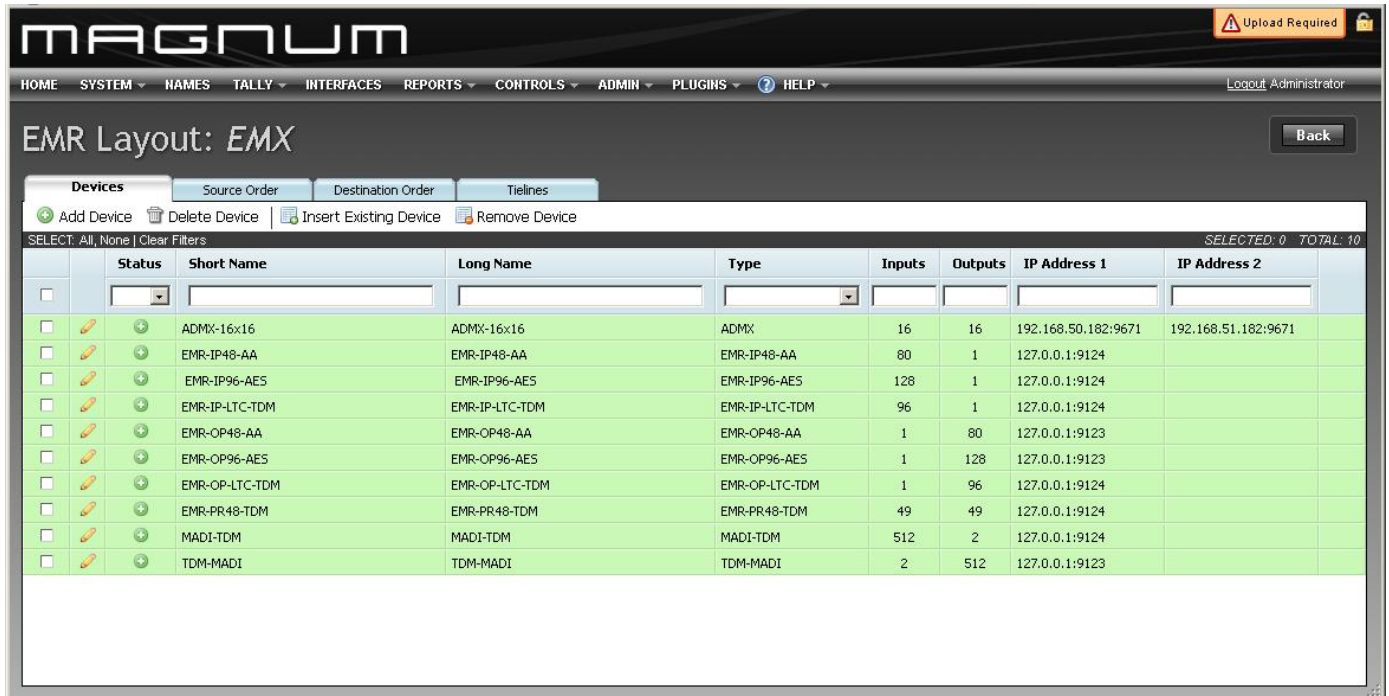


Figure 6-3: Magnum Devices Page

6.1.3. Adding EQX Embedding and De-Embedding Modules to Magnum

For systems that utilized the EQX embedding and de-embedding modules, an additional step is required to add them to the server. Once an EQX router has been defined and added to the system, click on the *Edit* icon (to enter the EQX layout configuration page shown in Figure 6-4). Within this page, identify each slot which will contain an EQX de-embedder module (AVIP16H-AUD) and EQX embedder module (AVOP16H-AUD). This is done by double-clicking on the slot and selecting the desired device.

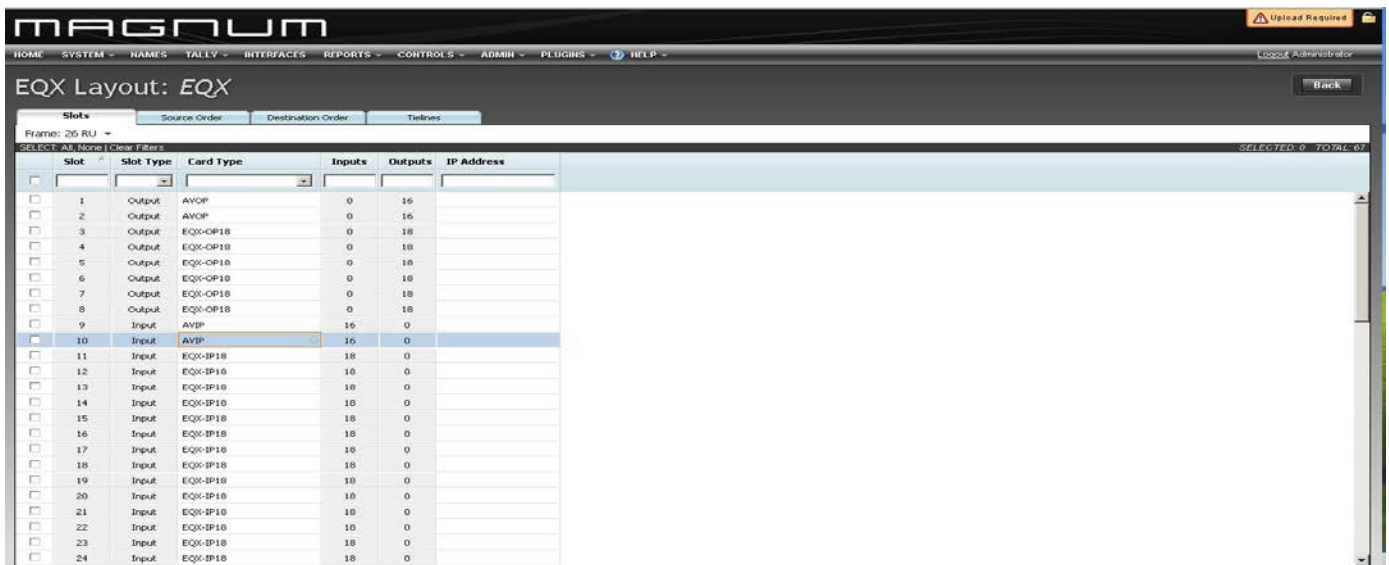


Figure 6-4: Magnum EQX Layout Page

Once the AVIPs and AVOPs are defined edit the EMX frame and add these cards inside EMX frame by clicking on “Insert Existing Device”. Figure 6-5 shows an example of inserting AVIP under EMX frame.

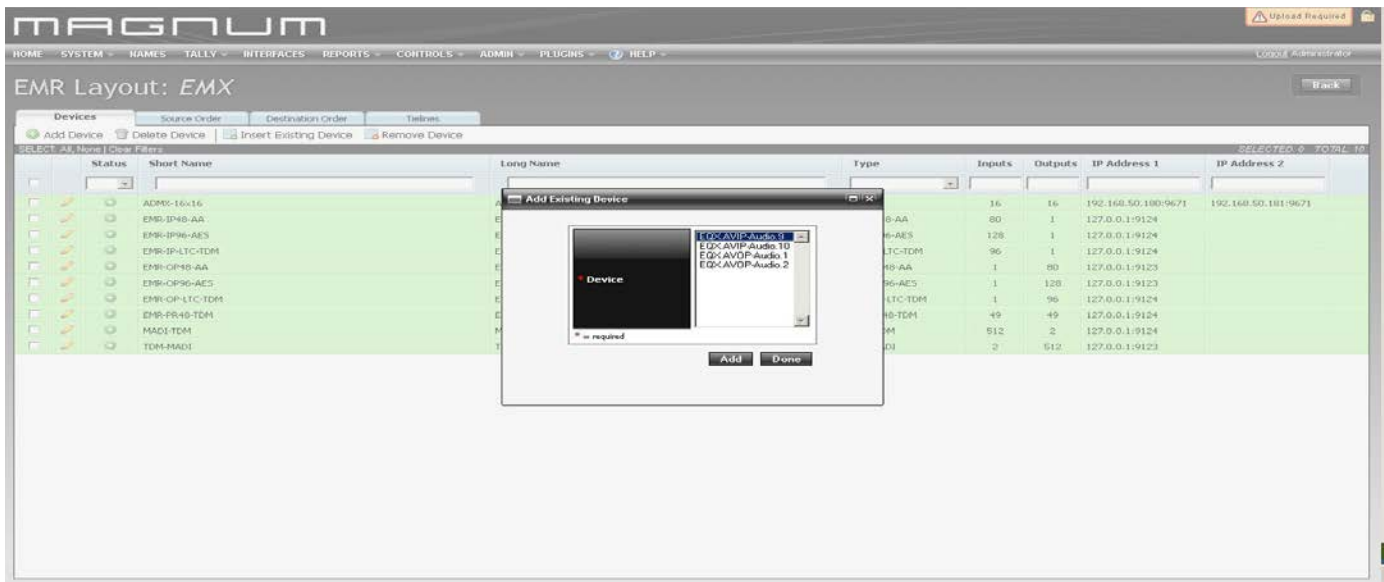


Figure 6-5: Inserting Existing Device

6.1.4. Interfacing All EMR Audio Modules

Once all of devices are added to Magnum, Tielines must be created to interface all of the modules. As described earlier, each input module must connect to the ADMX-16X16/ADMX-48X48 via a TDM connection. This TDM connection must be defined in the server so that the control system is aware of how to route the signal. The connections are added using the *Tielines* page under the *SYSTEM* menu.

A Tieline from each EMR input module, and each EQX de-embedder to the input of the ADMX must be created. Also, a Tieline from the ADMX to each EMR output module and each EQX embedder must be created. Figure 6-6 shows an example of the Tielines that are created for an integrated audio routing system.

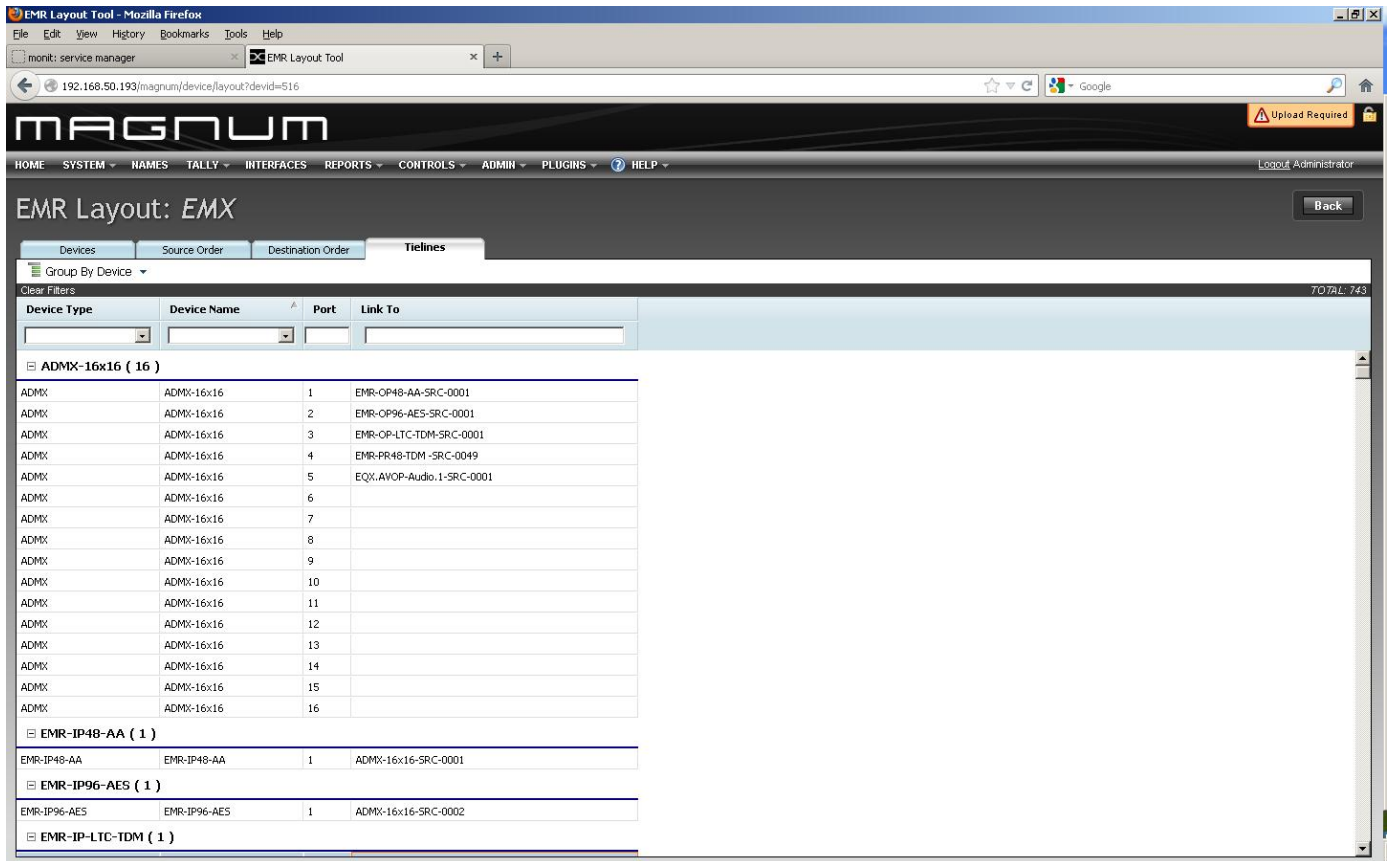


Figure 6-6: Magnum Tielines Page

6.2. TIME CODE ROUTING

The EMR time code router is controlled using Quartz protocol over IP through the frame controller. Within an EMR time code system the input modules are all passive and do not communicate with the control system. Only the output modules communicate with the control system to make route changes.

In any EMR time code system that has multiple output modules, any output module is considered the master and any output module can communicate with the control system. In the case of Magnum, only one output module is added to the *Devices* page but the entire size of the system must be defined appropriately.

For example, the IP address of *Card ID 1* can be used as the main and the IP address of *Card ID 2* can be used as the backup.



Note: The default port for communicating with the EMR time code modules is 4000.

6.3. DATA PORT ROUTING

The EMR data port router is controlled using Quartz protocol over IP through the frame controller. In any EMR data port system that has multiple modules, any module is considered the master and any module can communicate with the control system. In the case of Magnum, only one module is added to the *Devices* page but the entire size of the system must be defined appropriately.

For example, the IP address of *Card ID 1* can be used as the main and the IP address of *Card ID 2* can be used as the backup.

When defining the size of the data port router, use 337 as the size even if there are fewer ports in the system. Port 337 is the *IDLE* port and is used to park ports that are not used. This is done automatically by the data port router but should be defined in Magnum in order to receive the proper tally information. Any ports that are not available can be hidden using Source and Destination Availability in Magnum.



Note: The default port for communicating with the EMR data port modules is 4000.

7. MODULE UPGRADES

There are two primary upgrade processes available to the user: File Transfer Protocol (FTP) and Serial Upload. Both are described below for specific I/O modules.

7.1. NETWORKING FUNDAMENTALS (FTP UPGRADE PROCESS)

Before any FTP (file transfer protocol) upgrades can be initiated:

- Modules must be pre-configured with IP addresses
- The user must determine the IP address of the PC/laptop
- All nodes must be on the same subnet for the FTP upgrade to work properly

To check if a proper network connection has been established:

1. Connect the network cable from the PC/laptop to the EMR frame.
2. Open a Command Prompt window (**Start > Programs > Accessories > Command Prompt**) on the PC/laptop.
3. Ping the IP address of the module being upgraded. For example:

C:\ ping 192.168.9.100 <Enter>

If a proper network connection has been established, a “reply” is displayed on the DOS window.

If the network connection is faulty, a “Destination Host Unreachable” message is provided. This means that either the IP addresses of the nodes should be verified or the network (Ethernet) cable is faulty.

7.2. UPGRADING THE APPLICATION CODE

There are two upgrade processes available for all EMR modules: File Transfer Protocol (FTP), and Serial Upload. Both FTP and Serial Upgrade methods are described.

7.2.1. FTP Upgrade Method

1. Identify and confirm the IP addresses of the module and PC/laptop, and ensure that they are on the same subnet.
2. Power on the EMR system with the module installed in the EMR frame.
3. Obtain the new application code from the FTP site and place it on the PC's local drive.
4. Open a DOS window by selecting **Start > Run**, and typing “cmd” in the window that appears, as shown in Figure 7-1.

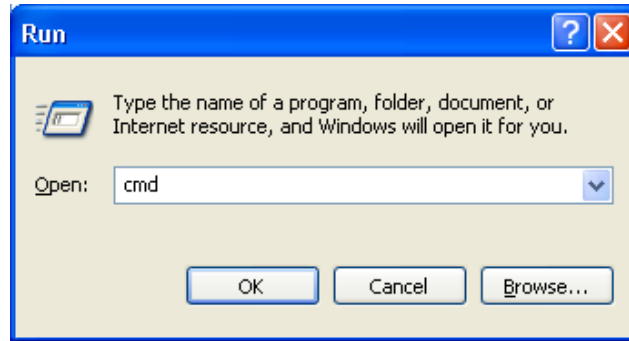


Figure 7-1: Run Window

5. In the DOS window type: **ftp xxx.xxx.xxx.xxx** (where the x's represent the module's IP address).
6. Press <ENTER> when prompted for a "Username", and again when prompted for a "Password".
7. At the "FTP>" prompt, type "ha"
8. At the "FTP>" prompt, type "put x.bin", where x represents the name of the application (.bin) file.



Note: If the application file is not local to where you are performing the FTP, then include the path with the name or you can simply drag and drop the file to the prompt:

(e.g.: "ftp>put c:\templemr\firmware.bin")

9. A message indicating the successful connection to the module is displayed.
10. At this time, the card-edge will show a "% complete" value, indicating that the card is now uploading the new code. During this time it is mandatory that all power cycles of the module or frame be avoided.
11. For EMX-FC you have to copy the firmware to App directory by typing at "FTP>" prompt "cd /boot/app"
12. At the "FTP>" prompt type "ha"
13. At the "FTP>" prompt, type "put x.bin", where x represents the name of the application (.bin) file.
14. FC has to be rebooted manually for upgrade to take effect.

7.2.2. Serial Upload Method

This method transfers the new application code via the upgrade serial port on the front edge of the module.

1. Turn off the EMR frame containing the module that is to be upgraded.

2. Connect the factory-supplied 7700PB serial upgrade cable (J2 on 3000 modules and J23 on EMR modules) on the front edge of the card, and connect the other end of this cable to a serial port on a PC with a serial terminal program.
3. Place a jumper across pins 2 and 3 on (J4 on 3000 modules and J49 on EMR modules) ("Upgrade" mode).
4. Set up the serial communication properties for the COM port as follows:

COM:	Select the COM port
Bits per second:	115200
Data bits:	8
Parity:	None
Stop bits:	2
Flow control:	None

5. Power on the EMR frame with the module installed.
6. When the module boots-up, "PPCBOOT>" is displayed on the terminal screen.
7. At the prompt type "upload" or in some cases "upgrade", then press <ENTER>
8. The following message will be displayed:

Upload product firmware now

9. Upload the application code by using the *send file* function in the terminal software. When prompted, use the "Xmodem" protocol for data transfer.

When the transfer is complete (which can take up to 30 minutes or more) the terminal will return to the PPCBOOT prompt. You should:

1. Turn off the EMR frame.
2. Remove the module from the EMR frame and remove the upgrade serial cable.
3. Place a jumper across pins 1 and 2 on (J4 on 3000 modules and J49 on EMR modules) ("Run" mode).
4. Re-insert the module into the EMR frame.

7.2.3. Upgrading 3000FC and EMX-FC Application Code

7.2.3.1. FTP Upgrade Method

1. Identify and confirm the IP addresses of the FC and PC/laptop, and ensure that they are on the same subnet.
2. Power on the EMR system with the FC installed in the EMR frame.
3. Obtain the new application code from the FTP site and place it on the PC's local drive.
4. Open a DOS window by selecting **Start > Run**, and typing "cmd" in the window that appears, as shown in Figure 7-2.

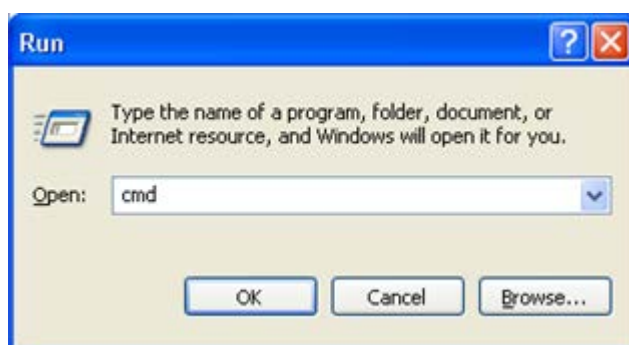


Figure 7-2 : Run Window

5. In the DOS window type: **ftp xxx.xxx.xxx.xxx** (where the x's represent the FC's IP address).
6. Press <ENTER> when prompted for a "Username", and again when prompted for a "Password".
7. At the "FTP>" prompt, type "cd boot/app" as is shown in Table 7-1: FTP Window.

```
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\eng>ftp 10.10.15.21
Connected to 10.10.15.21.
220-Evertz FTP Server.
220-Copyright 2001 Evertz Microsystems Ltd. All rights reserved.
220 Type QUOTE HELP for information.
User (10.10.15.21:(none)):
331 User name okay, need password.
Password:
230 User logged in, proceed.
ftp> cd boot/app
250 Current working directory is now "/boot/app/".
ftp>
```

Table 7-1: FTP Window

- At the "FTP>" prompt, type "put x.bin", where x represents the name of the application (.bin) file or drag and drop the file to FTP prompt.



Note: If the application file is not local to where you are performing the FTP, then include the path with the name or drag and drop the file to FTP prompt:

(e.g.: "put c:\temp\emr\firmware.bin")

- Once the upgrade is complete, the card needs to be rebooted manually. Do not remove the card during this process or it could corrupt the application code.

7.2.3.2. Serial Upgrade Method

The 3000FC and EMX-FC are upgraded via the configuration serial port (J7) near the front of the card.

- Turn off the EMR frame with the FC card that is to be upgraded.
- Connect the 7700PB serial upgrade cable supplied with the EMR frame to the J7 on the front edge of the FC card and connect the other end of this cable to a serial port on a PC with a serial terminal program.
- Place a jumper across pins 1 and 2 on J7 ("Upgrade Mode").
- Set up the serial communication properties for the COM port as follows:

COM:	Select the COM port
Bits per second:	115200
Data bits:	8
Parity:	None
Stop bits:	1
Flow control:	None

- Power on the EMR frame with the FC card installed.
- When the FC card boots up, the following information will be printed on the terminal screen:

```
EVERTZ MCF5272 MONITOR 2.3 BUILD 3 (66 MHZ)
COPYRIGHT 1997, 1998, 1999, 2000, 2001, 2002 EVERTZ MICROSYSTEMS LTD.
28F160C3B FLASH DETECTED
BRD=3000FC
MODEL=BA3000FC
PROD=3000FC
FRAME=3000FR
UPGRADE JUMPER INSTALLED

UPLOAD FILE NOW, CONTROL-X TO CANCEL
```

- To upload the FC with the new application code, use the *send file* function in the terminal software.



Note: If prompted, use the “Xmodem” protocol for data transfer.

Execute the following steps when the download is complete:

1. Power down the EMR frame.
2. Remove the FC card from the frame.
3. Disconnect the upgrade serial cable, and place a jumper across pins 2 and 3 on J7.
4. Insert the FC card back into the EMR frame and power up the EMR frame.

8. TROUBLESHOOTING THE EMR

This section offers some basic guidance on how to debug the EMR system and provides some tools to facilitate the commissioning process.

8.1. TDM CONNECTIONS

The most essential part of the EMR system is the various TDM connections. Ensuring that all TDM connections are solid and error free should be the very first task of validating the system and also the first step in troubleshooting any issues. The following sections describe how to validate the TDM connections in the system.

8.1.1. Verifying TDM Connections to the EMR-ADMX

TDM connections to the EMR-ADMX-16X16 are paramount to the function of the system. The presence and validity of the connections can be verified simply by looking at the TDM presence LEDs as described in section 2.2.5.1.

As a further check, more detailed information can be obtained by going to the debug menu either through the front serial port or by telnet to the module. Within the debug menu, there will be an option called *TDM input diagnostics*. This option will display the *Status*, *Error Rate*, and *Source* for each input connection.

Using the information from this, check that all expected signals are present and no errors have accumulated. If errors have accumulated then this is an indication of a bad connection to the rear plate, a bad wire, or excessive cable length. Also verify that the source indicated by the card matches the connections defined in Magnum.

8.1.2. Verifying TDM Connections to the EMR Output Modules

The EMR AES and analog modules provide LEDs on the front card edge and rear panel to show TDM presence. Details regarding the locations of the LEDs can be found in section 2.2 for each of the modules. If the LEDs do not display as expected then this is an indication of a bad connection to the rear plate, a bad wire, or excessive cable length.

A flashing LED indicates that the TDM signal is present and valid but not being used by the module. In this case, the module can be configured to use the TDM input using VistaLINK Pro. If the main TDM input does not appear to work, the secondary input can be used simply by moving the connection over. As default the EMR output modules are set to auto detect which TDM input is present at all times.

8.1.3. Verifying TDM Connections to the EQX Embedder and EMR-OP16-MADI Modules

The EQX-OP16AE-H (-3G)-2TDM modules and the EMR-OP16-MADI modules both have the same TDM detection capabilities as the EMR-ADMX. Each module has a debug menu that can be accessed through the front serial port. Under the *Audio Diagnostics* menu, select *TDM Input Status*. This will display the *Status*, *Error Rate*, and *Source* for each input connection.

Using the information from this, check that all expected signals are present and no errors have accumulated. If errors have accumulated then this is an indication of a bad connection to the rear plate, a bad wire, or excessive cable length. Also verify that the source indicated by the card matches the connections defined in Magnum.

8.2. REFERENCES

The EMR system requires that all sources are locked to a common reference. Not doing so can result in undesired distortion or 'pop's in the resulting audio. The following sections describe how to validate the reference for the system.

8.2.1. Verifying Reference to the EMR Modules

All of the EMR AES and analog input and output modules require a common reference. This reference is supplied through the frame. Each card has an LED that provides an indication of whether a reference is present. The behavior and location of the LEDs are described in section 2.2.

If the reference LED does not behave as expected, check the frame to ensure that the correct reference is being used. The EMR modules can be configured using VistaLINK Pro to use one of two references supplied by the frame.

Also, using VistaLINK®, check the Frame Ref Error Count for each module to ensure that it is not accumulating. After a system has been setup and is in steady state, this counter should be reset so that it is zero. If the reference signal is clean then this count should not increase any further.

8.2.2. Verifying Reference to the EMR-OP16-MADI

The EMR-OP16-MADI is the only MADI module that requires a reference to function correctly. This reference is supplied through the frame. A set of LEDs on the front provide an indication of whether a reference is present or not. The behavior and location of the LEDs are described in section 2.2.

8.2.3. Verifying Reference to the EQX De-Embedder and Embedder Modules

The EQX-IP16AD-H (-3G)-2TDM and EQX-OP16AE-H (-3G)-2TDM use the reference provided by the EQX frame. Please consult the EQX manual to ensure that the router is configured correctly to use the reference provided.

On each of the EQX-IP16AD-H (-3G)-2TDM and EQX-OP16AE-H (-3G)-2TDM modules, dip switch 4 must be set to either 59.94Hz (CLOSED or down) or 50Hz (OPEN or up). This frequency corresponds to the frequency of the reference. When this is set correctly, status LED C on the respective module should flash green. If the reference is not present or if the dip switch is not configured correctly then the LED will be solid red.

8.3. SIGNALS

8.3.1. Verifying Input Signals to EMR Modules

The EMR AES and analog input modules provide various methods for verifying input signal presence. AES or analog inputs to the EMR can be monitored using one of three available options: the video output, the front card edge LEDs, and VistaLINK PRO. Using one of these methods will enable quick validation of the hardware, rear plate connection, wiring, and patch panel (if applicable) of the input path.

8.3.2. Verifying Output Signals from EMR Modules

The EMR AES and analog output modules provide an internal tone generator that can be used to validate the hardware, rear plate connection, wiring and patch panel (if applicable) of the output path. By using the internal tone generator it is not necessary to prove the path to an input device and through the crosspoint.

8.3.3. Verifying Input Signals to the EMR-IP16-MADI

The EMR-IP16-MADI provides status information regarding its MADI inputs via front card edge LEDs. Details regarding the behavior of the LEDs are explained in section 2.2.6.1.

8.4. MAGNUM CONFIGURATION

8.4.1. Verifying Tieline Definitions

As discussed in section 6.1.4, all TDM connections require an equivalent tieline definition in Magnum. If a tieline has not been defined, or its definition does not match that of the physical connection then the corresponding components will not work. It is important that the two are cross-checked to ensure compatibility as the server does not do any automatic checks to ensure accuracy.

8.4.2. Verifying Source Availability

In order to route any source to a specific destination, the source must be explicitly made available to the destination using Magnum. This is especially true if the system consists of EMR modules and EQX modules. The EMR AES and analog sources must be made available to the EQX destinations that are embedding destinations, and the EQX sources that are de-embedding sources need to be made available to EMR AES and analog destinations.

When configuring source availability, if the desired source does not appear in the list, it is a good indication that the tieline has not been defined correctly.

For systems with multiple EMR input and output modules, ensure that sources from every input module are made available to every output module.

8.5. TROUBLESHOOTING CHECKLIST

When encountering any problems, use this checklist to quickly assess the situation:

1. Are all TDM connections secure and solid?
2. Is a common reference being applied to all parts of the system?
3. Does the input signal reach the input module in question?
4. Does the output signal reach the final destination in question?
5. Are the tielines defined?
6. Is the source available to the destination in question?

This page left intentionally blank

9. APPENDIX A - ADMX-16X16A AND ADMX-48X48 REDUNDANCY SETUP

This section provides instruction on how to setup redundancy for an EMR-ADMX-16X16A or EMR-ADMX-48X48 using Magnum Server and EMX-FC Rev B.

9.1. OVERVIEW

EMR-ADMX-16X16A and EMR-ADMX-48X48 are the crosspoint for the EMR Audio. EMR-ADMX-16X16A has 16 TDM inputs and 16 TDM outputs and EMR-ADMX-48X48 has 48 TDM inputs and 48 TDM outputs that allow them to be interfaced with any EMR Audio I/O, AVIP and AVOP modules.

9.2. MINIMUM REQUIREMENT

1. 1 X EMX-FR
2. 1 X EMR-ADMX-48X48 or EMR-ADMX-16X16A
3. 2 X EMX-FC Rev B
4. 1 X EMR-OP96 -AESU (or any Audio Output Card)
5. 1 X EMR-IP96 -AESU (or any Audio Input Card)
6. Magnum Server

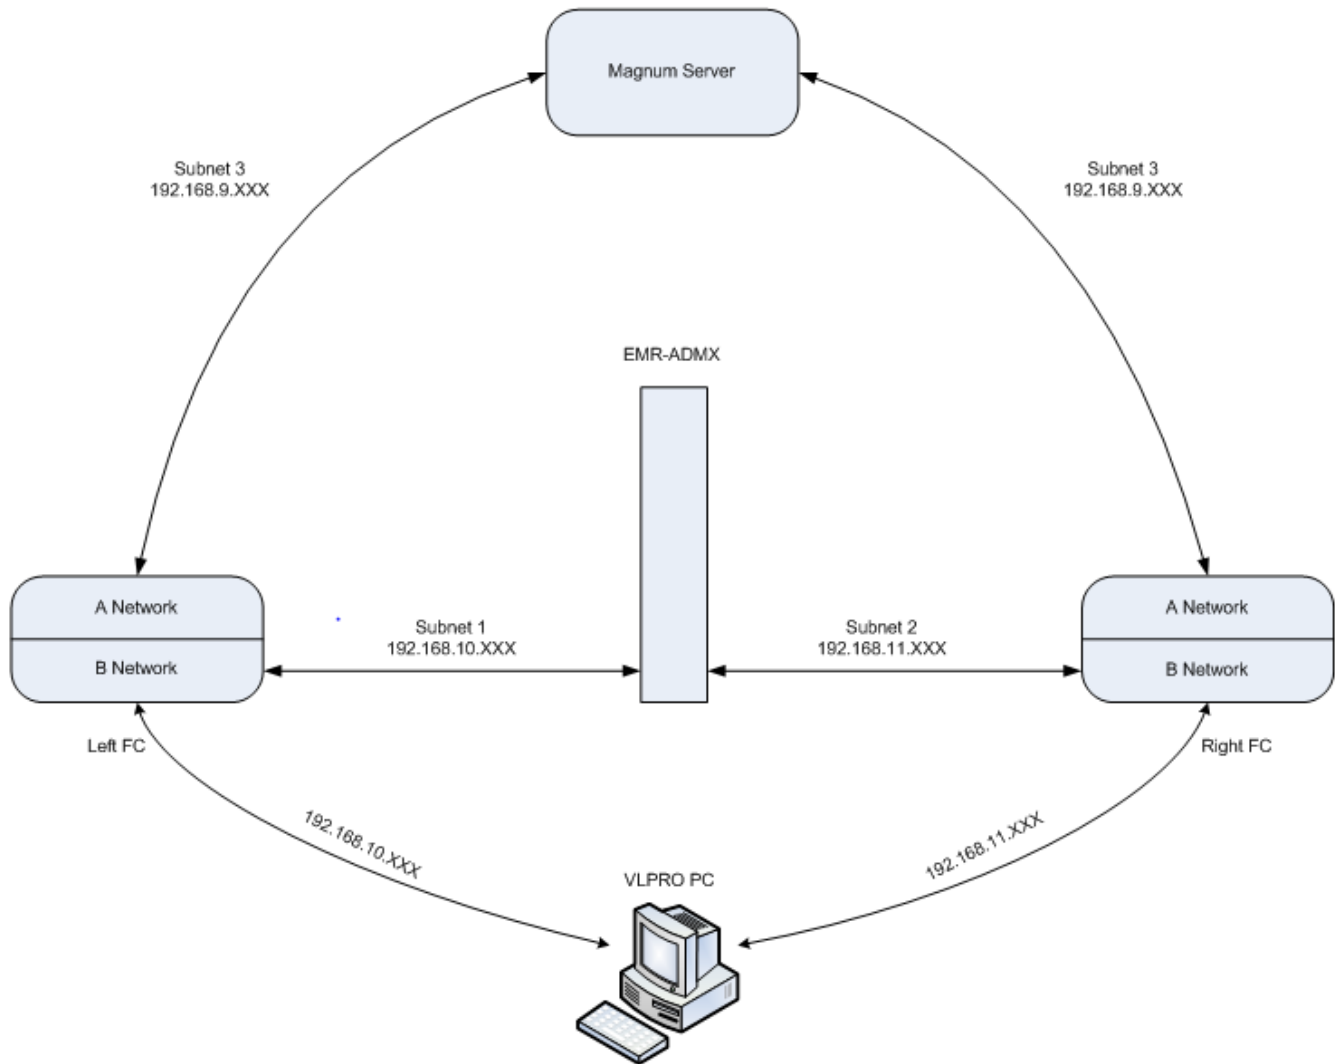


Figure 9-1: ADMX Redundancy Layout

9.3. ADMX CONFIGURATION

ADMX-16X16A or 48X48 comes with dual network connections which require two sets of MACs, IPs and subnet masks.



Note: The two IP addresses for the ADMX have to be under different subnets.

9.3.1. Checking The Firmware Version

To check the firmware version, connect the ribbon cable to the four pin connector at the cord edge and type "version show" at the command prompt.

9.3.2. Checking or Setting The IP addresses

To check or set the IP addresses, connect the ribbon cable to the four pin connector at the card edge and type the following commands.

1. To check the IP addresses, type “ifconfig” at the command line.
2. To set the IP addresses, type the following command for each IP address.

```
"ifconfig 0 inet 192.168.10.2 netmask 255.255.255.0 broadcast 192.168.10.255" + enter
```

```
"ifconfig 1 inet 192.168.11.2 netmask 255.255.255.0 broadcast 192.168.11.255" + enter
```

```
CLI> ifconfig
if 0 mac xx:xx:xx:xx:xx:xx inet 192.168.10.2 netmask 255.255.255.0 broadcast 192.168.10.255
if 1 mac xx:xx:xx:xx:xx:xx inet 192.168.11.2 netmask 255.255.255.0 broadcast 192.168.11.255
```

Table 9-1: ADMX IP Config

9.3.3. Upgrading The Module

- Connect the Ethernet cable to B port of the frame and make sure the card is pingable.
- FTP to the card, there is no user name and password.
- Type “hash” at the prompt then type “put” + space and then drag and drop the firmware.
- Type “bye” once the transfer is completed and the card is automatically rebooted.

```
C:\>ftp 192.168.10.2
Connected to 192.168.10.2.
220-Quartz FTP Server.
  Copyright 2001 Quartz Electronics Ltd. All rights reserved.
220 Type QUOTE HELP for information.
User (192.168.10.2:(none)):
331 User name okay, need password.
Password:
230 User logged in, proceed.
ftp> hash
Hash mark printing On ftp: (2048 bytes/hash mark) .
ftp> put firmware.bin
#####
#####
ftp> bye
221 Goodbye.
```

Table 9-2 : ADMX FTP Upgrade

9.4. EMX-FC CONFIGURATION

EMX-FC has three fields for IP addresses but only A Network and B Network IP addresses have to be set.

1. Configuring Left EMX-FC Network:
 - ➔ A Network IP address has to be in the same subnet as the Magnum server IP address.
 - ➔ B Network IP address has to be in the same subnet as the first IP address of the ADMX.

2. Configuring Right EMX-FC Network:

- ➔ A Network IP address has to be in the same subnet as the Magnum server IP address.
- ➔ B Network IP address has to be in the same subnet as the second IP address of the ADMX.

-----Left EMX-FC-----	
	Network Configuration
	(EMX-FC revB v4.11 et.xxx)

B network is enabled	
BCM switch (FCC1)	
MAC0	: 00:02:c5:12:7e:e0
ip address	: 192.168.10.101
netmask address	: 255.255.255.0

C network is disabled	
MI: Inter-FC (FCC2)	
MAC1	: 00:02:c5:12:7e:e1
ip address	: 0.0.0.0
netmask address	: 0.0.0.0

A network is enabled	
TCP proxy (FCC3)	
MAC2	: 00:02:c5:12:7e:e2
ip address	: 192.168.9.101
netmask address	: 255.255.255.0

broadcast address	: 192.168.10.255
gateway	: 192.168.9.1

-----Right EMX-FC-----	
	Network Configuration
	(EMX-FC revB v4.11 et.xxx)

B network is enabled	
BCM switch (FCC1)	
MAC0	: 00:02:c5:12:7e:e0
ip address	: 192.168.11.101
netmask address	: 255.255.255.0

C network is disabled	
MI: Inter-FC (FCC2)	
MAC1	: 00:02:c5:12:7e:e1
ip address	: 0.0.0.0
netmask address	: 0.0.0.0

A network is enabled	
TCP proxy (FCC3)	
MAC2	: 00:02:c5:12:7e:e2
ip address	: 192.168.9.102
netmask address	: 255.255.255.0

broadcast address	: 192.168.11.255
gateway	: 192.168.9.1

Table 9-3: Left and Right EMX-FCs Network Config

9.5. EMX-FC TCP PROXY CONFIGURATION

9.5.1. Setting TCP Proxy on the Left EMX-FC

- From “Main Menu” select option (2) “Frame Configuration”.
- From “Frame Configuration” menu select option (1) “TCP Proxy Config”.
- From “TCP Proxy Config” menu select option (2) “Set TCP Proxy Forwarding”.
 - Enter Port Index: Any number between 0-14.
 - Enter destination IP address: In this case it would be the first IP address of the ADMX.
 - Enter destination port 1: Enter “9671” for Prot 1 and 2 and don’t enter anything for port 3 and 4.
 - Save and Exit.
- From “TCP Proxy Config” menu select option (1) “Show TCP Proxy Config” and make sure everything is set correctly. Refer to Table 4 for detail.

```
(1) TCP Proxy Config
(2) Serial to Ethernet Bridge Config
(X) Exit
> 1
-----
(1) Show TCP Proxy Config
(2) Set TCP Proxy Forwarding
(3) Delete TCP Proxy Forwarding Entry
(4) Show Threads
(S) Save and Exit
(X) Exit
> 2
Enter port index >1
Enter destination ip address X.X.X.X >192.168.10.2
Enter destination port 1 >9671
Enter destination port 2 >9671
Enter destination port 3 >
Enter destination port 4 >
-----
|           TCP Proxy Config           |
| (EMX-FC revB v4.11 et.11989)        |
|-----|
(1) Show TCP Proxy Config
(2) Set TCP Proxy Forwarding
(3) Delete TCP Proxy Forwarding Entry
(4) Show Threads
(S) Save and Exit
(X) Exit
-----
(1) Show TCP Proxy Config
(2) Set TCP Proxy Forwarding
(3) Delete TCP Proxy Forwarding Entry
(4) Show Threads

(S) Save and Exit
(X) Exit
> 1
Current port forwarding configuration:
0.Source Port: 4000 Dest IP:Ports 0.0.0.0: 0: 0: 0: 0
1.Source Port: 4001 Dest IP:Ports 192.168.11.2: 9671: 9671: 0: 0
2.Source Port: 4002 Dest IP:Ports 0.0.0.0: 0: 0: 0: 0
```

Table 9-4: Left FC TCP Proxy Config

9.5.2. Setting TCP Proxy on the Right EMX-FC

- Follow steps 1 and 2 from Left EMX-FC.
- From “TCP Proxy Config” menu select option(2) “Set TCP Proxy Forwarding”.
 - Enter Port Index: Any number between 0-14.
 - Enter destination IP address: In this case it would be the Second IP address of the ADMX.
 - Enter destination port 1: Enter “9671” for port 1 and 2 and don’t enter anything for port 3 and 4.
 - Save and Exit.
- From “TCP Proxy Config” menu select option(1) “Show TCP Proxy Config”.


```

(1) TCP Proxy Config
(2) Serial to Ethernet Bridge Config
(X) Exit
> 1
-----
-----
(1) Show TCP Proxy Config
(2) Set TCP Proxy Forwarding
(3) Delete TCP Proxy Forwarding Entry
(4) Show Threads
(S) Save and Exit
(X) Exit
> 2
Enter port index >0
Enter destination ip address X.X.X.X >192.168.11.2
Enter destination port 1 >9671
Enter destination port 2 >9671
Enter destination port 3 >0
Enter destination port 4 >0
-----
|           TCP Proxy Config           |
| (EMX-FC revB v4.11 et.11989)        |
|                                     |
-----
(1) Show TCP Proxy Config
(2) Set TCP Proxy Forwarding
(3) Delete TCP Proxy Forwarding Entry
(4) Show Threads
(S) Save and Exit
(X) Exit
-----
(1) Show TCP Proxy Config
(2) Set TCP Proxy Forwarding
(3) Delete TCP Proxy Forwarding Entry
(4) Show Threads

(S) Save and Exit
(X) Exit
> 1
Current port forwarding configuration:
0.Source Port: 4000 Dest IP:Ports 192.168.11.2:9671:  9671:  0:  0
1.Source Port: 4001 Dest IP:Ports 192.168.11.3: 9671:  9671:  0:  0 (Second ADMX)

```

Table 9-5 : Right FC TCP Proxy Config



Note: Port “9671” is a Synergy protocol port and Port “9676” is a Quartz protocol port.



Note: If there are two ADMXs in the system, the second ADMX can be configured in the same way as the first one and can be added to EMX-FC using a different port.

9.6. EMX-FC UPGRADE

- Connect the Ethernet cable to either A or B port of the frame and make sure the card is pingable.
- FTP to the card, there is no user name and password
- Change the directory to “app” , “ftp:>cd\boot\app”.
- Type “hash” at the prompt, then type “put” + space and then drag and drop the firmware
- Type “bye” once the transfer is completed and reboot the card is manually. (The card will not reboot automatically.)

9.7. MAGNUM SERVER CONFIGURATION

- Add an EMR frame under the Devices and leave the default IP address and Port number.
- Edit the EMR frame and then add the ADMX/EMR-ADMX-48 X48.
- For the Primary IP address enter the A Network IP address of the Left EMX-FC.
- For the Port use Port 4001.



Note: In this example port 4000 is used because during EMX-FC configuration “0” was entered for port index. Port indexes “0-14” corresponds to Ports “4000-4014” respectively.

- For the Secondary IP address enter the A Network IP address of the Right EMX-FC.
- For the Port use Port 4000.

✖ Add Device
☐ ✖

Select a Device Type: EMR-ADMX-48X48 ▼

Device Type	EMR-ADMX-48X48
* Short Name	<input type="text" value="ADMX48-48"/>
* Long Name	<input type="text" value="ADMX48-48"/>
* Inputs	<input type="text" value="48"/>
* Outputs	<input type="text" value="48"/>
* Primary IP	<input type="text" value="192.168.9.101:4000"/>
Secondary IP	<input type="text" value="192.168.9.102:4000"/>
Redundant Primary IP	<input type="text" value="192.168.9.101:4001"/>
Redundant Secondary IP	<input style="border: 2px solid orange;" type="text" value="192.168.9.102:4001"/>
Location	<input type="text"/>

* = required

Add
Done

NO IMAGE AVAILABLE

Figure 9-2: ADMX Configuration in Magnum Server



Note: The above ADMX configuration is for two ADMXs in the system, for single ADMX only Primary and Secondary IP is required.

For configuring EMR-Audio I/O modules in the server , please refer to Magnum Server Manual.

9.8. USEFUL COMMANDS

Command	Functionality
Iproute add default gateway x.x.x.x	Adds the default gateway entry to the route table
Iproute add destination gateway dst x.x.x.x gw x.x.x.x	Adds the destination gateway entry to the route table
Iproute get destination x	Returns the route table entry for the number specified
Iproute delete destination x	Deletes the route table entry specified
Iproute flush	Removes all the route table entries