

EMC-DCP

Desktop Control Panel

User Manual

© Copyright 2012

EVERTZ MICROSYSTEMS LTD.

5292 John Lucas Drive,
Burlington, Ontario,
Canada L7L 5Z9

Phone: 905-335-3700

Sales: sales@evertz.com

Fax: 905-335-3573

Tech Support: service@evertz.com

Fax: 905-335-7571



Web Page: <http://www.evertz.com>

Version 1.1. September 2012

The material contained in this manual consists of information that is the property of Evertz Microsystems and is intended solely for the use of purchasers of the EMC-DCP. Evertz Microsystems expressly prohibits the use of this manual for any purpose other than the operation of the EMC-DCP.

All rights reserved. No part of this publication may be reproduced without the express written permission of Evertz Microsystems Ltd. Copies of this guide can be ordered from your Evertz products dealer or from Evertz Microsystems.

IMPORTANT SAFETY INSTRUCTIONS

	The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “Dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (Servicing) instructions in the literature accompanying the product.

- Read and keep these instructions
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE. DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS ARE PLACED ON THE EQUIPMENT



WARNING:

THIS EQUIPMENT USES POWER/MAINS CONNECTORS FITTED WITH SAFETY GROUND PINS. TO REDUCE THE RISK OF ELECTRIC SHOCK, GROUNDING OF THE GROUND PIN OF THE MAINS PLUG MUST BE MAINTAINED



WARNING:
DANGEROUSLY HIGH VOLTAGES ARE PRESENT INSIDE THE POWER SUPPLY FRAME.



WARNING:
TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE THIS EQUIPMENT MAY HAVE MORE THAN ONE POWER SUPPLY CORD. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT ALL POWER SUPPLY CORDS BEFORE SERVICING.

CAUTION: These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified personnel.

CAUTION: To reduce the risk of electric shock, plug each power supply cord into separate branch circuits employing separate service grounds.

NEVER use flammable or combustible chemicals for cleaning components.

NEVER operate this product with any covers removed.

NEVER wet the inside of this product with any liquid.

NEVER bypass any fuse or replace any fuse with a value or type other than those specified.

NEVER operate this product in an explosive atmosphere.

NEVER block the airflow through ventilation slots.

NEVER expose this product to extremely low or high temperatures.

This product complies with the requirements of the product family standards for video, audio, audio-visual entertainment, and lighting control apparatus for professional use as mentioned below.

INFORMATION TO USERS IN EUROPE



NOTE

This equipment with the CE marking complies with both the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European standards:

- EN60065 Product Safety
- EN55103-1 Electromagnetic Interference Class A (Emission)
- EN55103-2 Electromagnetic Susceptibility (Immunity)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to the European Union EMC directive. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

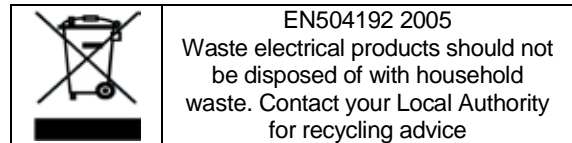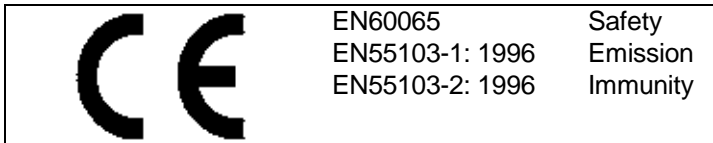

INFORMATION TO USERS IN THE U.S.A.

NOTE


FCC CLASS A DIGITAL DEVICE OR PERIPHERAL

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING

Changes or Modifications not expressly approved by Evertz Microsystems Ltd. could void the user's authority to operate the equipment.

Use of unshielded plugs or cables may cause radiation interference. Properly shielded interface cables with the shield connected to the chassis ground of the device must be used.

Evertz Microsystems Ltd		Tested to comply with FCC Standards	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
For Home or Office Use			This device may cause harmful interference, and This device must accept any interference received, including interference that may cause undesired operation.

REVISION HISTORY

<u>REVISION</u>	<u>DESCRIPTION</u>	<u>DATE</u>
1.0	First Release	June 2011
1.1	Added Desk Mount drawings, Desk Mount assembly instructions and Upgrade changes.	Sept 2012

Information contained in this manual is believed to be accurate and reliable. However, Evertz assumes no responsibility for the use thereof or for the rights of third parties, which may be effected in any way by the use thereof. Any representations in this document concerning performance of Evertz products are for informational use only and are not warranties of future performance, either expressed or implied. The only warranty offered by Evertz in relation to this product is the Evertz standard limited warranty, stated in the sales contract or order confirmation form.

Although every attempt has been made to accurately describe the features, installation and operation of this product in this manual, no warranty is granted nor liability assumed in relation to any errors or omissions unless specifically undertaken in the Evertz sales contract or order confirmation. Information contained in this manual is periodically updated and changes will be incorporated into subsequent editions. If you encounter an error, please notify Evertz Customer Service department. Evertz reserves the right, without notice or liability, to make changes in equipment design or specifications.

This page left intentionally blank

TABLE OF CONTENTS

1.	OVERVIEW OF EMC-DCP	1
1.1.	FEATURES	1
2.	INSTALLATION OF EMC-DCP	2
2.1.	UNPACKING	2
2.1.1.	Physical Location	2
2.1.2.	Cooling.....	2
2.1.3.	Power Supply	3
3.	EMC-DCP PHYSICAL DESCRIPTION	4
3.1.	PANEL CONFIGURATIONS	4
3.2.	EMC-DCP PANEL - TOP DESCRIPTION.....	6
3.3.	EMC-DCP PANEL INPUT/OUTPUTS.....	8
3.4.	CONNECTING EMC-DCP TO 3025EMC SYSTEM	9
3.5.	CONNECTING EMC-DCP TO QMC-2 SYSTEM.....	10
3.6.	CONNECTING EMC-DCP TO PKG9625SW OR PKGHD9625SW (MINI MASTER CONTROL).....	10
3.7.	CONFIGURING IP ADDRESS AND QLINK ADDRESS OF EMC-DCP.....	11
3.8.	SETTING UP ETHERNET CONTROL USING EMC SETUP	14
3.9.	TESTING EMC-DCP SETUP	18
3.10.	EMC-DCP LAYOUT FOR PKG9625SW AND PKGHD9625SW USERS.....	18
3.11.	UPGRADING THE EMC-DCP FIRMWARE USING A USB	21
3.12.	UPGRADING THE EMC-DCP FIRMWARE OVER THE NETWORK.....	24
4.	TECHNICAL DESCRIPTION	26
4.1.	SPECIFICATIONS.....	26
4.1.1.	Electrical	26
4.1.2.	Physical	26
4.2.	SERVICING INSTRUCTIONS.....	29
5.	INSTALLING THE EMC-DCP DESKTOP MOUNT	30
5.1.	DESKTOP MOUNT ASSEMBLY	33

Figures

Figure 3-1: Basic EMC-DCP Panel	4
Figure 3-2: EMC-DCP with 2 +ABP options	5
Figure 3-3: EMC-DCP with +LCD and +ABP options	5
Figure 3-4: EMC-DCP Top Panel.....	6
Figure 3-5: EMC-DCP – Inputs and Outputs	8
Figure 3-6: Basic EMC Configuration.....	9
Figure 3-7: Basic QMC-2 Configuration	10
Figure 3-8: Basic Mini Master Configuration	11
Figure 3-9: Getting into EMC-DCP Setup Mode.....	12
Figure 3-10: EMC-DCP Setup Menus	12
Figure 3-11: EMC-DCP Setup Menu.....	13
Figure 3-12: Setting IP Address of EMC using QMCSetup v4.00+.....	14
Figure 3-13: QMCSetup/EMCSetup Windows Application	15
Figure 3-14: EMC/QMC-2 IP Address Window	16
Figure 3-15: Setting IP Address of EMC-DCP using QMCSetup/EMCSetup v4.00+	17
Figure 3-16: EMC-DCP Layout for Mini Master Control	19
Figure 3-17: Getting into Update Mode on the EMC-DCP.....	21
Figure 3-18: Update Mode of the EMC-DCP	22
Figure 3-19: Confirmation of the Upgrade.....	23
Figure 4-1: EMC-DCP Front View with Desktop Mount.....	26
Figure 4-2: EMC-DCP Side View with Desktop Mount	27
Figure 4-3: EMC-DCP Top View	28
Figure 4-4: EMC-DCP Top Side View without Desktop Mount	28
Figure 4-5: EMC-DCP Side View without Desktop Mount	29
Figure 5-1: Pre-assembled Unit	30
Figure 5-2: Side Screws	32
Figure 5-3: Top Two Corner Screws at the Back of the Panel.....	32
Figure 5-4: Bottom Screws at the Back of the Panel	33
Figure 5-5: Front Brace.....	33
Figure 5-6: Bracket Assembly	34
Figure 5-7: Rubber Feeds.....	34
Figure 5-8: Full Assembly	35

Tables

Table 2-1: Packing List	2
Table 3-1: EMC-DCP – Top Surface Descriptions	7
Table 3-2: EMC-DCP Parameter Options	13
Table 3-3: EMC-DCP – Button Definitions for Mini Master	21

1. OVERVIEW OF EMC-DCP

The EMC Desktop Control Panel (EMC-DCP) is a 19" wide control panel used with the 3025EMC Master Control Switcher, QMC-2 Master Control System, PKGHD9625SW or PKG9625SW Mini Master Control System. The EMC-DCP control panel features a combination of fixed and dynamic LCD, assignable control buttons. The LCD buttons are capable of displaying multiple lines of text or graphics. The panel features 98 buttons and 5 shaft encoders, as well as two plug-in modules for further customization. *Preset* and *program bus select* controls use a quiet tactile button and a shared LCD display for source labeling.

The first optional module contains 15 buttons and 5 shaft encoders, and offers an extension to the configurable buttons of the main panel. The second optional module contains an LCD display, ideal for audio level monitoring and logo previews.

The panel is designed for use on a desktop, in a console, mounted in a rack or on a sliding tray in a rack. The EMC-DCP offers the same set of configurable features as the other QMC-2 control panels and can work with existing EMC or QMC-2 systems. The EMC-DCP also offers a number of optional features.

1.1. FEATURES

The following is a list of EMC-DCP features:

- Flexible menu driven configurations providing quick and simple access
- Easily reconfigured for dynamically changing environments
- Each LCD display can display up to 3 lines (five characters per line) of text or graphics
- Each LCD display backlight is full RGB colour capable with intensity control
- Fully assignable and programmable operation
- Button per source selection with Page mode next and last buttons to select more sources
- Panel lock button to protect against unauthorized or accidental selection
- 8 tally inputs
- 8 tally outputs

2. INSTALLATION OF EMC-DCP

2.1. UNPACKING

Carefully remove the equipment from the boxes and check against the Packing List supplied with each unit. This shows what items have been shipped against your order and includes all options. Any error should be reported to your supplier immediately. After you have unpacked the equipment please save all the packing material as this could be useful in the future if the unit needs to be returned for maintenance.

Check each item supplied for transit damage. Any damage should be reported in detail to your supplier. You must state the serial number of the unit (to be found on the rear or side of each unit).

The EMC-DCP is shipped with the following pieces of equipment:

Part	Description	Quantity
A	EMC DCP	1
B	Power bricks	2
C	Optional 4.3" LCD panel installed (if +LCD was ordered)	1
D	Optional 15 LCD buttons panel with 5 shaft encoders installed (if +ABP was ordered)	1 or 2
E	Optional EMC-DCP-RP for panel angle adjustments	1
F	Installation Manual	1
G	LED Button transparency sheet	1

Table 2-1: Packing List



If items are missing from the EMC-DCP, please contact Evertz Service department at 1-905-335-7570 or service@evertz.com.

2.1.1. Physical Location

The control panel is normally mounted on a desktop or in a console; however it may also be mounted in a sliding tray of an equipment rack. If rack mounting is desired, you can remove the rack mount cover plates on each side to expose the rack mount brackets.

2.1.2. Cooling

Overall power dissipation is relatively low but certain components run hot and cooling is provided for these by internal fans. These draw cool air from one side of the panel and exhaust it through the other side vents.



In all cases it is important to keep the apertures clear of obstructions e.g. cables

2.1.3. Power Supply

The EMC-DCP comes with an auto-ranging DC voltage adapter that automatically senses the input voltage. Power should be applied by connecting a 3-wire grounding type power supply cord to the power entry module on the DC voltage adapter. The power cord should be minimum 18 AWG wire size; type SVT marked VW-1, maximum 2.5 m in length. The DC cable of the voltage adapter should be connected to the DC power jack on the rear of the panel.

**WARNING:**

This equipment uses power/mains connectors fitted with safety ground pins. To reduce the risk of electric shock, grounding of the ground pin of the mains plug must be maintained.



To completely disconnect this equipment from the AC mains, disconnect the power supply cord plug from the AC receptacle. This equipment may have more than one power supply cord. To reduce the risk of electric shock, disconnect all power supply cords before servicing.

3. EMC-DCP PHYSICAL DESCRIPTION

3.1. PANEL CONFIGURATIONS

The EMC-DCP can be ordered with various options. Figure 3-1 to Figure 3-3 illustrate some of the different configurations for the EMC-DCP.

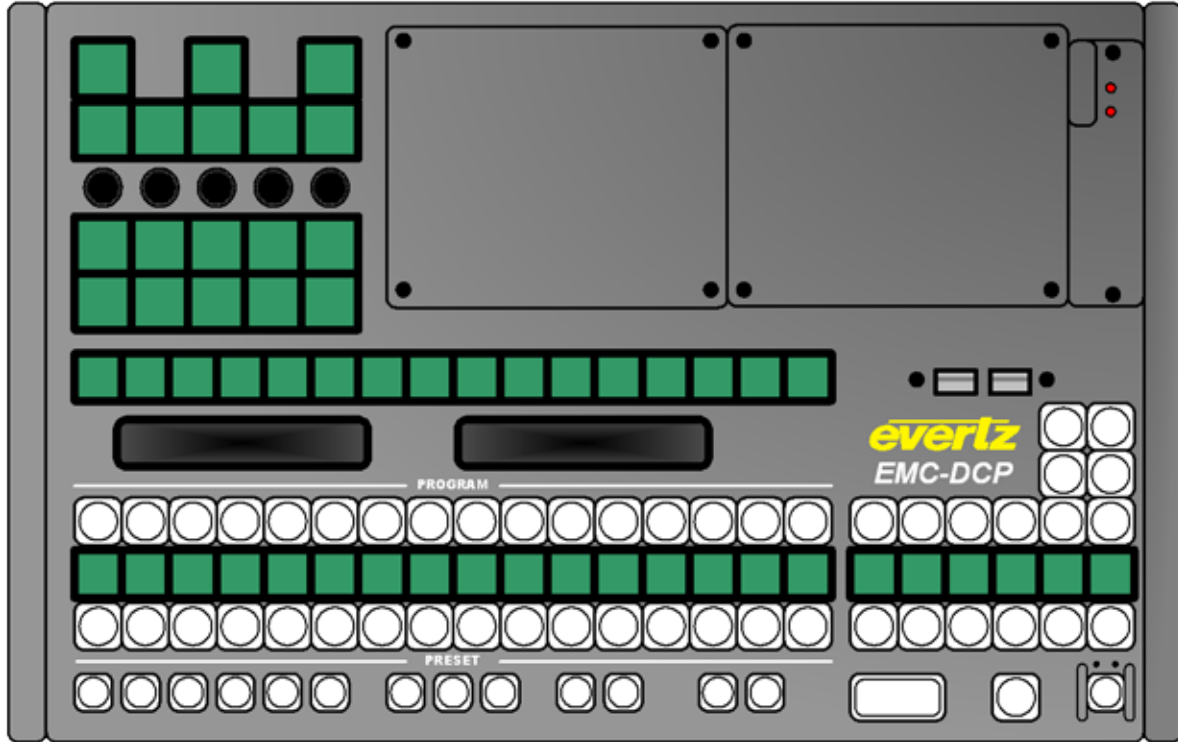


Figure 3-1: Basic EMC-DCP Panel

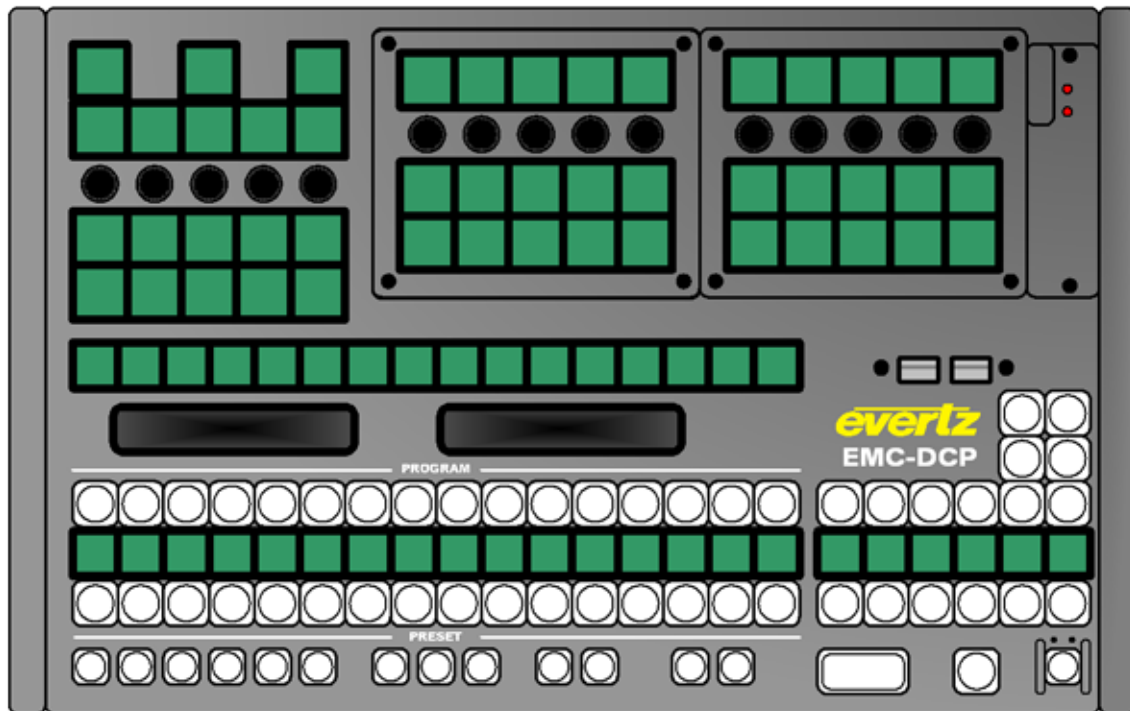


Figure 3-2: EMC-DCP with 2 +ABP options

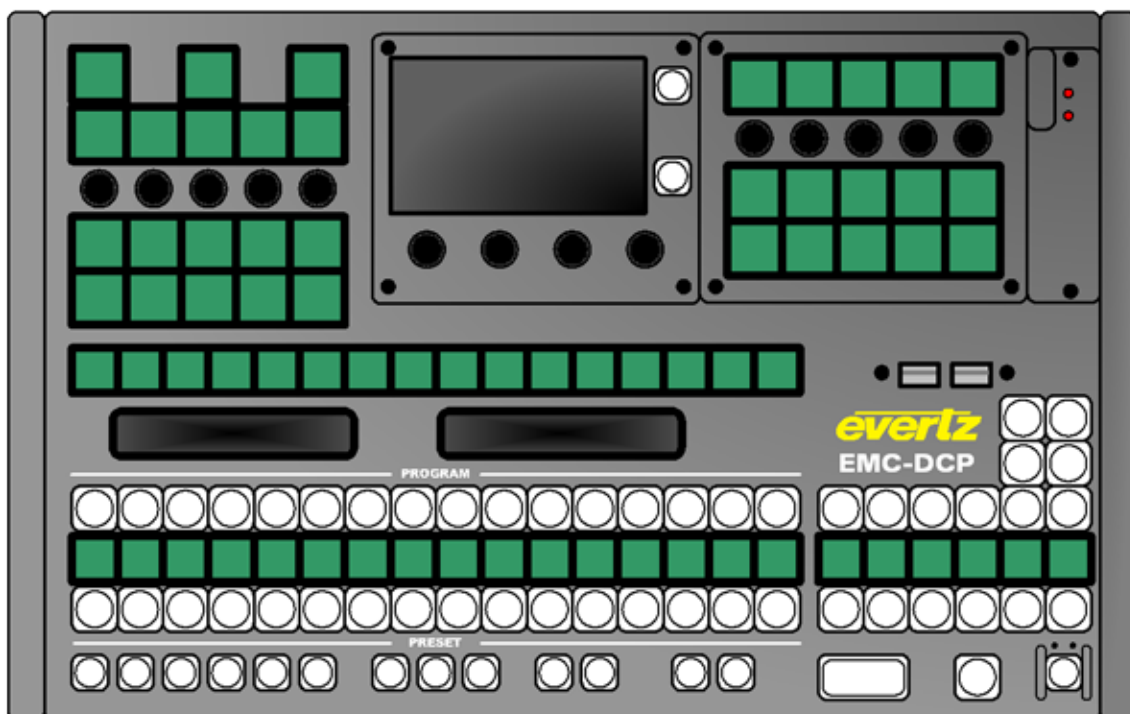


Figure 3-3: EMC-DCP with +LCD and +ABP options

3.2. EMC-DCP PANEL - TOP DESCRIPTION

Figure 3-4 is used to describe the parts of the EMC-DCP that will be referenced within this installation guide.

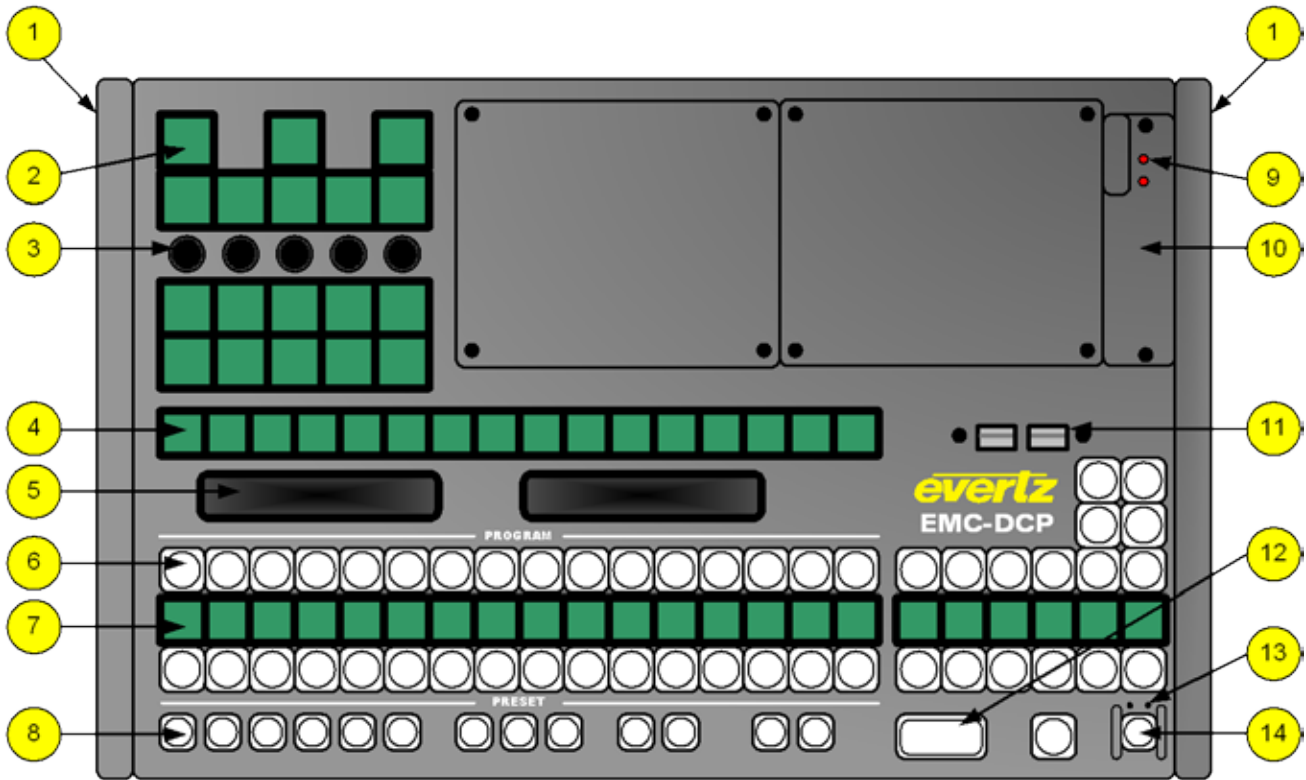


Figure 3-4: EMC-DCP Top Panel

Reference Number	Description
1	Protective covers: The EMC-DCP panel will ship with the protective covers installed. When installing the panel into a 19" wide rack, the protective covers should be removed.
2	Large LCD button: The functions of these buttons are configured using the EMCSetup software. This button type supports 255 different colours.
3	Shaft Encoders: The shaft encoders are used to scroll through values on the large LCD button directly above it.
4	Small LCD buttons: The functions of these buttons are configured using the EMCSetup software. The button type supports 255 different colours.
5	VFD Displays: The VFD displays are used to provide the operators with information regarding the panel and channel.
6	Large LED buttons: The functions of these buttons are configured using the EMCSetup software. This button type supports the colours Red and Green (and a combination of the two colours).
7	Small LCD displays: These LCD displays function as displays only. They display the names of the Large LED buttons above the row of LCD displays. This display type supports 255 different colours.
8	Small LED buttons: The functions of these buttons are configured using the EMCSetup software. This button type supports the colours Red and Green (and a combination of the two colours).
9	Fan Status LEDs: These LEDs indicate the status of the EMC-DCP cooling fans.
10	Cooling Fan unit: This is the cooling fan unit of the EMC-DCP. It can be serviced from the top surface of the EMC-DCP.
11	Extra USB Ports: These ports are designated for future use. Currently, a protective cover is installed.
12	Double LED button: The functions of these buttons are configured using the EMCSetup software. This button type only supports the colour Red.
13	<p>Pin Hole Reset: The Reset pin hole is on the left side and can be used to reset the panel. The Pin Hole Reset is used in case access to the EMC-DCP power switch is blocked.</p> <p>Pin Hole Power: The Power pin hole is on the right side and can be used to completely power off the unit. The Pin Hole Power is used in case access to the EMC-DCP power switch is blocked.</p>
14	Small LED button: This small LED has the same function as item 8. However, the small LED button is protected by a finger guard to prevent operators from accidentally hitting the button.

Table 3-1: EMC-DCP – Top Surface Descriptions

3.3. EMC-DCP PANEL INPUT/OUTPUTS

The EMC-DCP has a number of inputs and outputs available. Please note that not all ports will be enabled at this time. Some ports MAY be used for future features. Figure 3-5 shows the inputs and outputs of the EMC-DCP.

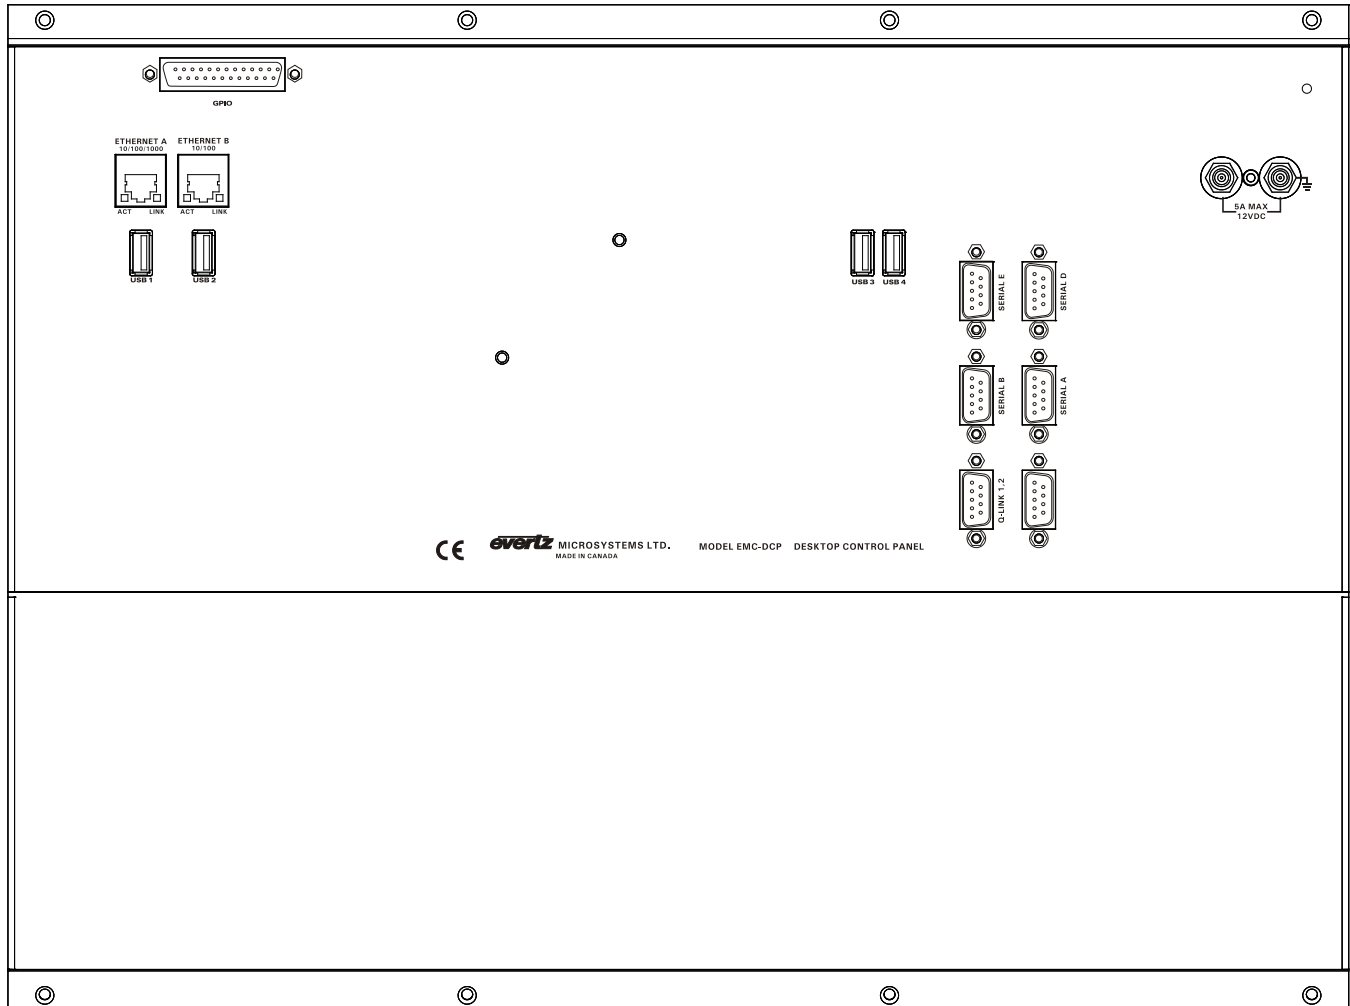


Figure 3-5: EMC-DCP – Inputs and Outputs

- GPIO:** DB-25 connector. Used for panel generated GPIs and GPOs.
- ETHERNET A:** RJ45 connector. Used for Network connections from EMC-DCP to 3025EMC, QMC-2 and QMGs.
- ETHERNET B:** RJ45 connector. Used for Network connections from EMC-DCP to 3025EMC, QMC-2 and QMGs.
- USB 1 to 4:** USB 2.0 Ports. Used for USB-based mouse, keyboard, and storage device connections.
- SERIAL A to D:** RS232/422 DB-9 connectors. Not used.
- SERIAL E:** RS232 DB-9 connector. Not used.
- Q-LINK 1, 2 IN:** BNC connector. Used for Q-LINK connection to the EMC-DCP. Currently not supported.

3.4. CONNECTING EMC-DCP TO 3025EMC SYSTEM

The EMC-DCP is an extension of the existing family of control panels for the EMC Master Control systems. Like the previous QMC-DCP, the EMC-DCP will communicate with the EMC over an Ethernet connection.

Error! Reference source not found. shows a basic EMC System configuration. The EMC will still communicate with an upstream router via Q-Link or Serial (if router is a third party router). To connect the EMC-DCP to the EMC, a network hub/switch is required. Connect a Cat 5 Ethernet cable from Ethernet A (on EMC-DCP) to the network hub. The user will then connect a Cat 5 Ethernet cable to the Network Port of the EMC. Use the EMCSetup software to setup the IP addresses, network settings, etc. (See section 3.8).

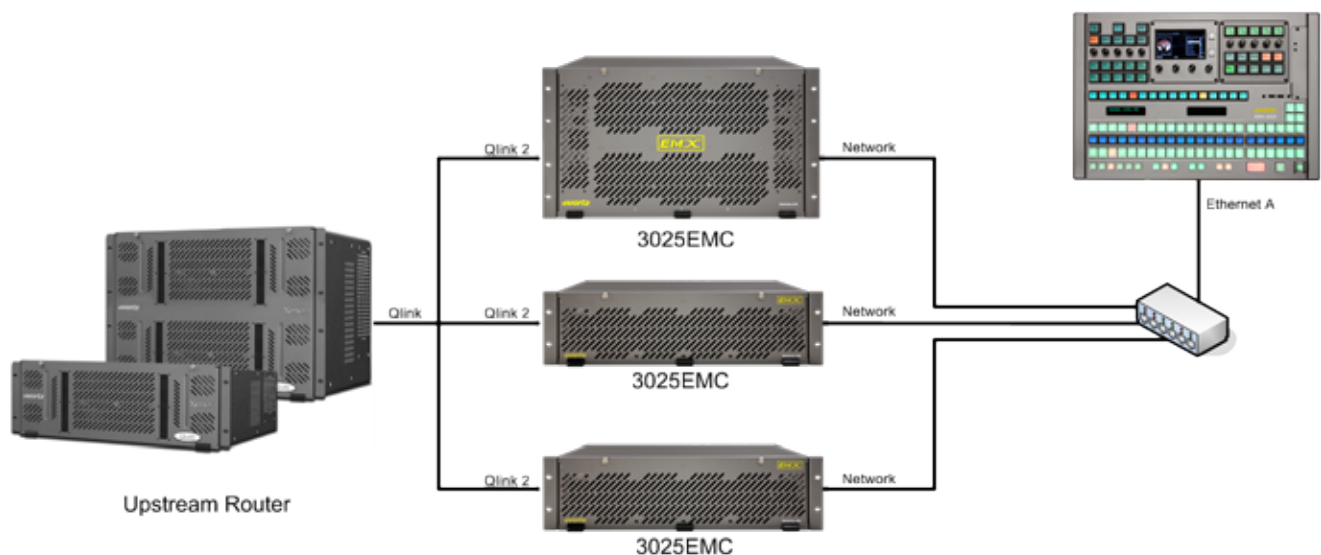


Figure 3-6: Basic EMC Configuration

3.5. CONNECTING EMC-DCP TO QMC-2 SYSTEM

The EMC-DCP is an extension of the existing family of control panels for the QMC-2 Master Control system. Like the QMC-CP-FP-FPE, the EMC-DCP will communicate with the QMC-2 over an Ethernet connection. At this time, Ethernet is the only method of communicating with the QMC-2.

Error! Reference source not found. shows a basic QMC-2 System configuration. The QMC-2 will still communicate with an upstream router via Q-Link or Serial (if router is a third party router). To connect the EMC-DCP to the QMC-2, a network hub/switch is required. Connect a Cat 5 Ethernet cable from Ethernet A (on EMC-DCP) to the network hub. The user will then connect a Cat 5 Ethernet cable to the Network Port of the QMC-2. Use the EMCSetup software to setup the IP addresses, network settings, etc. (See section 3.8).

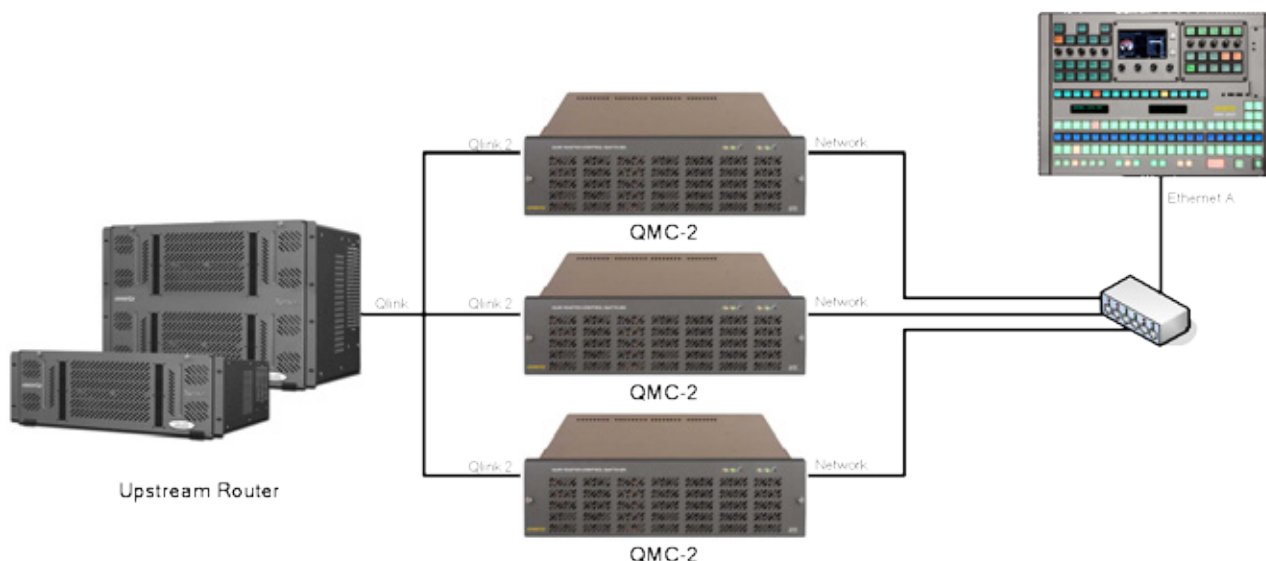


Figure 3-7: Basic QMC-2 Configuration

3.6. CONNECTING EMC-DCP TO PKG9625SW OR PKGHD9625SW (MINI MASTER CONTROL)

Figure 3-8 shows a basic Mini Master Control configuration. The EMC-DCP will communicate with the Mini Master Control over Ethernet. To connect the EMC-DCP to the Mini Master Control, a network hub/switch is required. Connect a Cat 5 Ethernet cable from Ethernet A (on EMC-DCP) to the network hub. The user will then connect a Cat 5 Ethernet cable to the Ethernet port on the Mini Master. The EMC-DCP will require an IP address in order to connect to the Mini Master Controls (see section 3.7).

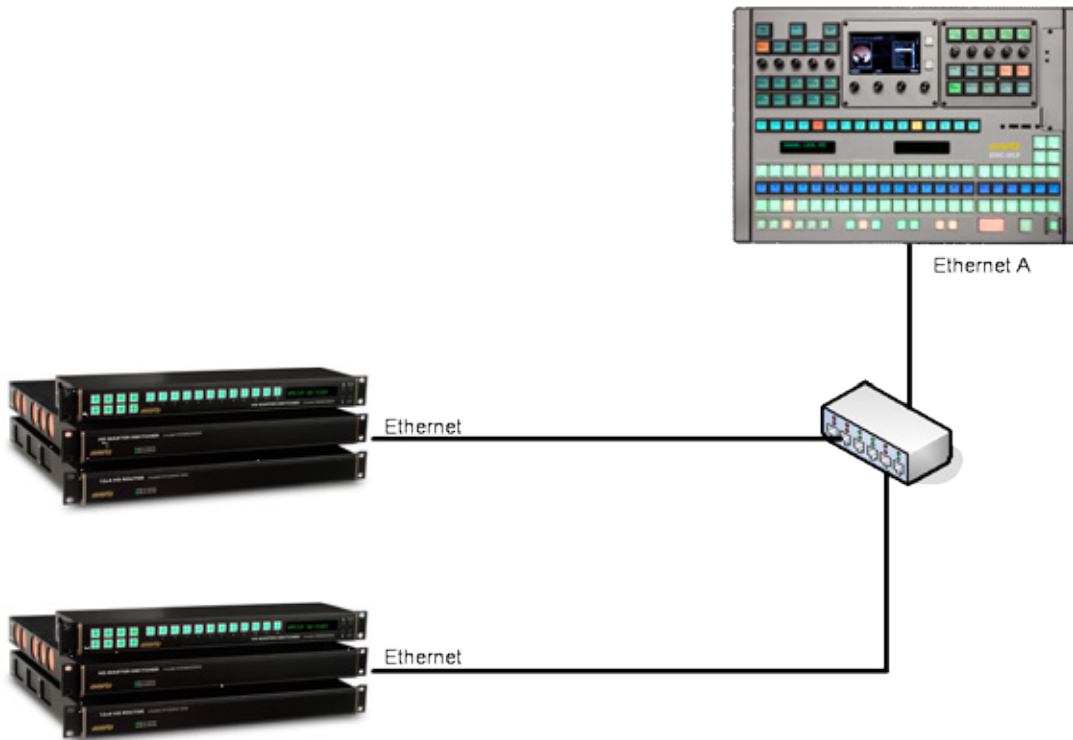


Figure 3-8: Basic Mini Master Configuration

3.7. CONFIGURING IP ADDRESS AND QLINK ADDRESS OF EMC-DCP

In order to set the IP Addresses of Ethernet ports A and B and the Q-Link address, the user will be required to enter the Setup Mode of the EMC-DCP, which can be accessed directly on the panel. Figure 3-9 shows which shaft encoders the user **MUST** push **AND** simultaneously hold down for 10 seconds in order to enter Setup Mode.

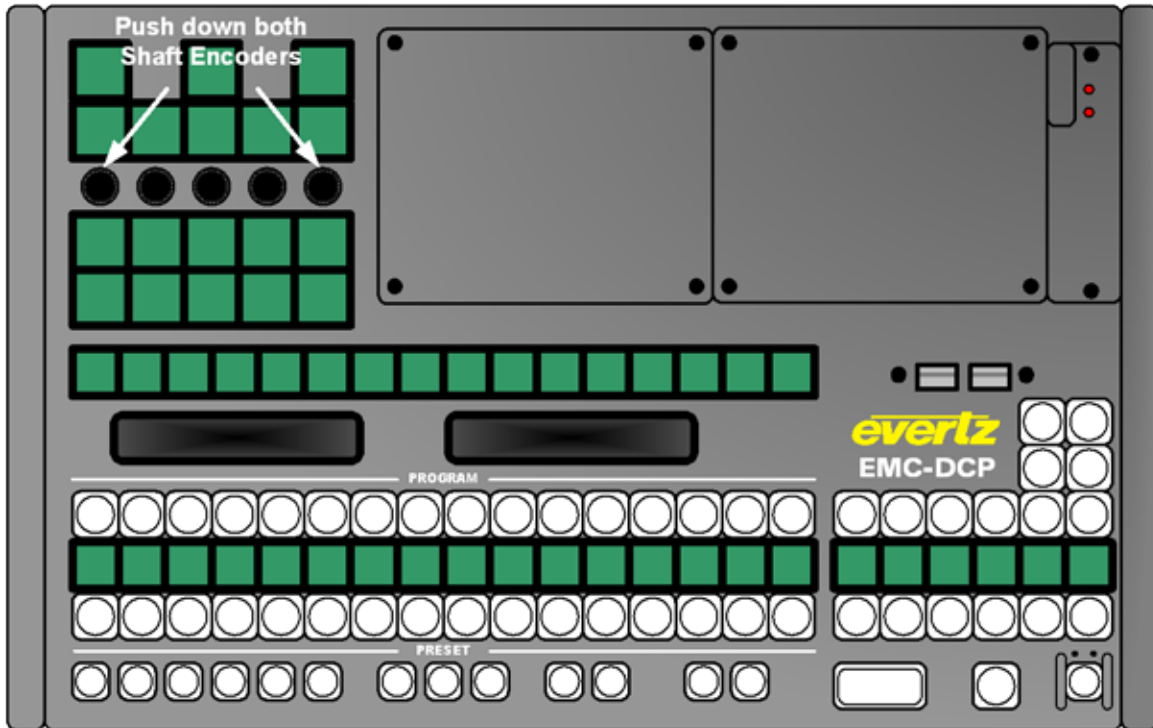


Figure 3-9: Getting into EMC-DCP Setup Mode

After about 10 seconds, the EMC-DCP panel will turn RED, and then it will switch to multi-coloured mode. In this mode, the EMC-DCP will display the various Setup Menu options in the top left corner of the panel (see Figure 3-10).

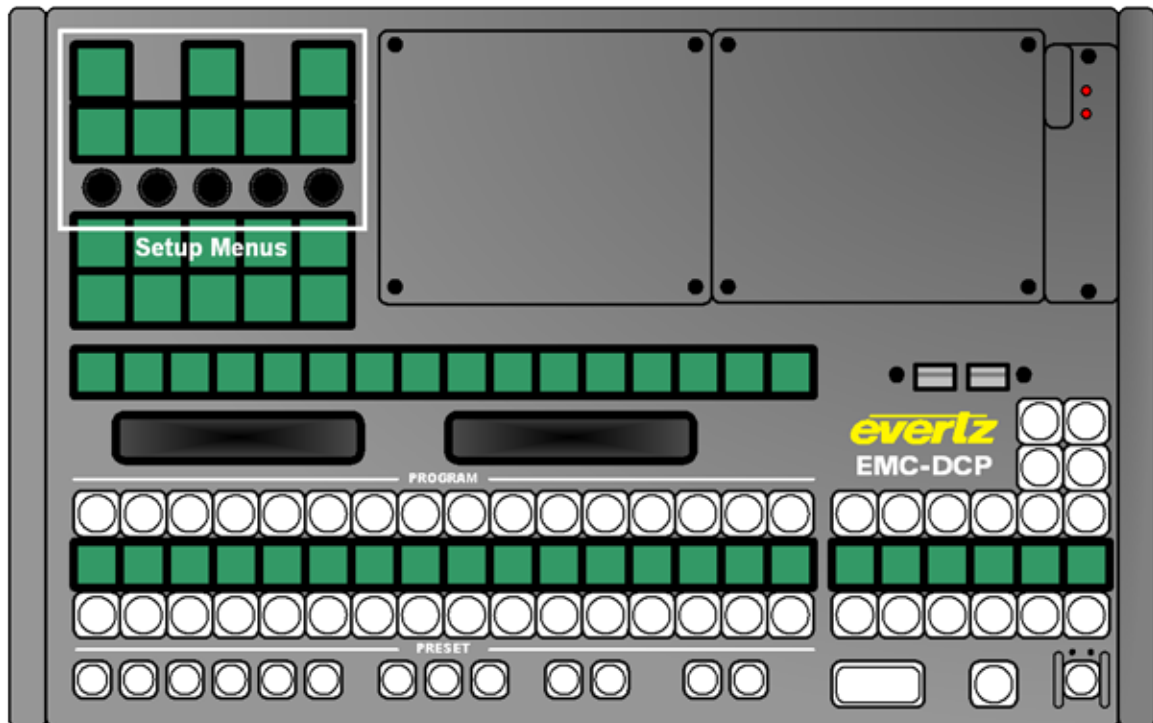


Figure 3-10: EMC-DCP Setup Menu

The Setup Menu options are shown in Figure 3-11.

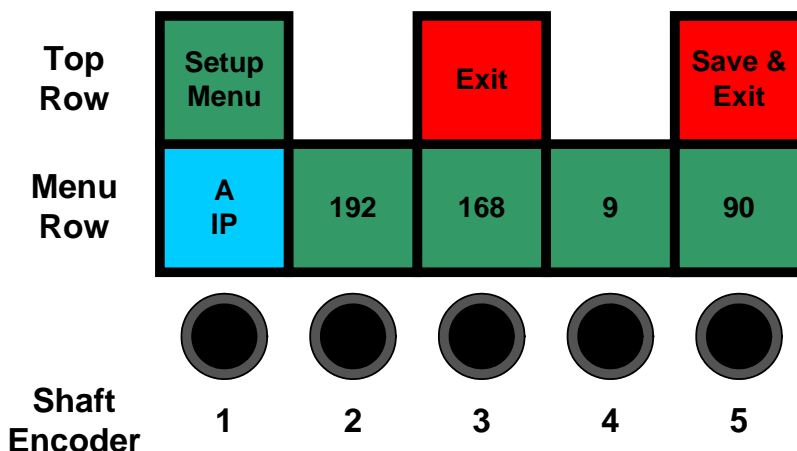


Figure 3-11: EMC-DCP Setup Menu

Starting from the Top Row, the first large LCD button displays the name of the Menu, in this case, *Setup Menu*. The next LCD button is labeled “Exit” and is used to exit the Setup Menu WITHOUT saving the changes. The last LCD button in this row is labeled “Save and Exit” and is used to save the changes and exit the *Setup Menu*.

The next row is called the Menu Row. This is the row where the main EMC-DCP parameters are set. Use Shaft Encoder 1 to scroll through the parameters (see Table 3-2) and Shaft Encoders 2 to 5 to set the parameter values.

EMC-DCP Parameter	Description
A IP	Sets the IP address of Ethernet A on the EMC-DCP. The format of this parameter is XXX.XXX.XXX.XXX.
A Mask	Sets the Subnet mask of the network for Ethernet A on the EMC-DCP. The format of this parameter is XXX.XXX.XXX.XXX.
A Gateway	Sets the Gateway Address of the network for Ethernet A on the EMC-DCP. The format of this parameter is XXX.XXX.XXX.XXX.
B IP	Sets the IP address of Ethernet B on the EMC-DCP. The format of this parameter is XXX.XXX.XXX.XXX.
B Mask	Sets the Subnet mask of the network for Ethernet B on the EMC-DCP. The format of this parameter is XXX.XXX.XXX.XXX.
B Gateway	Sets the Gateway Address of the network for Ethernet B on the EMC-DCP. The format of this parameter is XXX.XXX.XXX.XXX.
Q-Link ID	Sets the Q-Link address of the EMC-DCP panel. The parameter ranges from 0x00 to 0xFF.
LCD	Sets the brightness of the LCD buttons on the EMC-DCP panel. The parameter ranges from 0% to 100%.
LED	Sets the brightness of the LED buttons on the EMC-DCP panel. The parameter ranges from 0% to 100%.
NIC A Speed	Configure NIC A for auto (default), 10Mb full duplex or 10Mb half duplex.
NIC B Speed	Configure NIC B for auto (default), 10Mb full duplex or 10Mb half duplex.

Table 3-2: EMC-DCP Parameter Options

Once the user has set the desired parameters, the user will select the “Save and Exit” button in the Top Row to save the settings and revert the panel back to its normal operating mode.

For Mini Master Control users, please continue to section 3.9. For QMC-2 users, continue to the next section (section 3.8).

3.8. SETTING UP ETHERNET CONTROL USING EMC SETUP

Once the EMC-DCP has been setup, the user must now configure the rest of the EMC system to see the panel. This is done using the QMCSetup (or newer EMCSetup) software tool. The user will first set an IP address for the EMC channel and configure the EMC to send Q-Link packets over Ethernet (select checkbox). The settings are found under the Ports Tab of the EMC channel configuration (see Figure 3-12). The user **MUST** enter an IP address that is on the same network as the EMC-DCP.

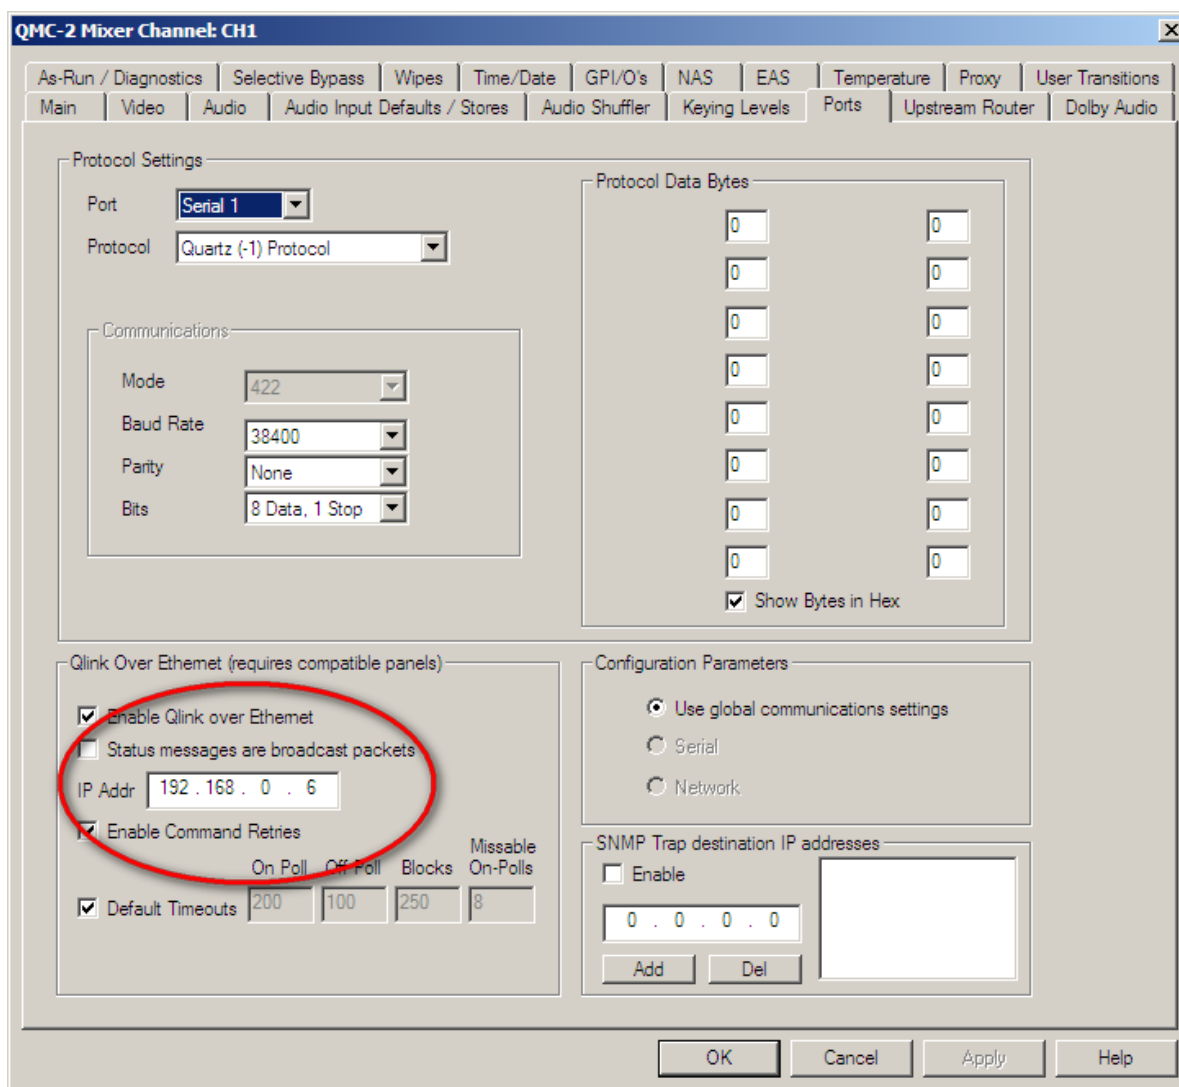


Figure 3-12: Setting IP Address of EMC using QMCSetup v4.00+

After setting this parameter, the EMC will be able to communicate to the EMC-DCP (and other Ethernet enabled control panels) over Ethernet.

Next, the user will configure the EMC-DCP to use Ethernet. The procedure for adding the EMC-DCP is similar to any other QMC-2 control panel. Under the EMC-DCP configuration, the user must set the Q-Link address (matches the one set on the EMC-DCP in section 3.6) and then select the “Ethernet instead of Qlink” option. The user can now enter the IP address (set in section 3.6) into the IP Address field.

Next, the user must set the EMC IP address. Connect a serial cable from a PC to the EMC front serial connector. Open the EMCSetup software tool and navigate to the **Network** menu in the top toolbar. Select the **IP Address Setup** item from the **Network** drop down menu as shown in Figure 3-13.

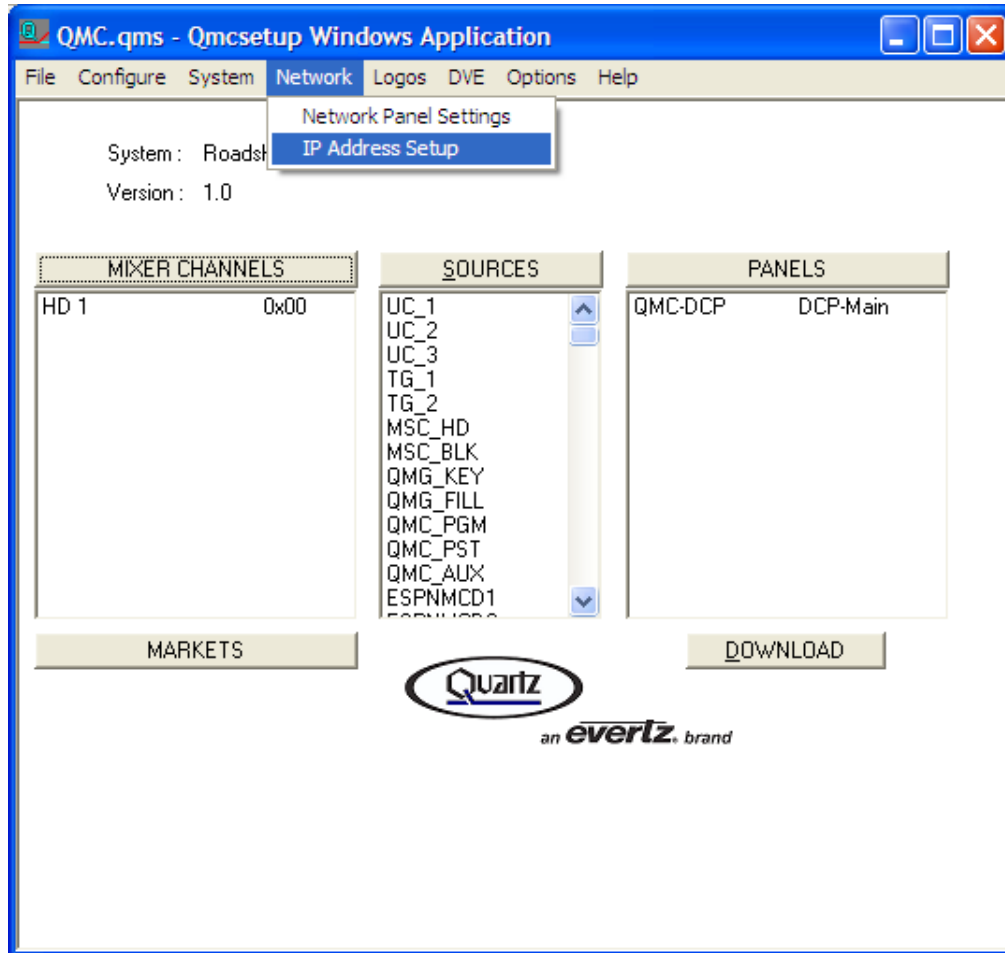


Figure 3-13: QMCSetup/EMCSetup Windows Application

Once the EMC IP Address window appears, as shown in Figure 3-14, select the **Query Current** button. The **Query Current** command will return the IP address of the system. Enter the IP address, subnet mask and gateway to reflect the current network settings. Ensure that the EMC and the EMC-DCP are on the same network. Once the appropriate settings are entered, select the **Update** button.

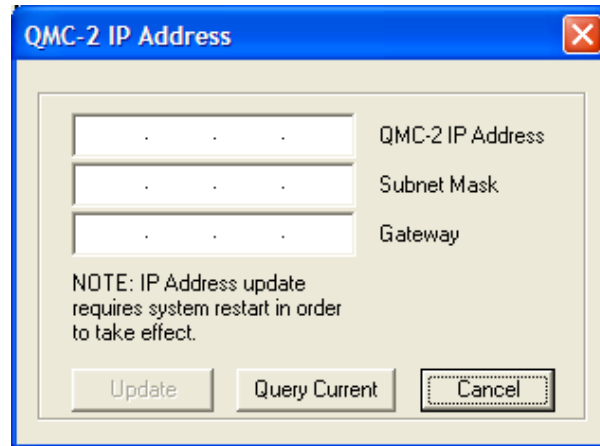


Figure 3-14: EMC/QMC-2 IP Address Window

The EMC must be rebooted for the IP address change to take effect.

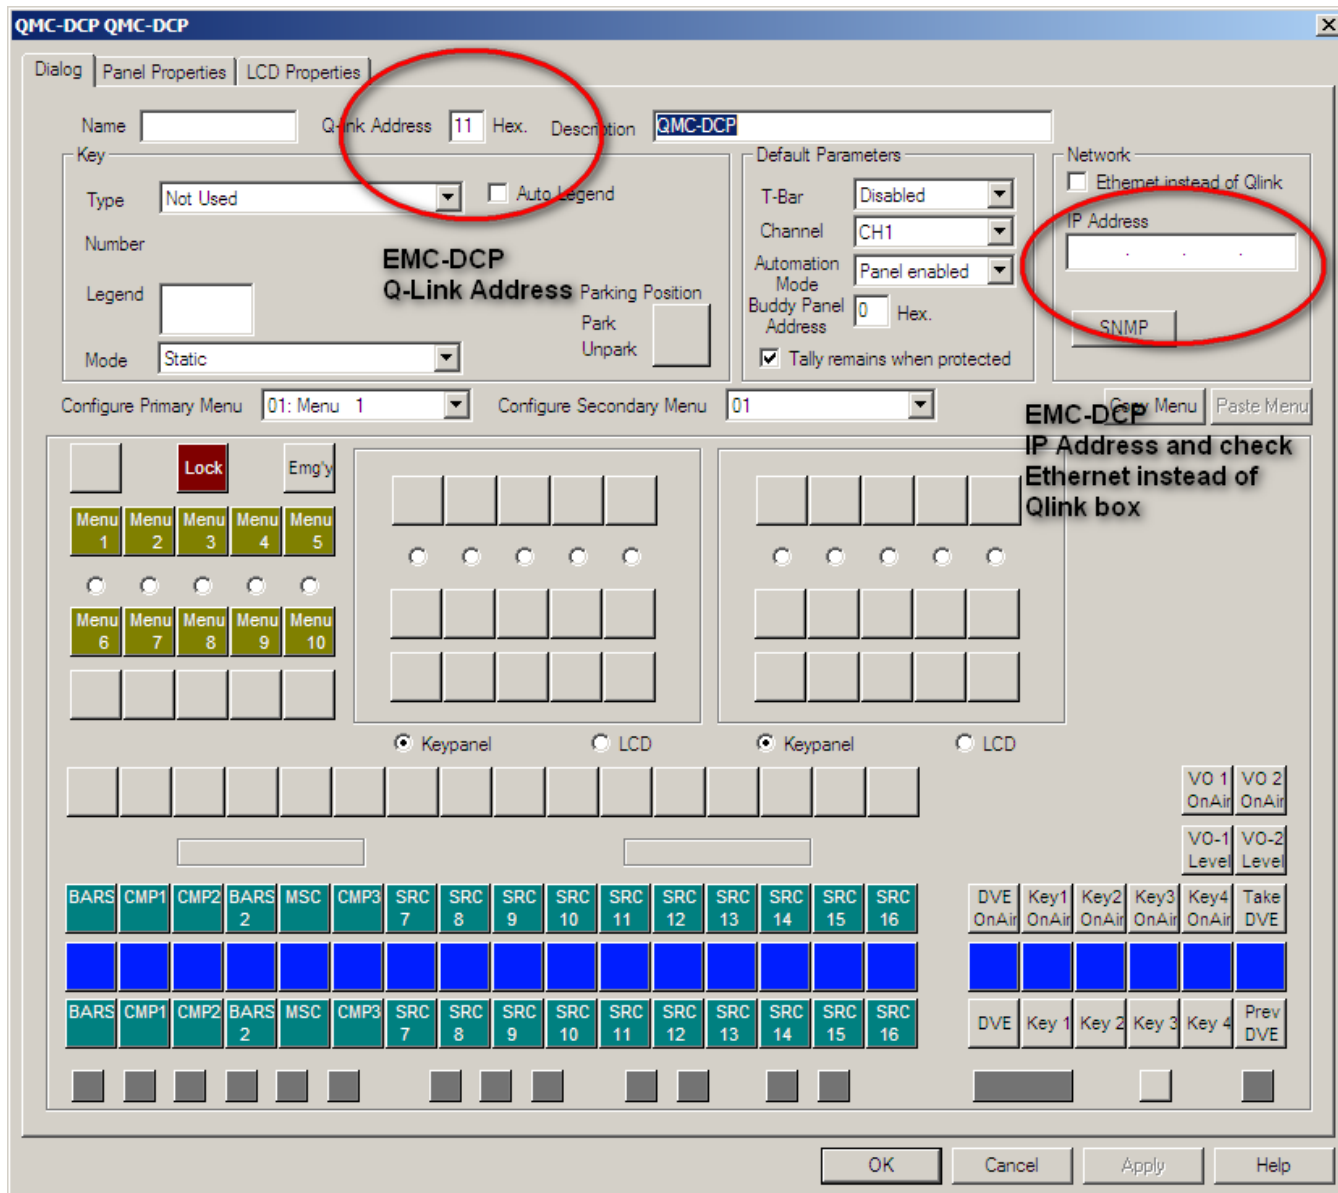


Figure 3-15: Setting IP Address of EMC-DCP using QMCSetup/EMCSetup v4.00+

Return to the EMC-DCP configuration window. The EMC channel and EMC-DCP panel settings are sent over Serial or Ethernet to the EMC channel. Once all the appropriate fields have been entered, the setup is complete.



If the IP address of the EMC has not been set, the EMC-DCP setup will not take effect.

3.9. TESTING EMC-DCP SETUP

To test the configurations, the user should connect a PC to the same network as the 3025EMC or QMC-2 or 9625SW and EMC-DCP. The user should then PING each the 3025EMC or QMC-2 or 9625SW and EMC-DCP. If there are replies, then the connections are correct. If there are no replies, check the IP addresses and Ethernet connections of the 3025EMC or QMC-2 or 9625SW and EMC-DCP.

For 3025EMC or QMC-2 users, the next step is to check the Q-Link ID. If the Q-Link ID was set correctly, the panel will display the button configuration set by the user using the QMCSetup software. If not, the panel may report *No Q-Link Comms*. The user should check the Q-Link ID on the EMC-DCP and on the EMC Setup configuration file.

3.10. EMC-DCP LAYOUT FOR PKG9625SW AND PKGHD9625SW USERS

Unlike the QMC-2, the PKG9625SW or PKGHD9625SW does not allow for user configurable EMC-DCP panel layouts. The EMC-DCP only comes in one layout. The EMC-DCP layout for PKG9625SW or PKGHD9625SW is shown in Figure 3-16.

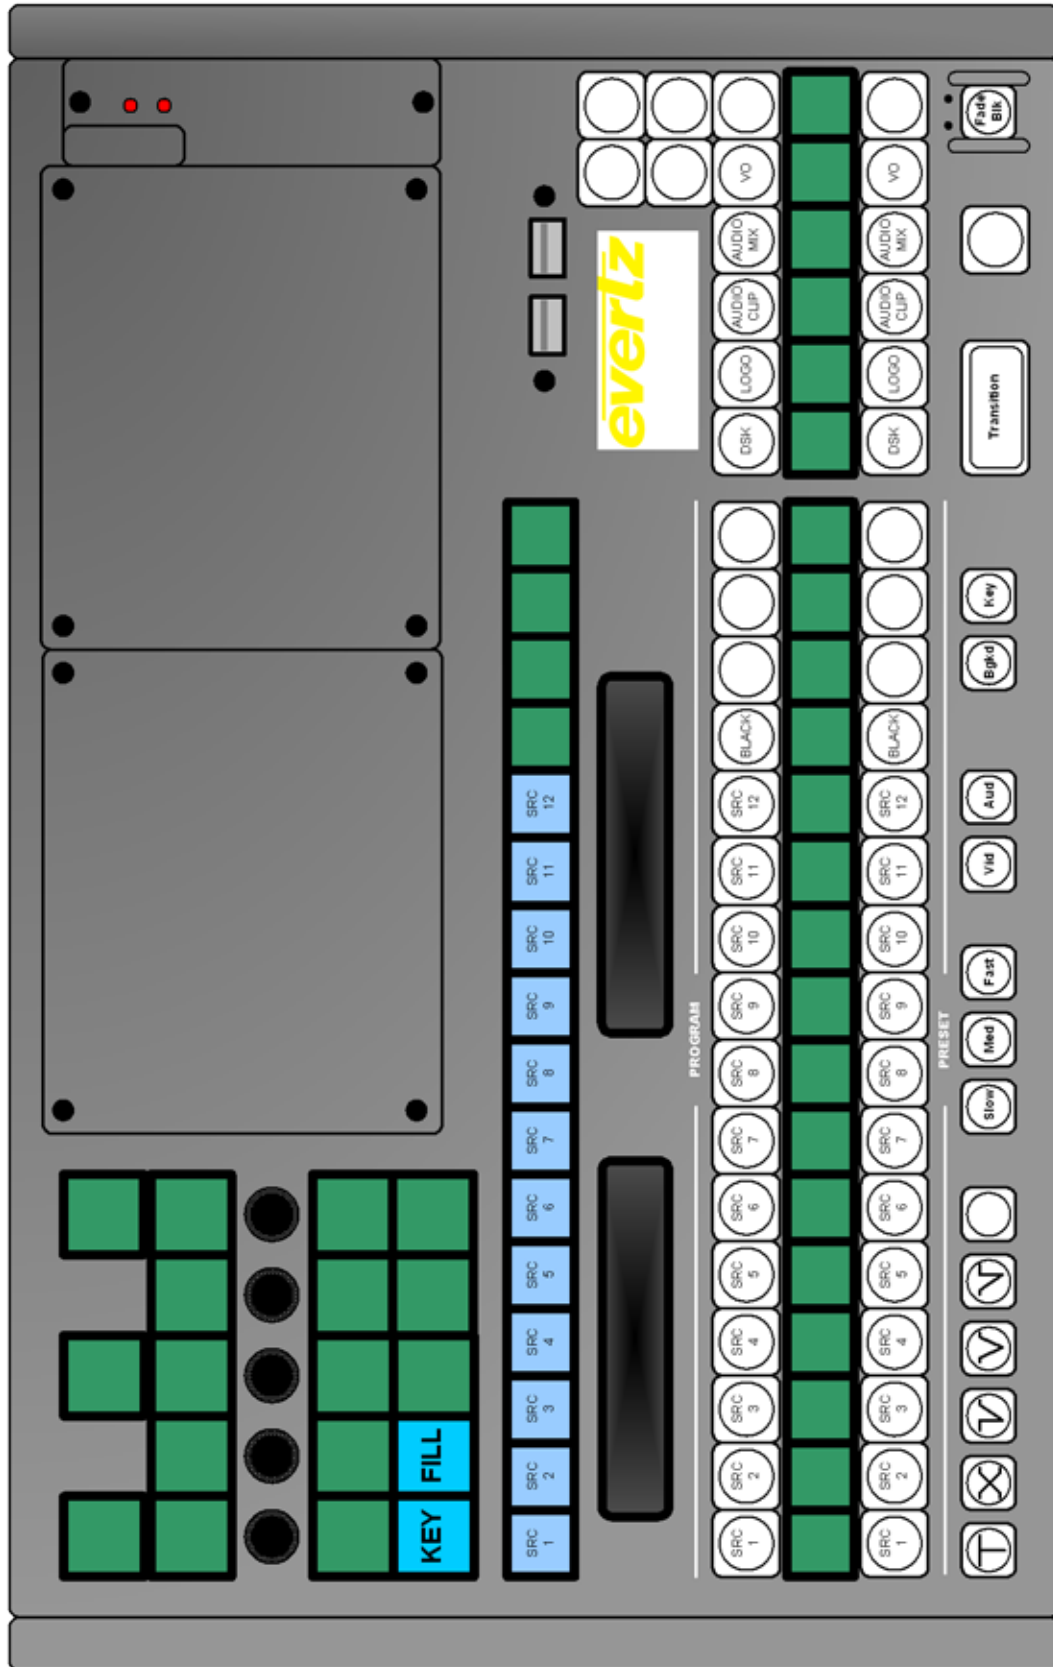


Figure 3-16: EMC-DCP Layout for Mini Master Control

Button	Description
KEY	This button selects the source (from the 12 sources on LCD row below button) for the KEY Input of the PKG9625SW or PKGHD9625SW. It determines what portion of the variable to use, and from what source.
FILL	This button selects the source (from the 12 sources on LCD row below button) for the FILL Input of the PKG9625SW or PKGHD9625SW.
SRC 1 to 12	This group of buttons selects one of the 12 inputs into the PKG9625SW or PKGHD9625SW for the Program or Preset bus.
BLACK	This button selects the internal Black Generator as a source for the PKG9625SW or PKGHD9625SW for the Program or Preset bus.
DSK	This button selects the DSK Layer of the PKG9625SW or PKGHD9625SW for the Program or Preset bus. DSK disables or enables the keyer layer.
LOGO	This button selects the Internal Logo Layer of the PKG9625SW or PKGHD9625SW for the Program or Preset bus. LOGO disables or enables media files (video and audio clips).
AUDIO CLIP	This button selects the audio clip in the keyer. AUDIO CLIP is a source .wav file stored internally in the keyer, mixed with background audio, and sent to Output.
AUDIO MIX	This button selects the audio mix control. AUDIO MIX controls the audio layer when mixed with the background audio and sent to Output.
	This button selects a CUT transition type. The <i>Cut</i> transition is a hard switch that brings in the effect with a graduated change.
	This button selects a MIX or FADE transition type. This transition mixes the current effect with the next effect. The current effect lessens, while the next increases. The process is linear, so that the fade/increase occurs at the same rate.
	This button selects the CUT-to-FADE transition type. The current input switches within one (1) frame while the new source is faded in gradually.
	This button selects the FADE-to-FADE transition type. The current input fades out gradually, while the new source is faded in gradually. At any instant the value is the sum of both PROGRAM and PREVIEW inputs.
	This button selects the FADE-to-CUT transition type. The current input fades out gradually, while the new source is added within one (1) frame.
	This group of buttons selects the speed of the transition type (excluding the CUT transition type). Listed below are the transition speeds: SLOW performs the transition in 1 second, or 30 frames, or 60 fills. MED performs the transition in approximately two thirds of a second, or 20 frames, or 40 fills. FAST performs the transition in 0.5 seconds, or 15 frames, or 30 fills.
	This button selects a VIDEO ONLY transition.
	This button selects an AUDIO ONLY transition.
	This button prompts a BACKGROUND to be included in the transition. BGKD changes the background portion of the video signal. In a transition, audio always follows video if BGKD LED is on.




	<p>This button selects the KEY LEVELS (i.e. DSK, LOGO, etc.) to be included in the transition. KEY changes the foreground portion of the video signal.</p>
	<p>This button starts the transition. The Transition button switches what is stored at the PREVIEW button to the PROGRAM button, and what is currently being output at the PROGRAM button to the PREVIEW button.</p>
	<p>This button selects a Black Generator to AIR. When Fade BLK is selected the EMC-DCP provides a controlled fade to black.</p>

Table 3-3: EMC-DCP – Button Definitions for Mini Master

3.11. UPGRADING THE EMC-DCP FIRMWARE USING A USB

In order to upgrade the firmware on the EMC-DCP, the user will need to download the latest EMC-DCP firmware from the Evertz website (www.evertz.com). The firmware should be transfer onto a USB 2.0 memory stick (onto the top level/root directory). The USB 2.0 memory stick is then plugged into any of the USB ports on the EMC-DCP (see Figure 3-5).

The user will be required to enter the *Update Mode* of the EMC-DCP, which can be accessed directly on the panel. Figure 3-17 shows which shaft encoders (2 and 5) the user MUST push AND simultaneously hold down for 10 seconds, in order to enter Update Mode.



The shaft encoders used to enter Update Mode are DIFFERENT than the ones used to enter Setup Mode in section 3.7.

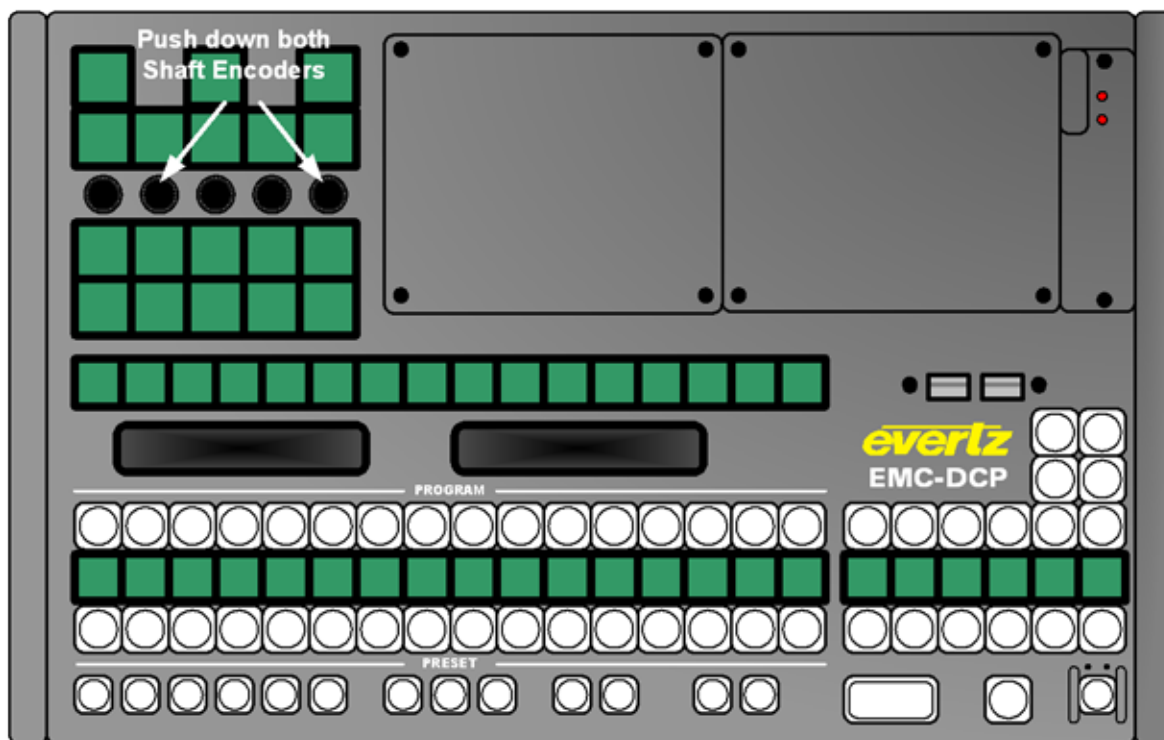


Figure 3-17: Getting into Update Mode on the EMC-DCP

Once in Update Mode, the panel will appear as shown in Figure 3-18. To exit *Update Mode*, press the “Exit Update” button. This will take the user back to the normal panel operations.

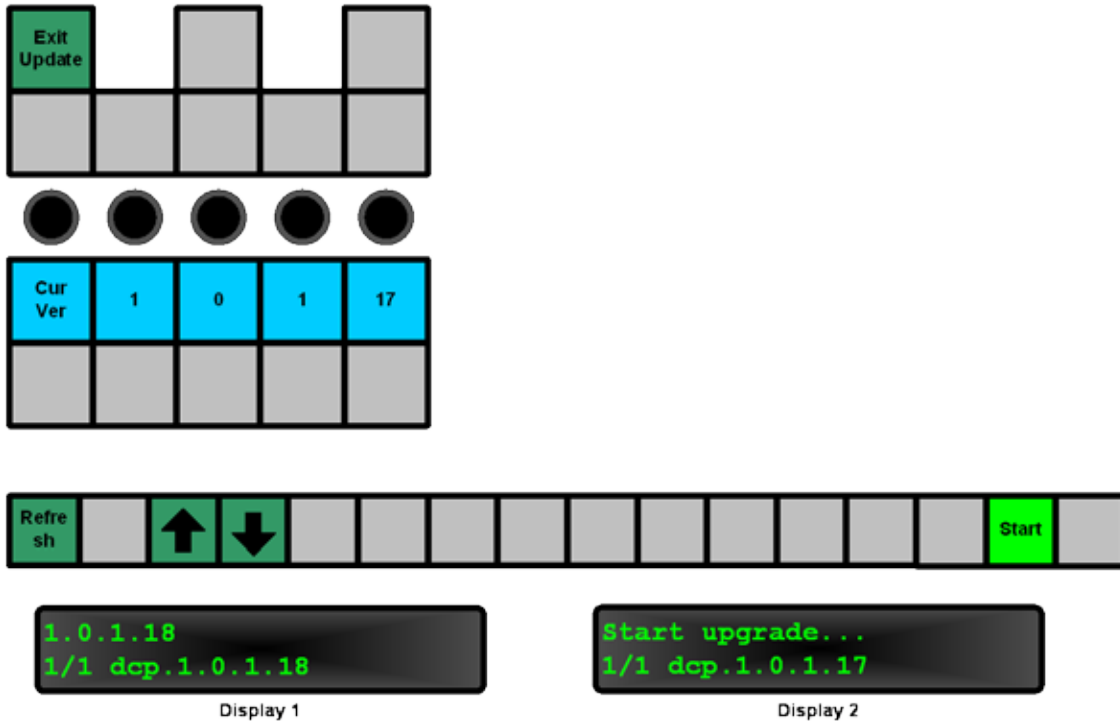


Figure 3-18: Update Mode of the EMC-DCP

The user will see the current firmware in the third row of LCD buttons. The *VFD Display 1* will show the firmware versions found on the USB 2.0 Memory stick that is plugged into the EMC-DCP. The user will use the “Refresh” button to update the list. Use the UP or DOWN arrows to scroll the list of available firmware and scroll to the desired firmware release. *VFD Display 2* will show the selected firmware. To start the update, press the “Start” button.

Once the “Start” button is selected, the panel will switch to a confirmation state, as shown in Figure 3-19.

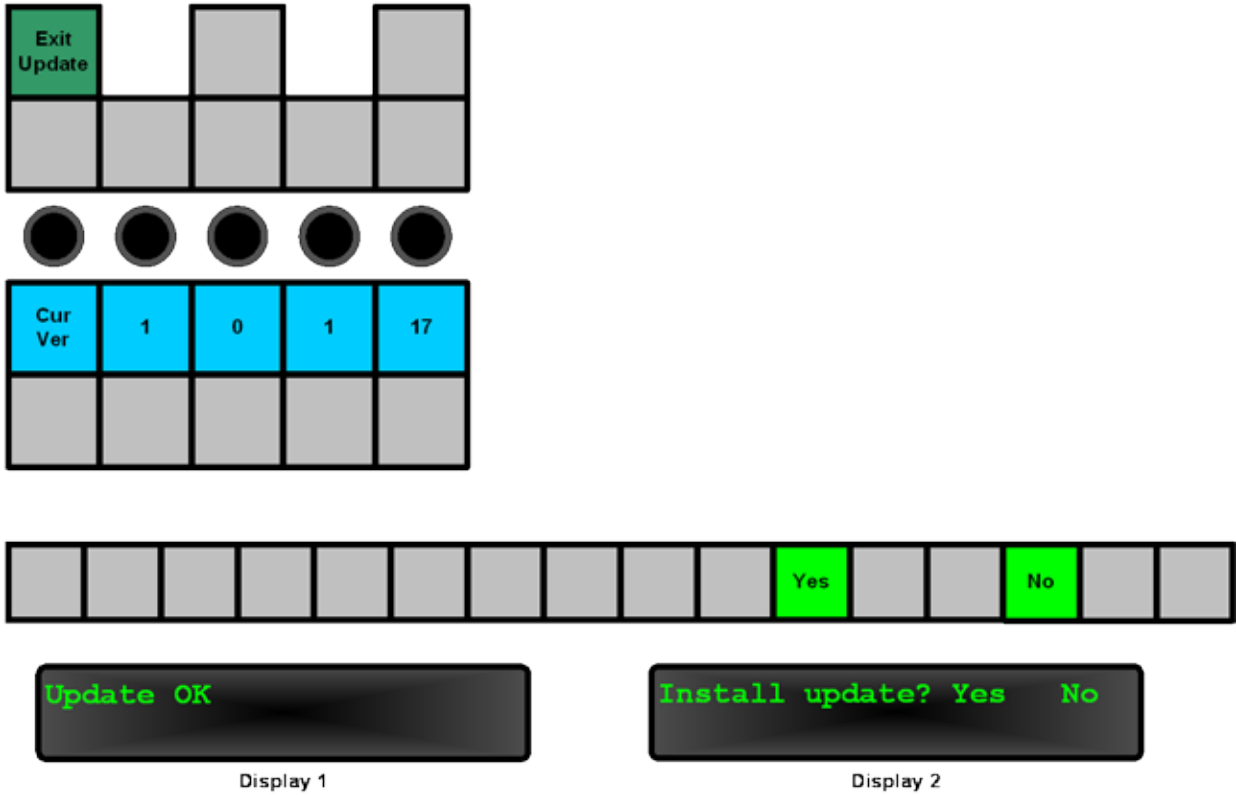


Figure 3-19: Confirmation of the Upgrade

In the confirmation mode, the *VFD Display 1* will indicate whether the firmware selected by the user is valid. If the message displayed is not “Update OK”, then the selected firmware on the USB memory stick was found to be corrupt. The user should exit the Update Mode, download the firmware again, and repeat the instructions outlined in this section. If the message is “Update OK”, the user will need to select “Yes” to begin the upgrade of the firmware. If the user does not want to install the firmware, select “No”, and they will be returned to *Update Mode* (see Figure 3-18).

If the user selected “Yes”, the EMC-DCP will proceed to install the new update. This will include a panel reset. The process should take about 5 minutes to complete.

3.12. UPGRADING THE EMC-DCP FIRMWARE OVER THE NETWORK

If the EMC-DCP panel is available on the configuration PC over the network, then the EMC-DCP can also be updated via the network.

To do this you need to connect to the EMC-DCP webpage using the Mozilla Firefox web browser. To confirm that the configuration PC is able to connect to the EMC-DCP simply enter the IP address of the EMC-DCP (either NIC A or NIC B).

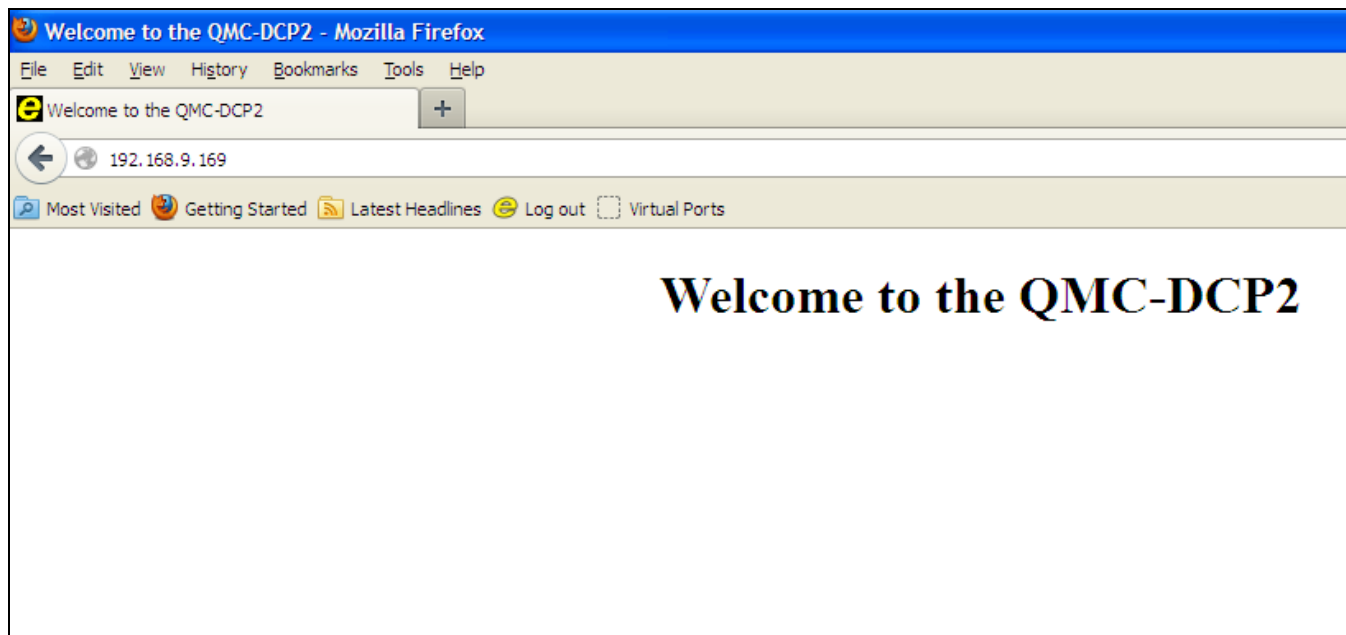


Figure 3-20: EMC-DCP Webpage

To access the upgrade webpage for the EMC-DCP, simply add a “/upgrade” to the IP address.



Figure 3-21: EMC-DCP Upgrade Webpage

From the upgrade webpage, click “Browse” to navigate to the location of the “.efp” file that you need to install. Note that there are two different file types. If the EMC-DCP is to be used with a QMC-2/3025 system then the “emcdcp-update-x.x.x.x.efp” upgrade file must be used. If the EMC-DCP is to be used with a PKG9625SW system then the “emcdcp-switcher-update-x.x.x.x.efp” upgrade file must be used.

When the appropriate upgrade file has been selected, click “Install”. The result of the upgrade process will be shown at the bottom of the page under the status header.

To complete the install process click “Reboot” to reboot the panel. Please note that the webpage will not update to show that the EMC-DCP panel updated successfully.

4. TECHNICAL DESCRIPTION

4.1. SPECIFICATIONS

4.1.1. Electrical

Voltage: Autoranging 100V - 240V AC, 50/60Hz

Power: 20 Watts

Fuse Rating: 250V, 4A, time delay

Safety: ETL listed.

Complies with EU safety directive

EMI/RFI: Complies with FCC Part 15 Class A,
EU EMC Directive

4.1.2. Physical

The panel is designed for use on a desktop, for mounting in a console, mounted in a rack or on a sliding tray in a rack. Figure 4-1 to Figure 4-5 shows the overall dimensions of the unit with and without the Desktop mount.

Dimensions: 19" W x 5.6" H x 12.8" D.
(483mm W x 142mm H x 325mm D)

Weight: 8 lbs. (3.5Kg)

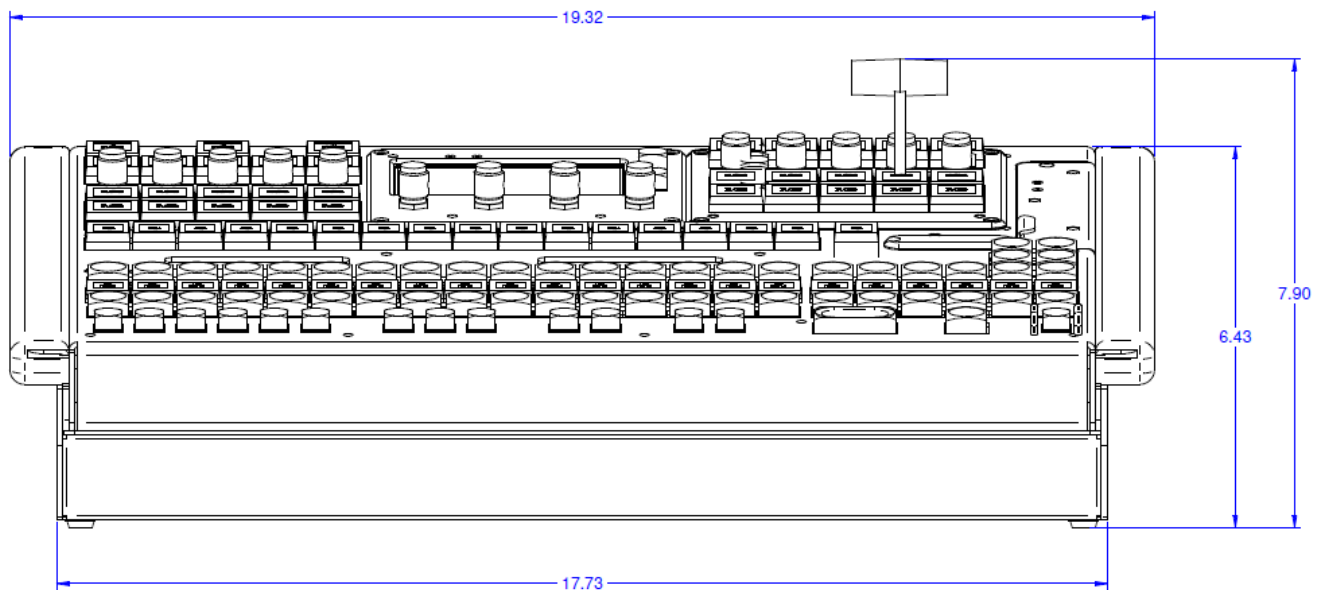


Figure 4-1: EMC-DCP Front View with Desktop Mount

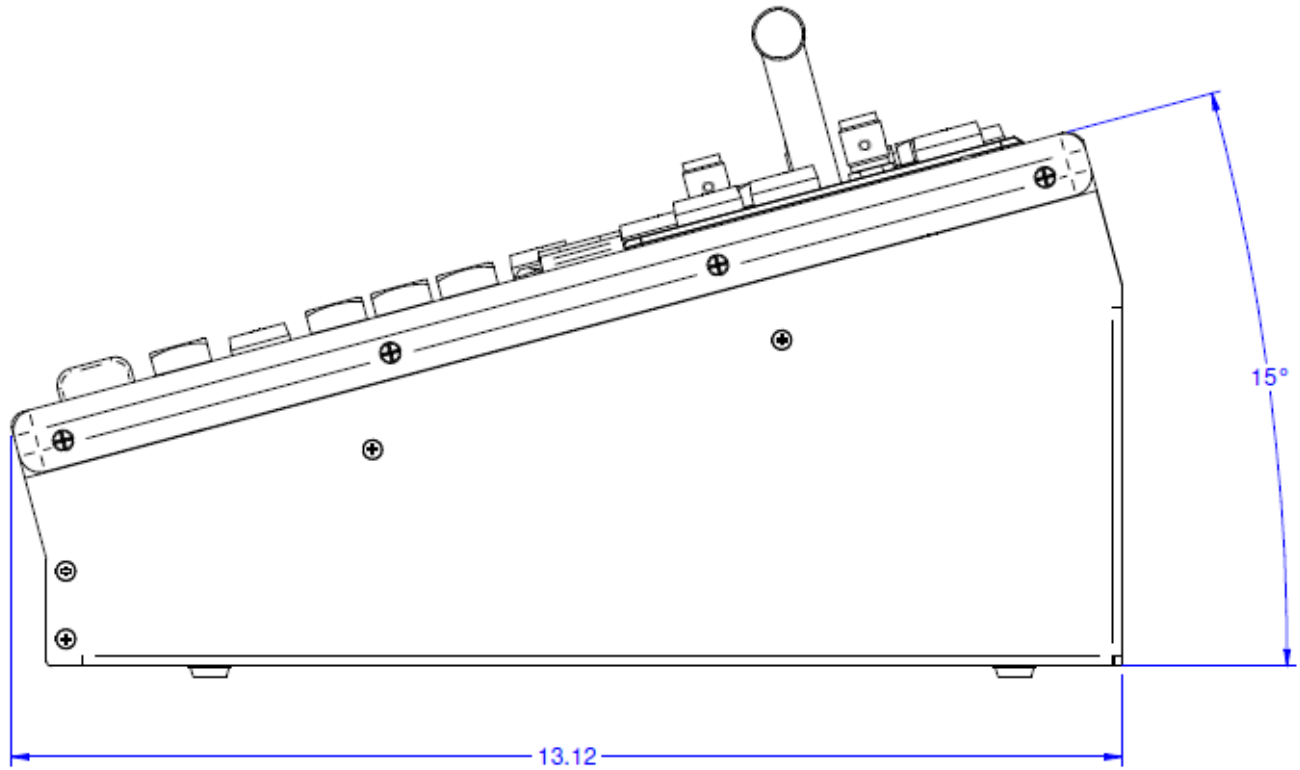


Figure 4-2: EMC-DCP Side View with Desktop Mount

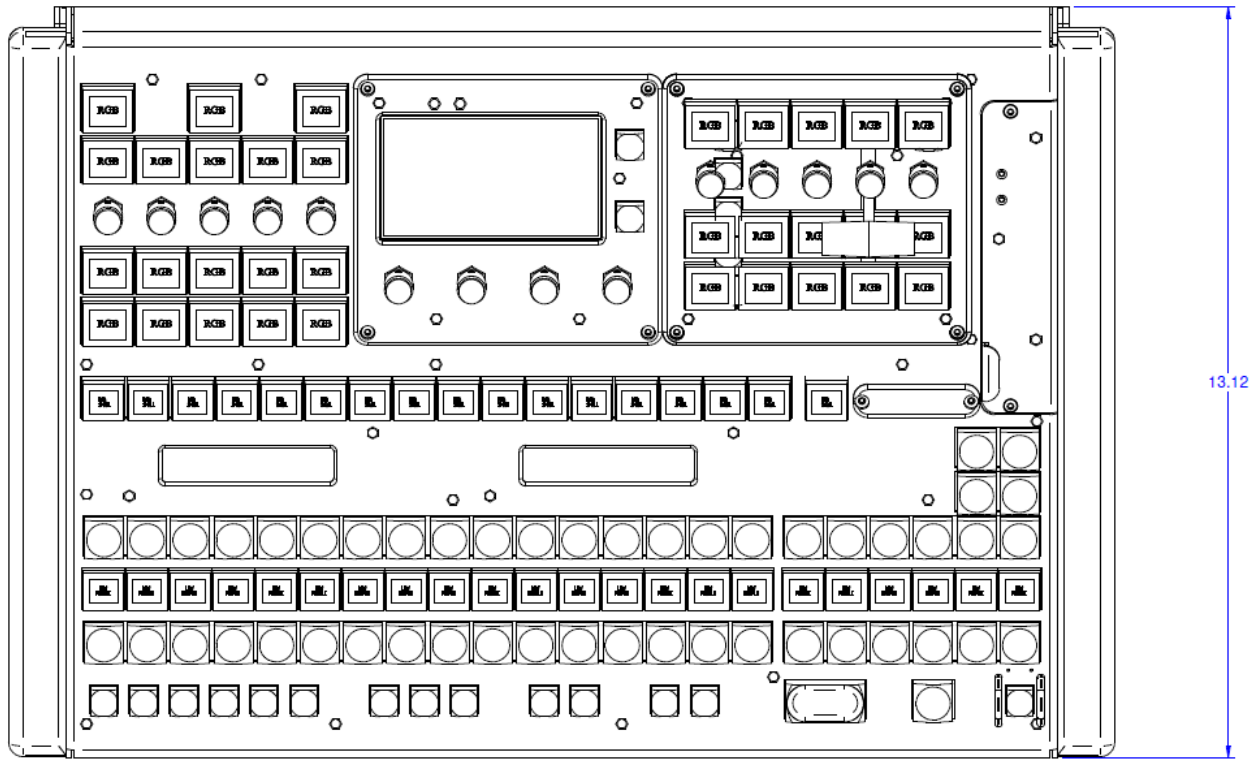


Figure 4-3: EMC-DCP Top View

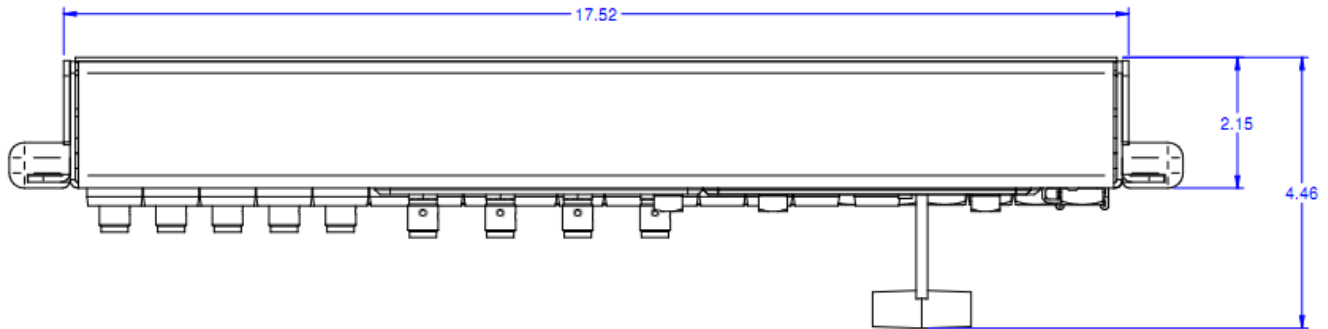


Figure 4-4: EMC-DCP Top Side View without Desktop Mount

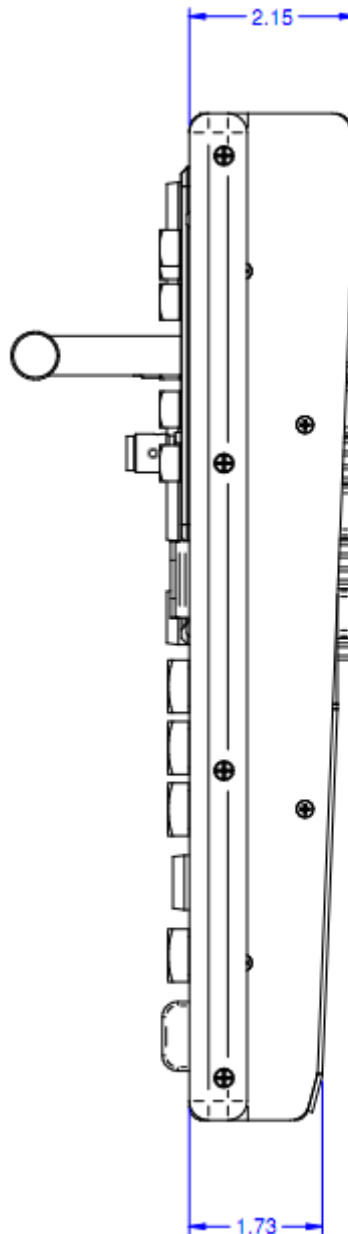


Figure 4-5: EMC-DCP Side View without Desktop Mount

4.2. SERVICING INSTRUCTIONS



CAUTION – These servicing instructions are for use by qualified service personnel only. To reduce risk of electric shock, do not perform any servicing instructions in this section of the manual unless you are qualified to do so.

5. INSTALLING THE EMC-DCP DESKTOP MOUNT

When you receive an EMC-DCP, it usually comes without a Desk Mount kit. This option can be added later on.

This kit contains the following parts:

- 2 - 1 x EQMC-DCP2-MB-2 (Desktop Mount Bracket LH)
- 3 - 6 x HMMP38FCNSS (M3x8mm Flat DIN)
- 4 - 4 x HMS388-075 (M3x12 Flat Head)
- 5 - 4 x HBMSJ5012.BLK (Black Rubber Bumper)
- 6 - 4 x HMMM3X6MFLATZC (M3x6mm Flat)
- 7 - 1 x EQMC-DCP2-BR-1 (Desktop Mounting Front Brace)
- 8 - 1 x EQMC-DCP2-MB-1 (Desktop Mounting Bracket RH)



Note: Prior to assembly, remove and discard screws from pre-assembled unit as illustrated in Figure 5-1 (10 screws in total).

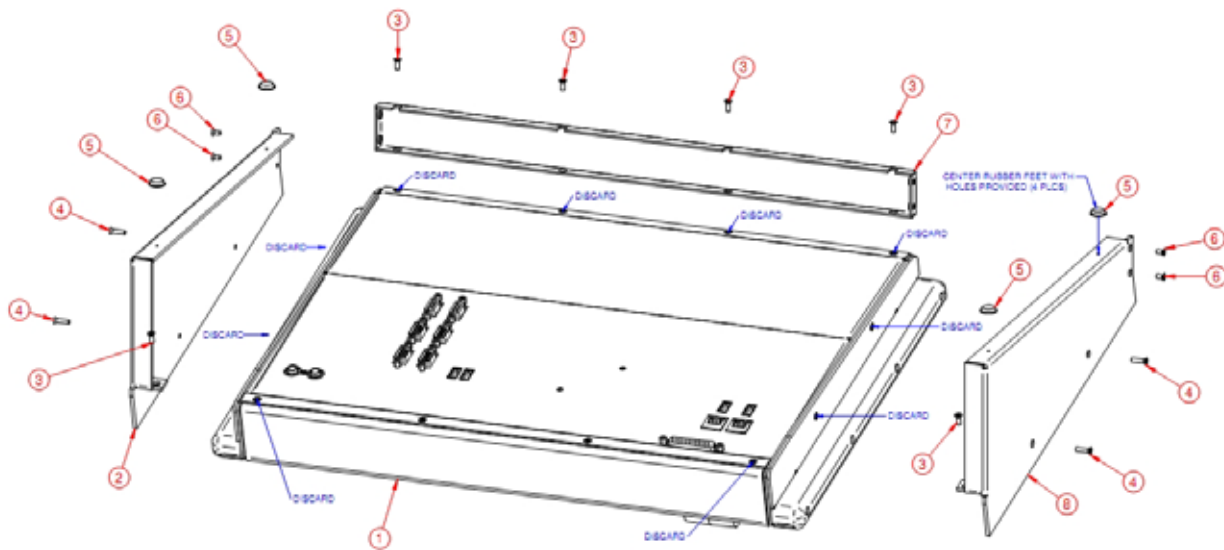


Figure 5-1: Pre-assembled Unit

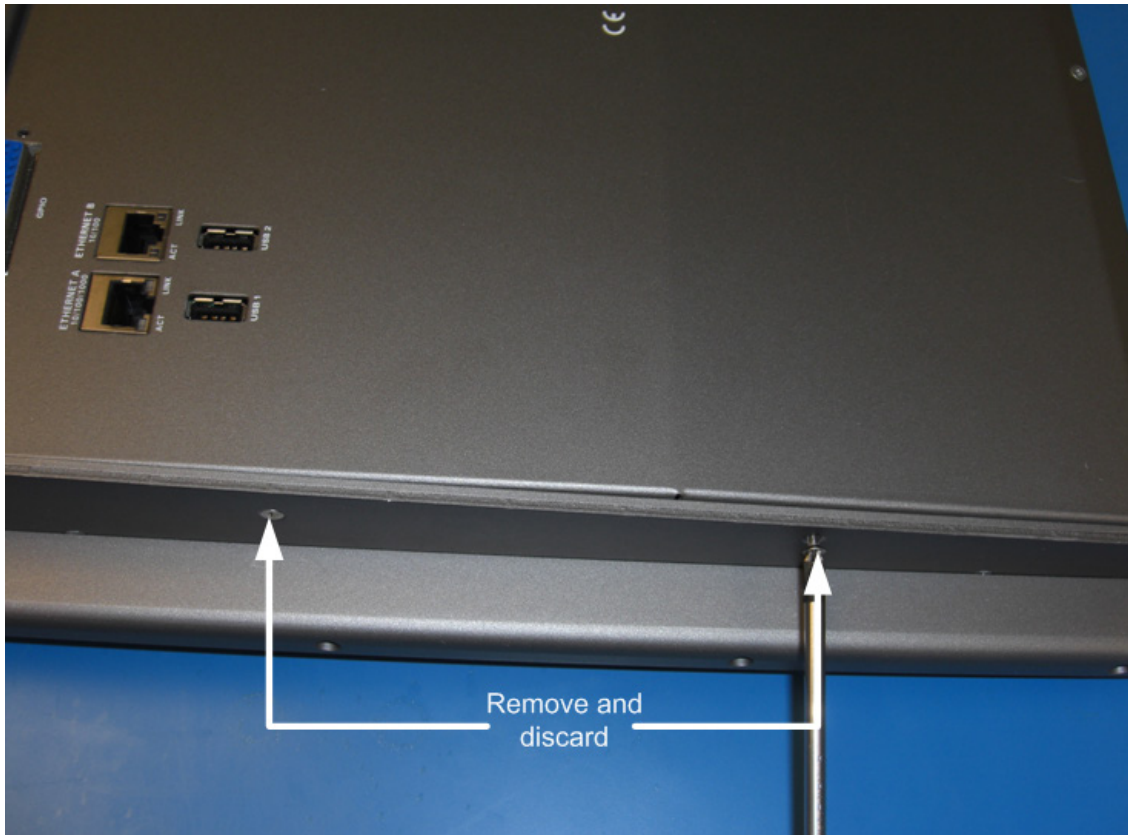


Figure 5-2 shows the side screws that need to be removed and discarded. (A total of 4 screws. Two from each side).

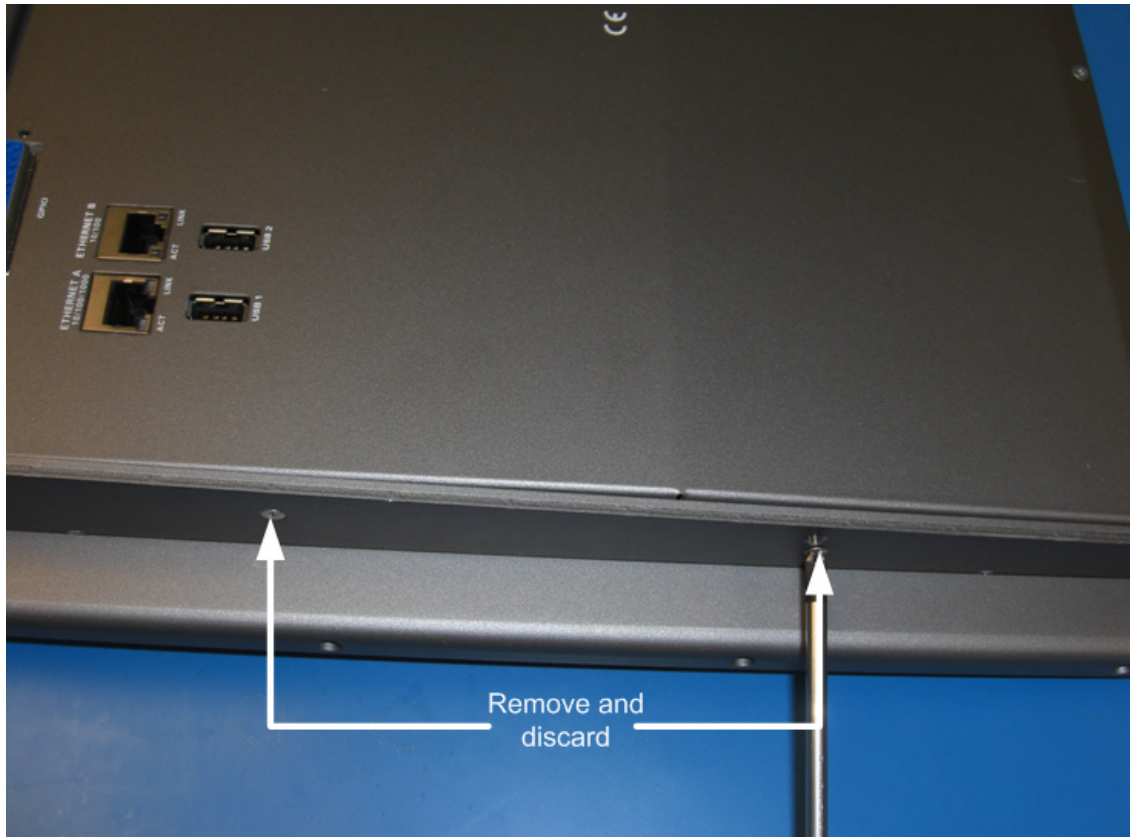


Figure 5-2: Side Screws

Figure 5-3 shows the top two corner screws at the back of the panel that need to be removed. (A total of 2 screws).

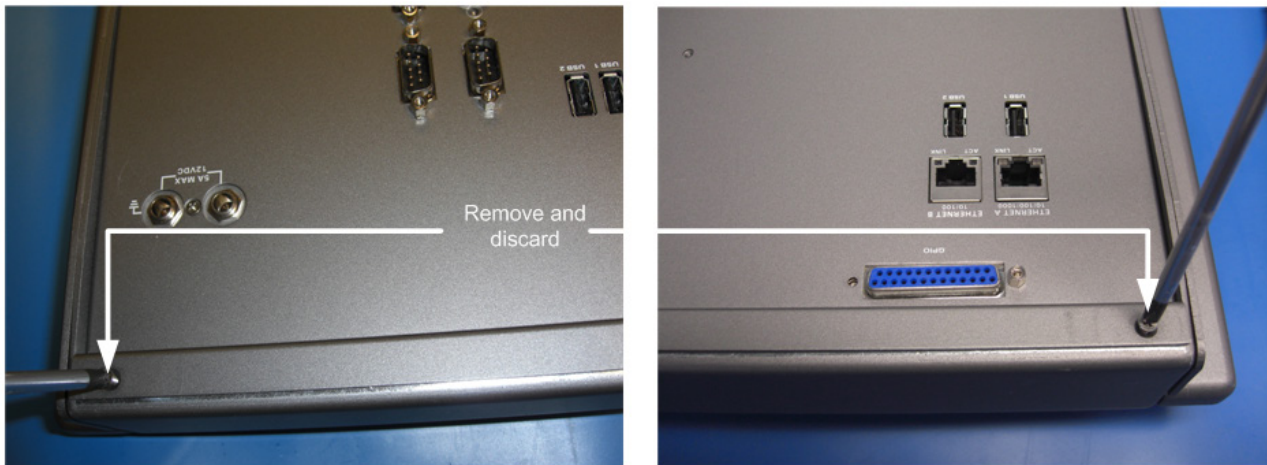


Figure 5-3: Top Two Corner Screws at the Back of the Panel

Figure 5-4 shows the bottom screws at the back of the panel that need to be removed. (A total of 4 screws).

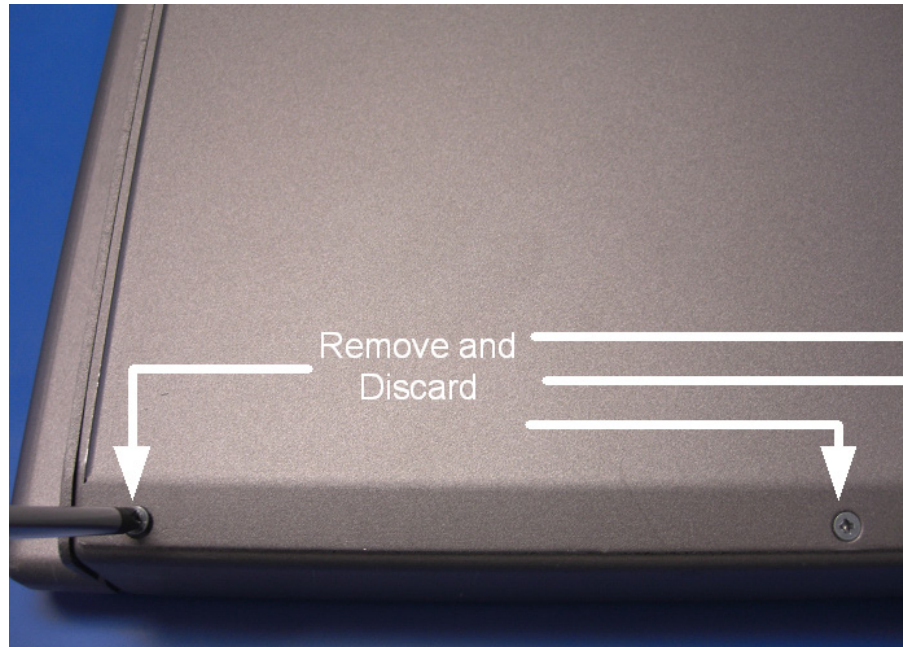


Figure 5-4: Bottom Screws at the Back of the Panel

5.1. DESKTOP MOUNT ASSEMBLY

Once all ten screws are removed, you can start assembling the new parts.

First, install the Front Brace (Part #7) and use 4 X M3x8mm Flat Din screws (Part#3) shown in Figure 5-5.



Figure 5-5: Front Brace

Next step is to assemble the two Desktop Mounting Brackets (Part #2 for the left side and Part #8 for the right side). Each side needs 1X M3x8mm 2X M3x12mm and 2X M3x6mm screws. In this manual, only the left side bracket assembly will be described (see Figure 5-6).

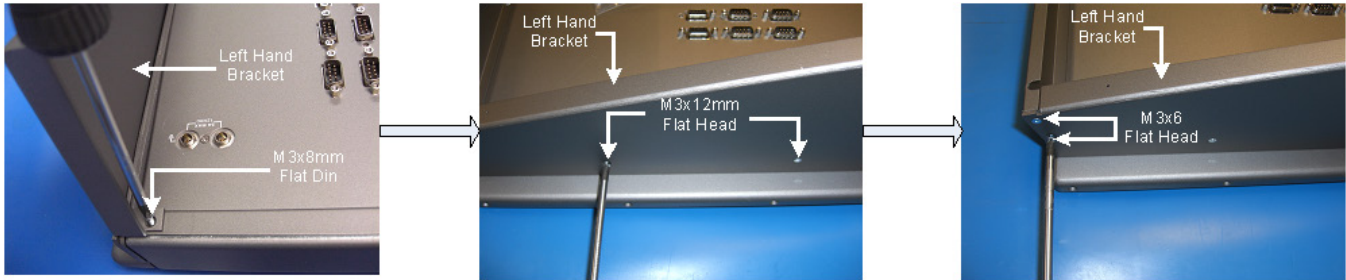


Figure 5-6: Bracket Assembly

The last step is to place the rubber feeds (two on each side). Make sure they are centered with the holes provided (see Figure 5-7).

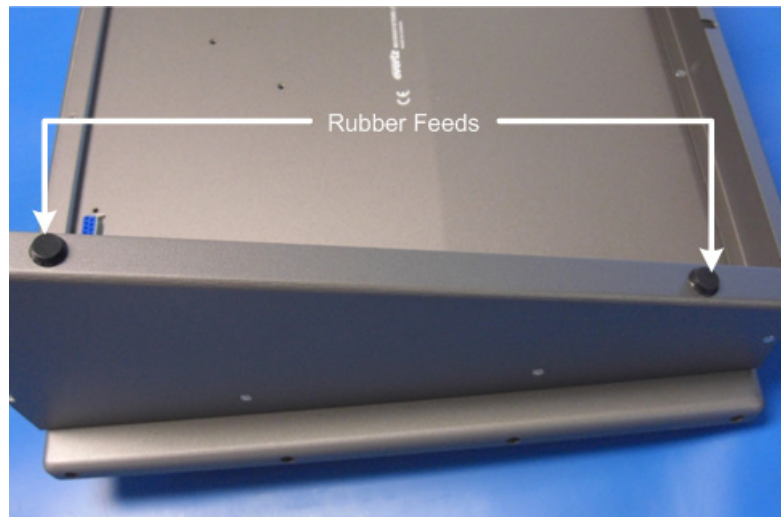


Figure 5-7: Rubber Feeds

Figure 5-8 shows the fully assembled unit.



Figure 5-8: Full Assembly

This page left intentionally blank