

TABLE OF CONTENTS

1. OVERVIEW	1
2. INSTALLATION	2
2.1. AUDIO CONNECTIONS	2
3. SPECIFICATIONS.....	3
3.1. BALANCED AES INPUT.....	3
3.2. BALANCED AES OUTPUTS	3
3.3. ELECTRICAL	3
3.4. PHYSICAL.....	3
4. PIN ASSIGNMENTS.....	4
5. STATUS INDICATORS	5
6. LOCATION OF JUMPERS.....	6
6.1. SELECTING WHETHER LOCAL FAULTS WILL BE MONITORED BY THE GLOBAL FRAME STATUS	6
6.2. TERMINATION JUMPER	6
Figures	
Figure 1-1: 7700DA-AES-RJ Functional Block Diagram	1
Figure 2-1: 7700DA-AES-RJ Rear IO Modules.....	2
Figure 4-1: RJ-45 Connector Pin Positions	4
Figure 5-1: LED Status Indicators	5
Figure 6-1: Jumper Locations.....	6
Tables	
Table 4-1: RJ-45 Connector Pin Assignments	4

REVISION HISTORY

<u>REVISION</u>	<u>DESCRIPTION</u>	<u>DATE</u>
1.0	First version	Feb 07
1.1	General format clean up	Sept 09

Information contained in this manual is believed to be accurate and reliable. However, Evertz assumes no responsibility for the use thereof nor for the rights of third parties, which may be affected in any way by the use thereof. Any representations in this document concerning performance of Evertz products are for informational use only and are not warranties of future performance, either expressed or implied. The only warranty offered by Evertz in relation to this product is the Evertz standard limited warranty, stated in the sales contract or order confirmation form.

Although every attempt has been made to accurately describe the features, installation and operation of this product in this manual, no warranty is granted nor liability assumed in relation to any errors or omissions unless specifically undertaken in the Evertz sales contract or order confirmation. Information contained in this manual is periodically updated and changes will be incorporated into subsequent editions. If you encounter an error, please notify Evertz Customer Service department. Evertz reserves the right, without notice or liability, to make changes in equipment design or specifications.

1. OVERVIEW

The 7700DA-AES-RJ is an eight-output distribution amplifier with auto equalizing inputs and reclocking for 110Ω balanced AES signals. The DA will automatically equalize a single balanced AES signal delivered over standard CAT5 or CAT6 type cables with RJ-45 head connector. The DA will reclock the data with sampling frequencies of 32 kHz, 44.1 kHz, 48 kHz and 96 kHz. The 7700DA-AES-RJ modules are equipped with card edge LED indicators that are used to provide quick and accurate assessment of the incoming signal integrity.

The 7700DA-AES-RJ modules occupy one card slot and can be housed in a 1RU frame which will hold up to 3 modules, a 3RU frame which will hold up to 15 modules, a 350FR portable frame which will hold up to 7 modules or a standalone enclosure that will hold 1 module.

Features:

- AES audio on 110Ω twisted pair CAT5e cable
- Transformer coupled 110Ω balanced input (selectable Hi-Z)
- Data reclocking provides jitter reduction
- Automatic equalization
- Equalization and reclocking provides extended cable length compensation
- Eight 110Ω balanced outputs
- Error LED indication for input PLL out of lock, parity error or bi-phase coding error

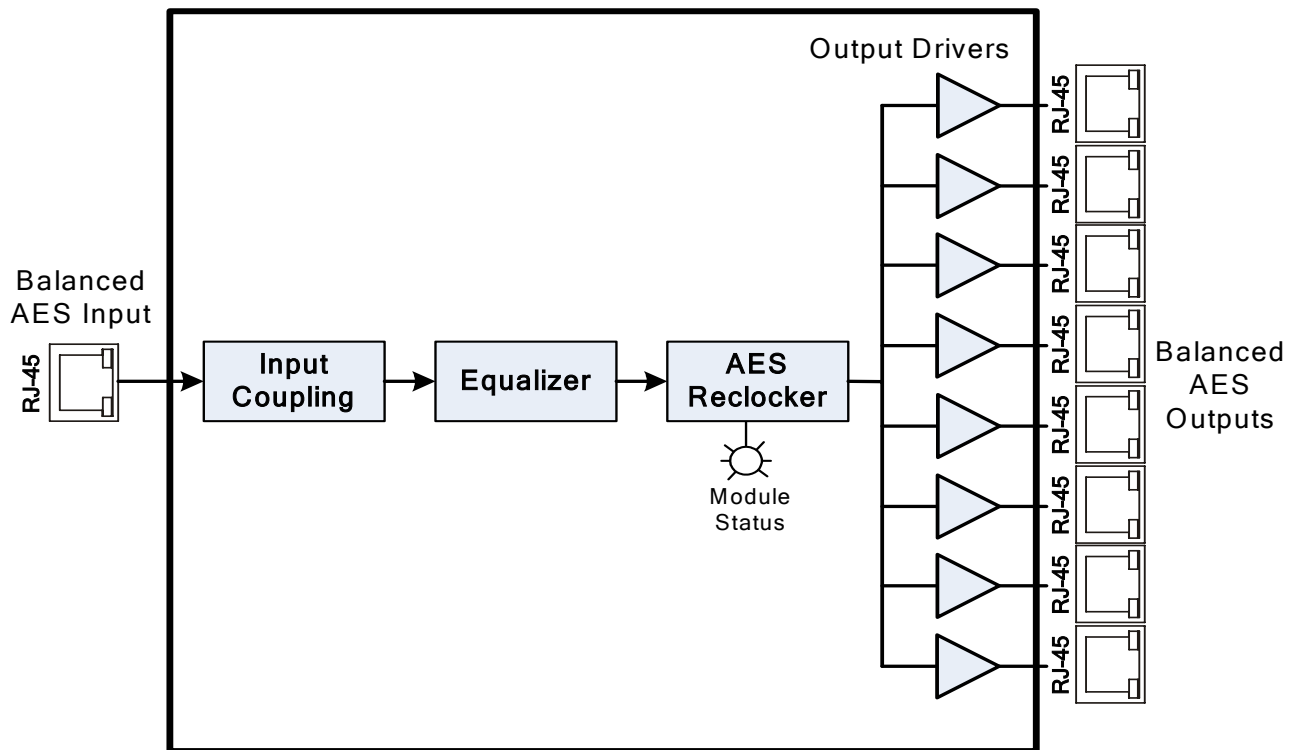


Figure 1-1: 7700DA-AES-RJ Functional Block Diagram

2. INSTALLATION

The 7700DA-AES-RJ comes with a companion rear plate that has 1 AES input RJ-45 connection and 8 AES output RJ-45 connections. For information on mounting the rear plate and inserting the module into the frame see section 3 of the 7700FR chapter.

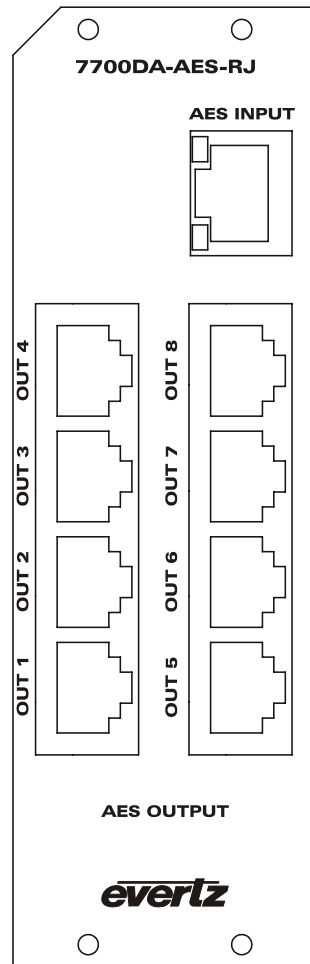


Figure 2-1: 7700DA-AES-RJ Rear IO Modules

2.1. AUDIO CONNECTIONS

BALANCED AES INPUT:

The single balanced AES input can be found towards the upper section of the rear plate. This input connector is an RJ-45 female connector. For pin out assignments refer to section 4. The termination jumper, located near the rear of the module, determines whether the input signal will be high impedance or terminated with 110Ω. Refer to Figure 6-1 for the location of the termination jumper.

BALANCED AES OUTPUTS:

There are eight balanced AES reclocked outputs compatible with SMPTE 276M.

3. SPECIFICATIONS

3.1. BALANCED AES INPUT

Standard:	AES3-1992
Number of Inputs:	1
Connector:	RJ-45
Input Level:	2 to 7V p-p
Coupling:	Transformer
Input Impedance:	110 Ω or Hi-Z (2.5k)
Equalization:	Automatic to 300m with CAT5 (or equivalent) @ 48kHz AES signal
Return Loss:	> 15dB 100kHz to 6MHz
Sampling Frequency:	32kHz, 44.1kHz, 48kHz, and 96kHz

3.2. BALANCED AES OUTPUTS

Number of Outputs:	8 reclocked
Connector:	RJ-45
Output Level:	5V p-p
Output Impedance:	110 Ω
Return Loss:	30dB 100kHz to 6MHz

3.3. ELECTRICAL

Voltage:	+12 VDC
Safety:	ETL Listed, complies with EU low voltage directive
Power:	< 2.5 Watts
EMI/RFI:	Complies with FCC Part 15, Class A EU EMC Directive

3.4. PHYSICAL

Number of slots:	2
-------------------------	---

4. PIN ASSIGNMENTS

The pin assignments for the audio connections are defined in Table 4-1. Also refer to Figure 4-1 for the RJ-45 pin positions.

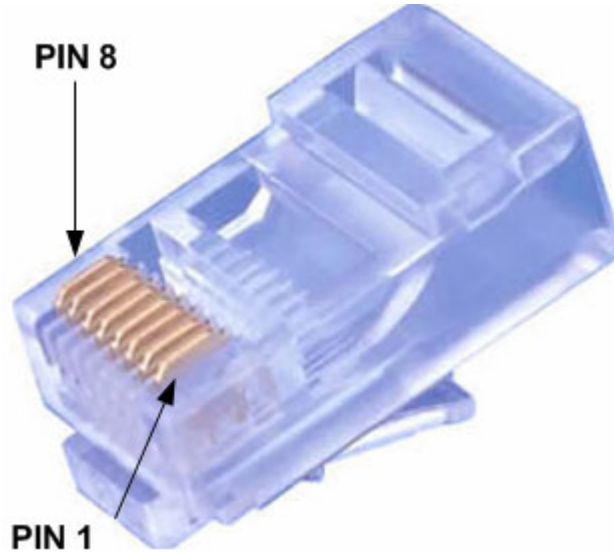


Figure 4-1: RJ-45 Connector Pin Positions

PIN #	Connection
1	AES+
2	AES-
3	No Connect
4	GND
5	No Connect
6	No Connect
7	No Connect
8	No Connect

Table 4-1: RJ-45 Connector Pin Assignments

5. STATUS INDICATORS

The 7700DA-AES-RJ modules have three status LED indicators to show operational status of the card at a glance. Two status LEDs can be found on the front edge of the circuit board and a third LED can be found on the input connector located on the rear plate (refer to Figure 5-1 and Figure 6-1).

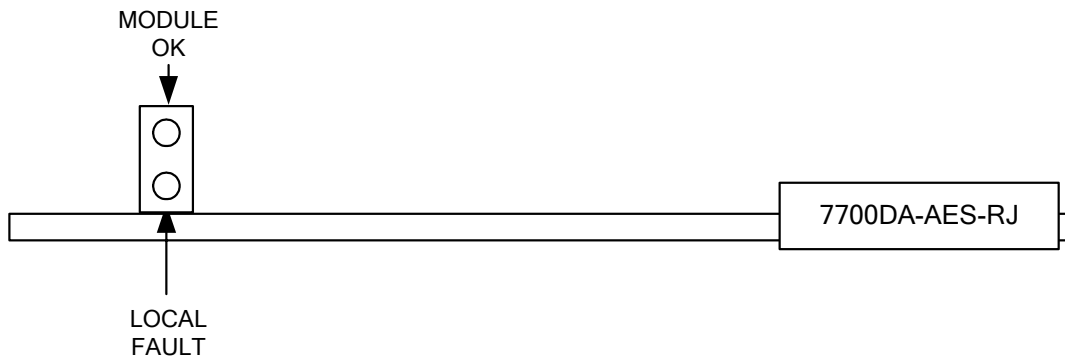


Figure 5-1: LED Status Indicators

The two large LEDs on the front of the circuit board indicate the general health of the module.

LOCAL FAULT: This red LED indicates poor module health and will be ON when a valid AES input is not detected. The **LOCAL FAULT** indication can also be reported to the frame through the **FRAME STATUS** jumper J1 (refer to Figure 6-1).

MODULE OK: This green LED indicates good module health. It will be ON when a valid AES signal has been detected.

VALID AES: This LED is found on the input connector located on the rear plate of the module. If a valid AES signal is detected this LED will be ON, otherwise it will remain OFF.



There is also a yellow LED on the input connector. This LED is not connected to any status circuitry and will always remain OFF.

6. LOCATION OF JUMPERS

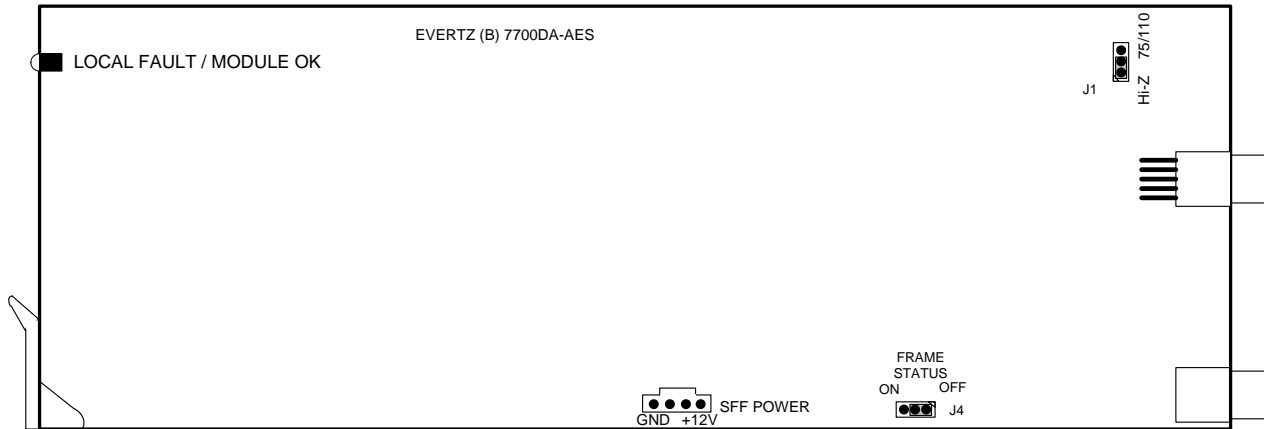


Figure 6-1: Jumper Locations

6.1. SELECTING WHETHER LOCAL FAULTS WILL BE MONITORED BY THE GLOBAL FRAME STATUS

The FRAME STATUS jumper J4, located near the rear of the module, determines whether local faults (as shown by the Local Fault indicator) will be connected to the 7700FR frame's global status bus.

FRAME STATUS: To monitor faults on this module with the frame status indicators (on the power supply's FRAME STATUS LEDs and on the Frame's Fault Tally output) install this jumper in the ON position.

When this jumper is installed in the Off position local faults on this module will not be monitored.

6.2. TERMINATION JUMPER

The TERMINATION jumper J1, located at the rear of the module, determines whether the input signal will be terminated or not.

When set in the "75/110" position, (default) the input impedance is set to 110Ω. Use this position when the cable stops at this card. It will provide the proper impedance to eliminate electrical reflections.

When set to "Hi-Z" the input will be high impedance. Use this position when the signal does NOT stop at this card.